

Wheel Lock Installation Instructions for U8440 00400

FMVSS 110 Compliance Information - 0.46 lb. (Product Weight)

Application: Alloy Wheels Only

Note: Wheel locks must not be applied to steel wheels or the temporary spare tire.

Installation:

1. Remove one lug nut from each wheel.
2. By hand, install one wheel lock on each wheel.
3. Take the wheel lock key supplied in the wheel lock set and place it on top of the wheel lock, turning until the key and wheel lock patterns engage. Using a torque wrench and 21 mm hex socket, place the socket on the key, and while applying inward pressure, tighten to the factory torque specification.

**Caution:** Use of an impact wrench may cause permanent damage to the lock and key. If in doubt about lock application, ask your dealer for assistance.

4. Store the wheel lock key in the clamshell package along with the lug nuts removed in step 1.
5. Place the important notice card, ID/registration card and order form/envelope in the plastic zip bag provided in the kit and place it in the vehicle glove compartment.

Removal

1. Locate the clamshell package in the vehicle. Open the tabs and remove the wheel lock key.
2. Using the wheel lock key and your lug wrench or 21mm hex socket, place the key on top of the wheel lock and turn until the pattern of the key and wheel lock engage. Place the lug nut wrench or socket on the key and while applying inward pressure on the key, loosen the wheel lock.
3. To reinstall wheel locks see installation procedure above.

Note: For ease of installation and removal, the wheel lock should always be the last lug nut tightened and the first one loosened when removing or installing the wheels.