

Vehicle Model Tucson

Model Year 2016~ Part No. <u>D3045 ADU</u>01

Language English Rev. Date 3/3/2017

Accessory: Illuminated Door Scuff Plates

Difficulty: B

Note: Difficulty stated above reflects the minimum level of expertise required to install the accessory:

- (A) Customer
- (B) Dealer Technician
- (C) Master Technician or Specialist

Denotes personal protective equipment (PPEs) that

may be required for a step. Examples of safety

equipment icons noted below:

Instructional Symbols / Definitions



Denotes warnings that may lead to serious physical injury or vehicle damage



Denotes cautions to be taken to avoid physical injury or electronic component damage



Denotes cautions to be taken to avoid vehicle and component damage



Denotes quality processes to be checked prior to moving to the next step



Denotes specific tools that are necessary to complete a step



Denotes important information to be reviewed during the step









 


Hearing Protection

 
Basic Required Tools



Removal Tool









Part Weight (Gross)




FMVSS 110 Compliance Information

All dealers must determine if the weight they have added in the form of all options or accessories, when added to the weight of all Port/Dealer Installed options or accessories, exceeds the lesser of 1.5% of GVWR or 100 lbs. If the additional weight does exceed the lesser of the indicated thresholds, a "Load Carrying Capacity Reduced" label must be installed. A black, fine-point, indelible marker must be used to write by hand onto the label, the reduced carrying capacity in kilograms or pounds, which is the total weight of all added options and accessories.

Load Label Part Number: NP070 - 09003


Notes to the installer:


- Read the entire Installation Instructions prior to beginning the installation of the part.
- Make sure the vehicle is completely clean and dry in the area(s) the part is to be installed.
- 3 Ensure the vehicle is properly protected in the area(s) that the accessory is to be installed.
- NEVER place tools on painted surfaces, seating surfaces, dash pad, console or floor carpet/mats.
- $Always\ wear\ appropriate\ personal\ protective\ equipment,\ including\ gloves,\ safety\ glasses,\ etc.,\ when\ required.$
- For PIO installations, only use the provided magnetic templates. Do <u>NOT</u> use the included paper templates.

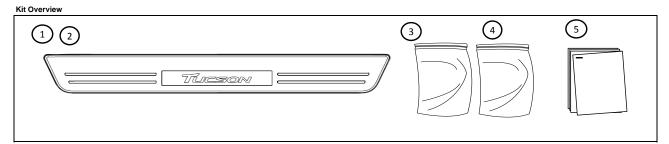


No.	Qty	Description
1	1	Scuff Plate R, Illuminated
2	1	Scuff Plate L, Illuminated
3	1	Hardware Bag, Battery
4	1	Hardware Bag, Magnets
5	1	Installation Instructions

   
Hardware Kit Contents











Hardware Total 8

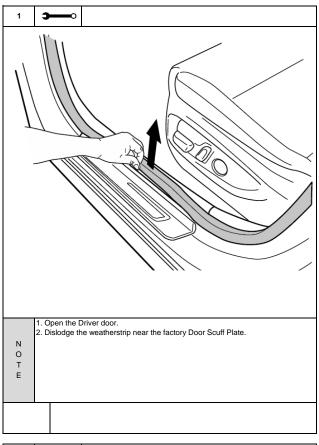


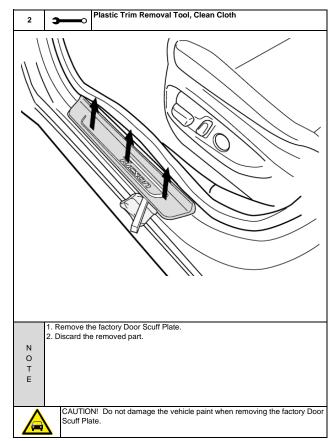


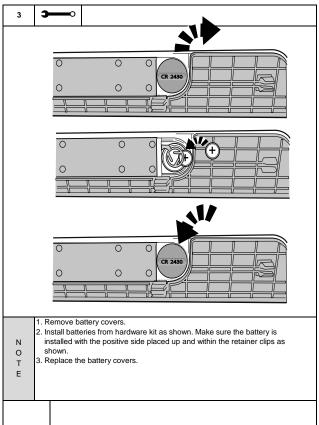


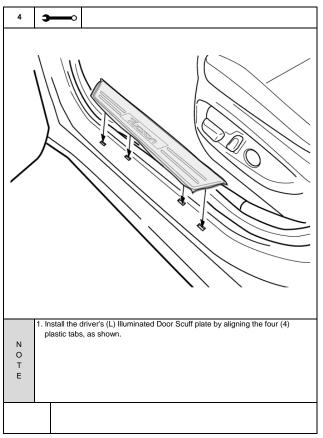


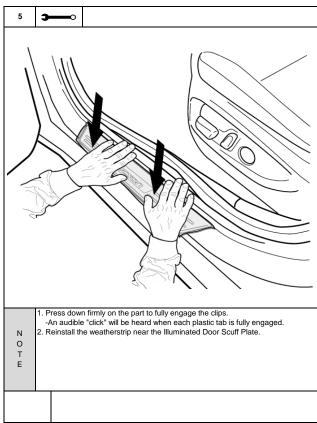

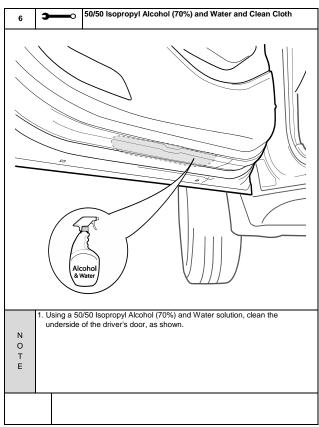

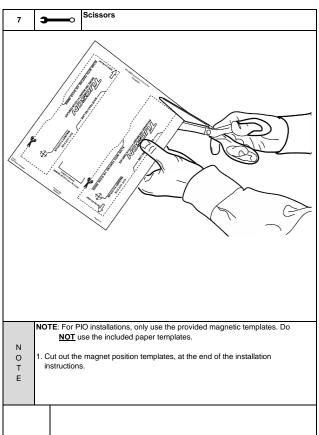

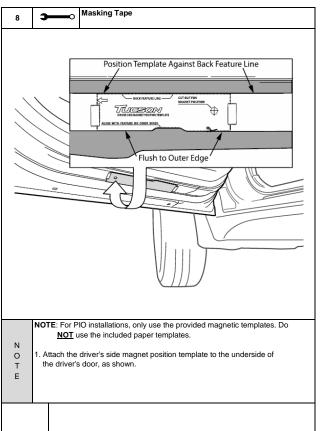

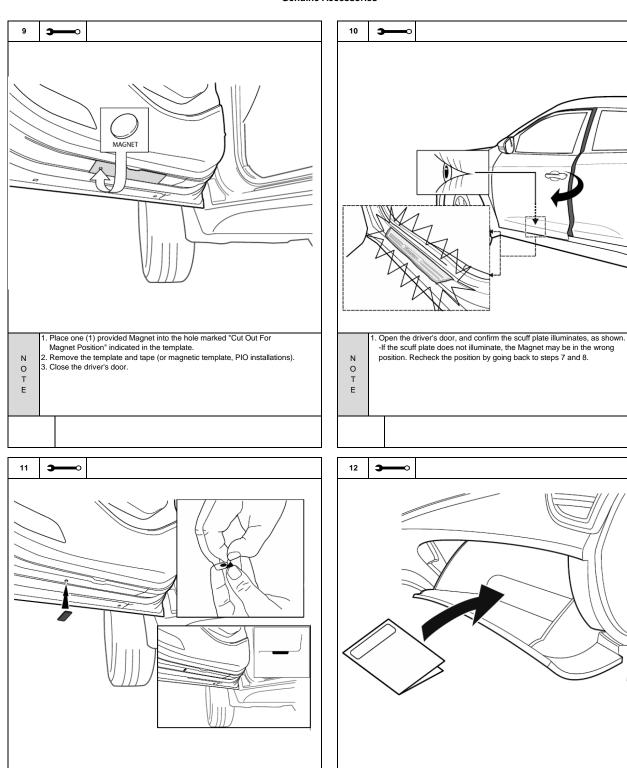

Make sure to not disturb the position of the Magnet when installing the Magnet Holder.

3. Press the Magnet Holder firmly to ensure proper adhesion to the

1. Remove the adhesive liner from one (1) Magnet Holder.

5. Repeat steps 1 through 11 for passenger side of vehicle.

Position the Magnet Holder over the magnet.

vehicle door frame.

Close the driver's door.

Ν

0

Ν

0

residue.

. Perform the Function Check and Visual Check at the end of the installation


instructions for both Driver and Passenger Illuminated Scuff Plates.


Place the Installation Instructions, containing the Battery Replacement


Procedure, in the glove box.


Remove and discard the protective film from each Illuminated Scuff Plate.

Using a 50/50 Isopropyl Alcohol (70%) and Water solution, clean the Driver and Passenger Illuminated Scuff Plates to remove any dirt or tape

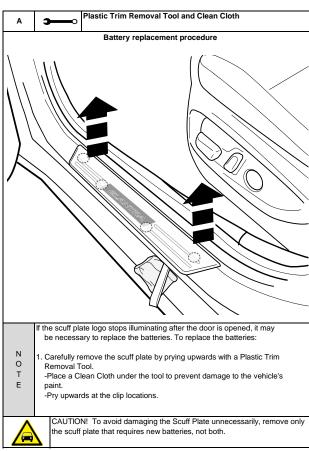

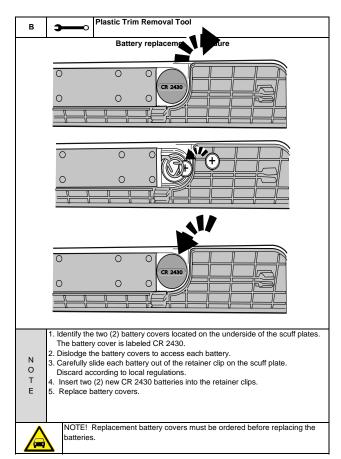

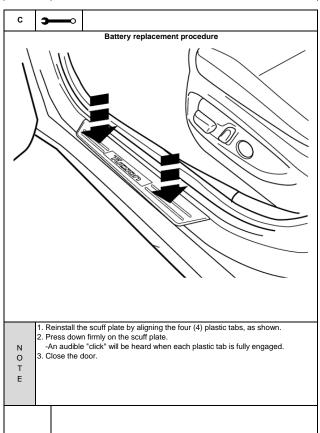

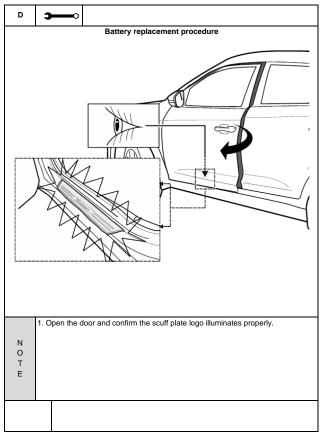

Visual Check Item to be Checked Result Ensure the scuff plates are fully secured to the vehicle. Scuff plates are not loose, or mis-set. Ensure the scuff plates are not damaged. Scuff plates function properly, and have no cosmetic defects. Function Check Item to be Checked Result The scuff plate illuminates properly when the door opens. The scuff plate light does not blink. Each scuff plate illuminates when the door is opened. Troubleshooting Issue / Concern Items to be Checked The scuff plate does not illuminate properly. Check that the magnet is still properly adhered to the vehicle. Check that the magnet is properly aligned, by using a template. Check that the batteries are not fully discharged.

