


- If applicable, scan the barcode label located on the accessory part or packaging prior to installing, to register the part. If this accessory is installed as a replacement, register the removal of the old part before registering the new part. Old and new parts will have different barcode data, and the old registration cannot be reused.
- 3) Make sure the vehicle is completely clean and dry in the area(s) the part is to be installed.
- 4) Ensure the vehicle is properly protected in the area(s) that the accessory is to be installed.
- 5) NEVER place tools on painted surfaces, seating surfaces, dash pad, console or floor carpet/mats.
- 6) Always wear appropriate personal protective equipment, including gloves, safety glasses, etc., when required.
- 7) Record radio presets prior to disconnecting battery power, if needed.
- 8) Ensure the transportation fuse is set to "ON" before starting the install.
- 9) Roll down the driver's window and adjust the power seats (if applicable) prior to disconnecting battery power, if needed.
- 10) Factory wire harness colors are subject to change. Please use the specified pin number in the harness connector to
- identify the correct wire for T-Tap installation. If two wires are present in the pin, it does not matter which wire the T-Tap is installed on.

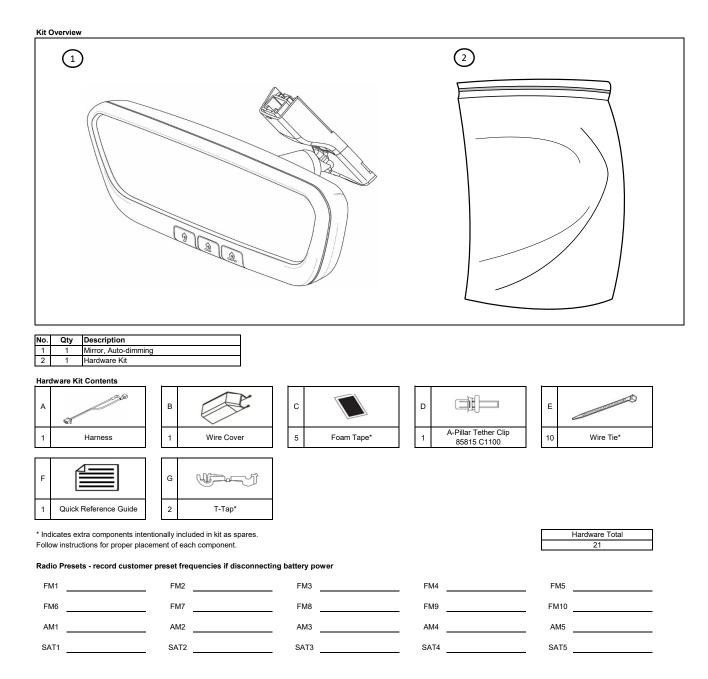







Special Instructions


Electrical Connection Procedure

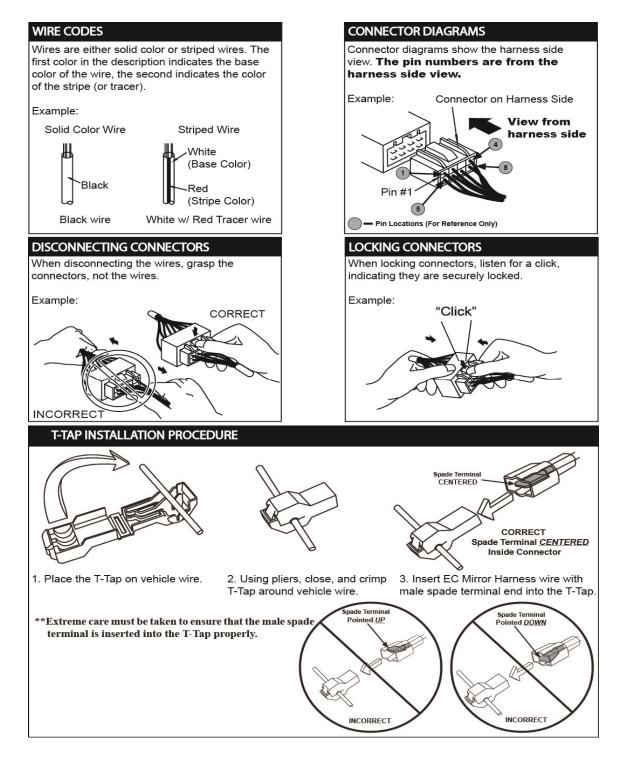




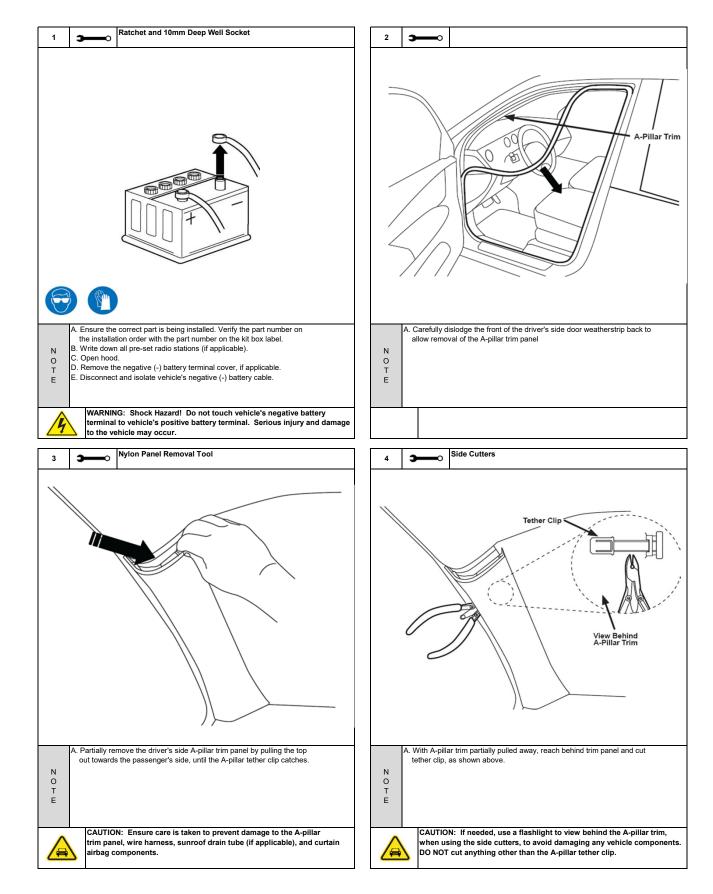




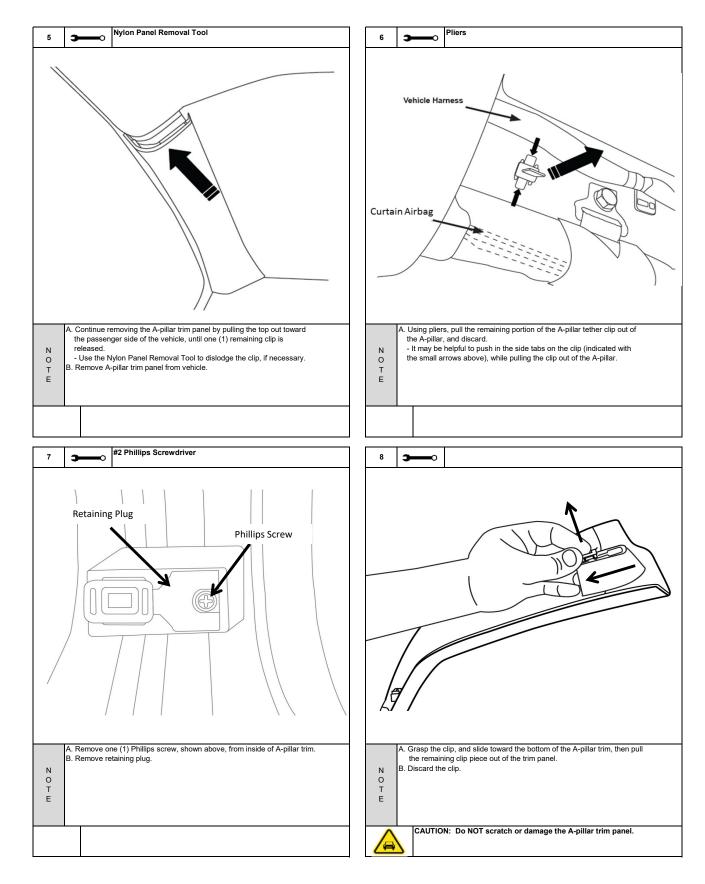




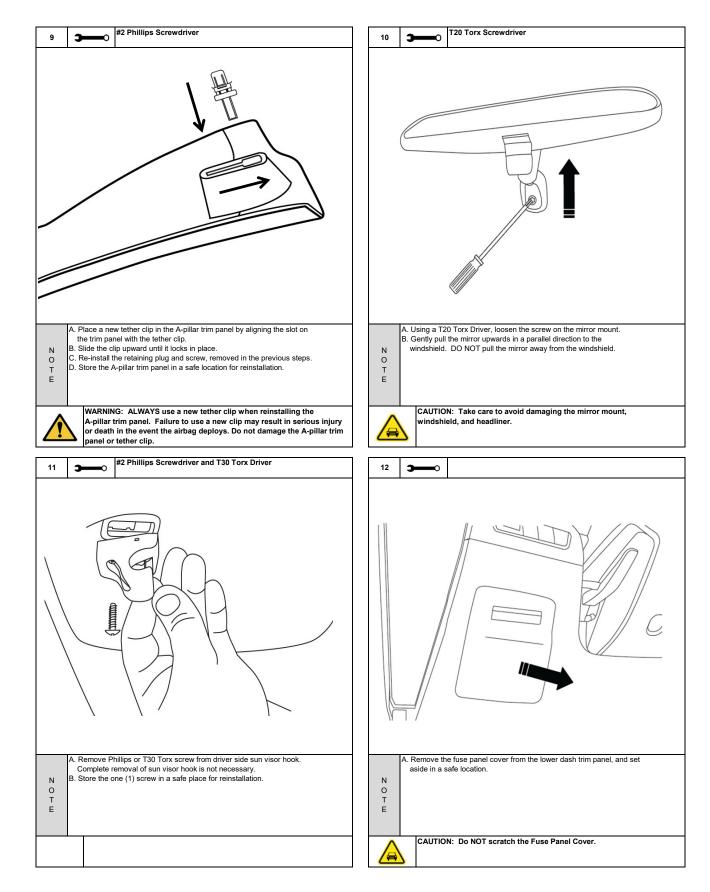




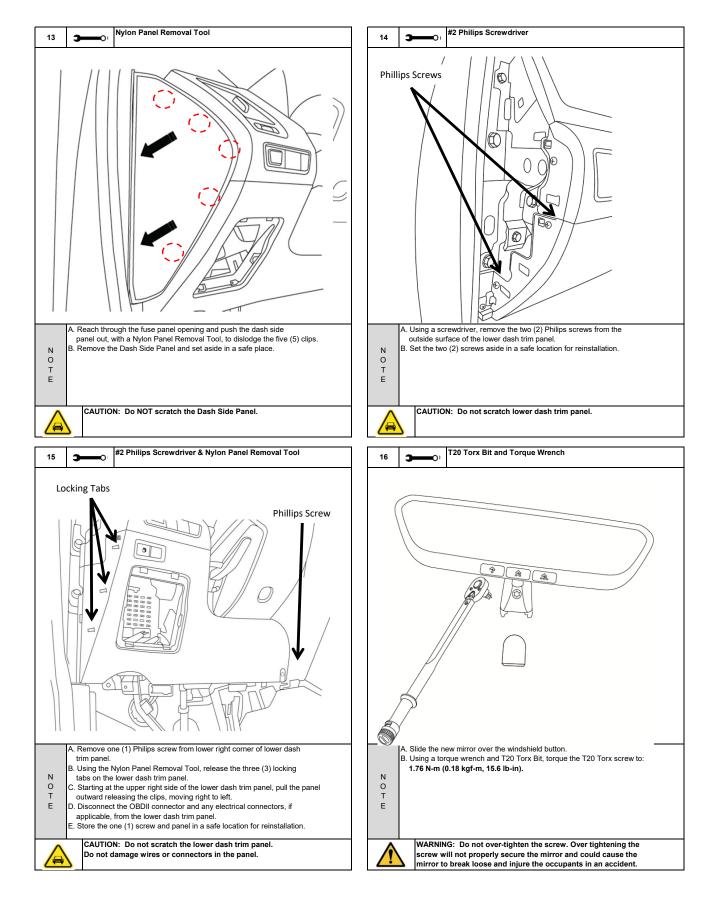




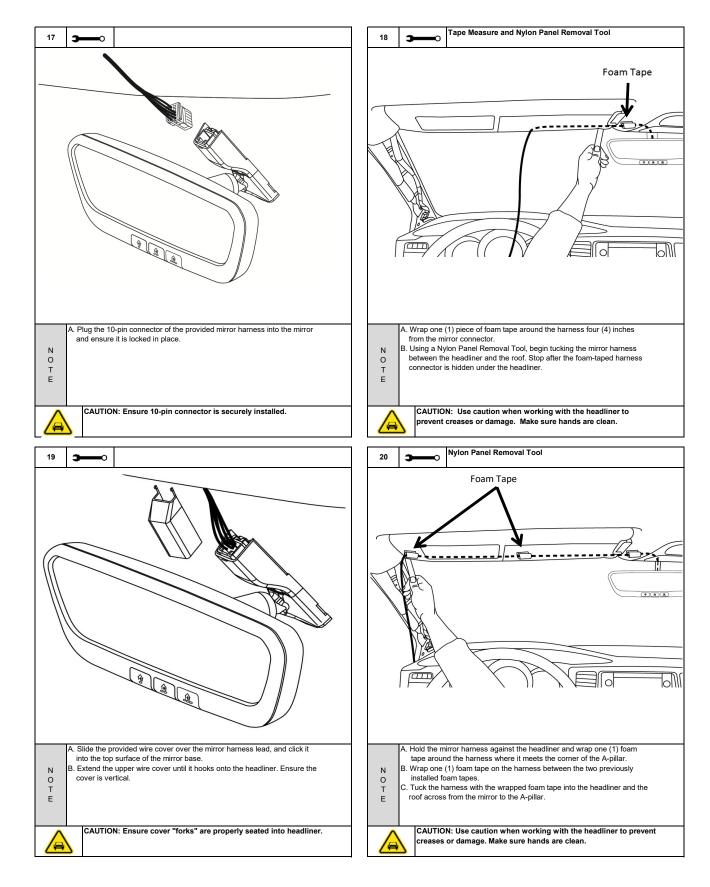




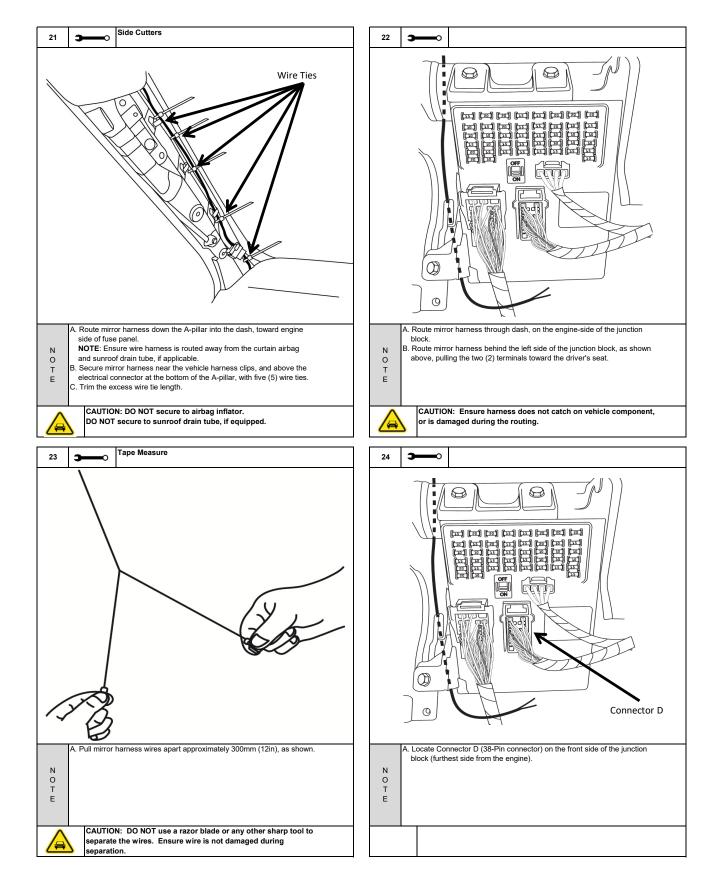




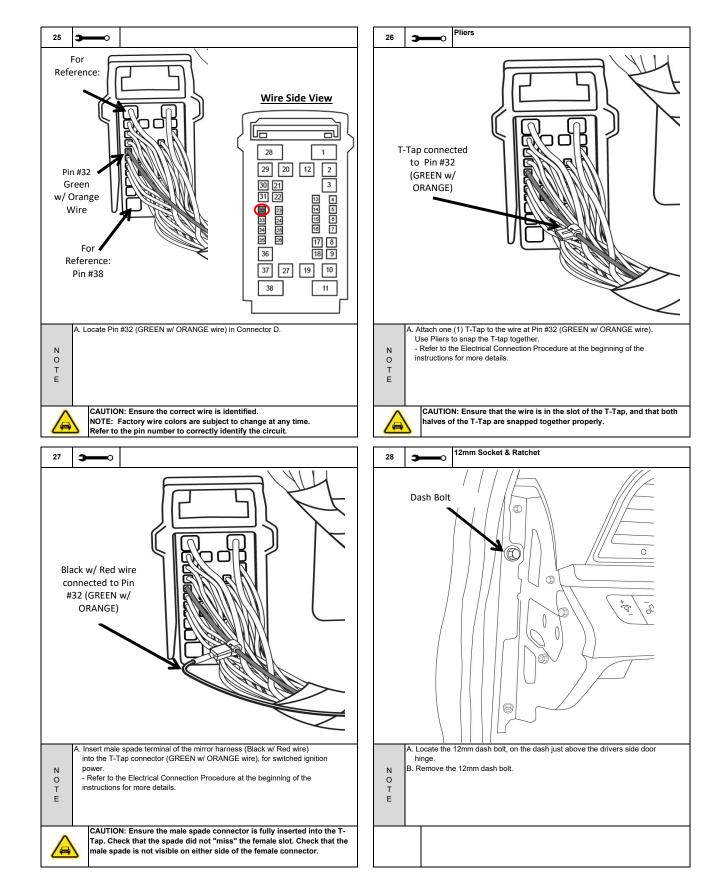




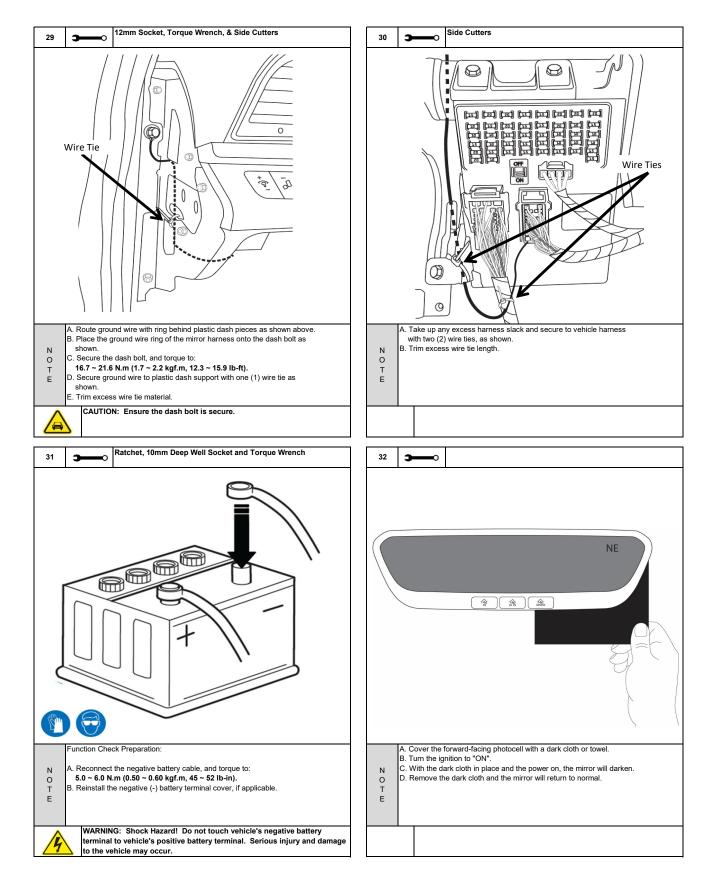



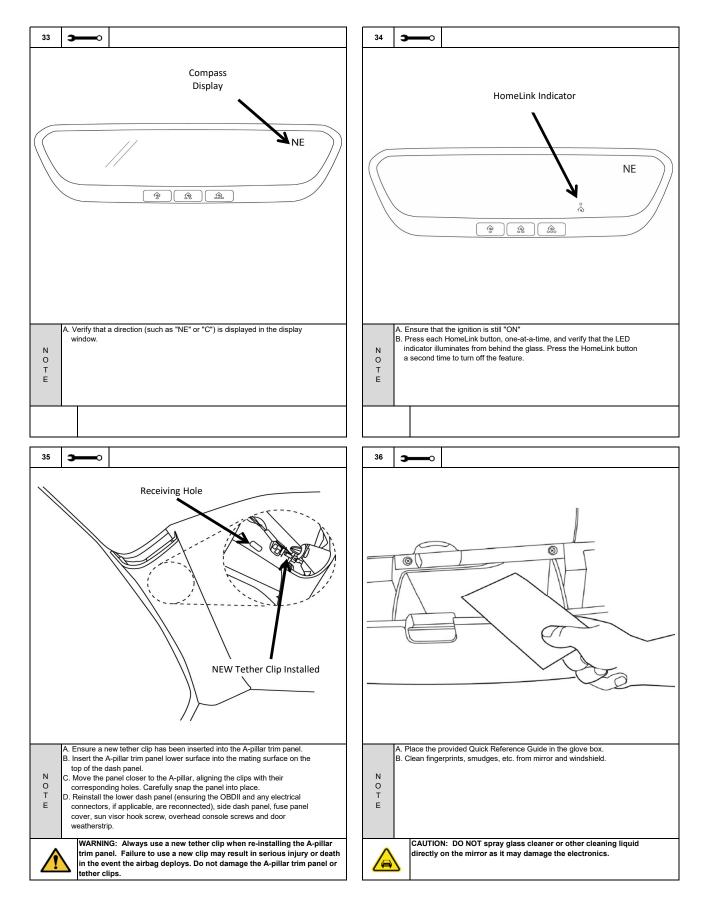



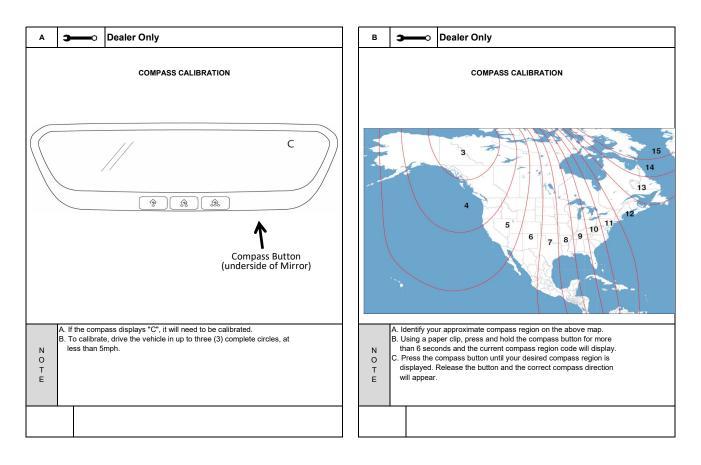



Visual Check							
	Item to be Checked	Result					
	Negative battery terminal re-tightened and reinstalled terminal cover, if applicable	Battery cable is correctly fastened to the negative terminal. Nut is properly torqued. Battery terminal cover, if applicable, has been reinstalled.					
	Mirror Torx screw replaced and re-tightened	Screw is tightened and properly torqued.					
	Mirror Harness	Mirror harness connectors are properly connected. T-Tap spade connector is properly seated.					
		Harness is tucked into the headliner without causing a bulge or interference.					
	Sun visor hook	Hook is properly secured in place, and screw is tightened.					
	A-pillar trim panel	Panel is securely in place. Ensure A-pillar tether clip is properly installed and seated in the A-pillar correctly.					
	Dash bolt	Dash bolt is tightened and properly torqued for harness ground.					
	Lower dash trim panel	Panel is securely in place. All connectors attached are properly re-connected.					
	Side dash trim panel	Panel is securely in place.					
	Fuse panel access cover	Panel is securely in place.					
	Door weatherstrip	Weatherstrip is properly reinstalled, and not wrinkled.					


Troubleshooting

Issue / Concern		Items to be Checked	
Mirror does not power up		Confirm ground circuit connector is properly attached and locked in place. -Check that mirror harness is properly connected at mirror.	
		-Check that GND ring terminal is seated solidly against vehicle body at dash bolt. -Check that wire is not damaged.	
		Confirm ignition-switched power circuit is properly connected. Circuit should NOT have power with ignition in "OFF", but should have 12V power when ignition is switched to "ON".	
	↑ (-Check that mirror harness is properly connected at mirrorCheck that T-Tap is connected to the proper wireCheck that T-Tap is fully crimpedCheck that male spade is correctly inserted in T-TapCheck that wire is not damaged.	
Homelink does not work (House indicator does not illumir	nate)	-Check that the vehicle ignition is in the ON position. -Check that T-Tap is connected to the proper wire. -Check that T-Tap is fully crimped. -Check that male spade is correctly inserted in T-Tap. -Check that GND ring terminal is seated solidly against vehicle body at dash bolt. -Check vehicle Module 2, 10 amp fuse	
Homelink does not work (House indicator does not illumir	nate)	-Replace the mirror.	
Compass does not illuminate		-Check that the vehicle ignition is in the ON positionCheck that T-Tap is connected to the proper wireCheck that T-Tap is fully crimpedCheck that male spade is correctly inserted in T-TapCheck that GND ring terminal is seated solidly against vehicle body at dash boltCheck vehicle Module 2, 10 amp fuse	
Auto-dimming function does not	work properly	-Check that the vehicle ignition is in the ON position. -Check that T-Tap is connected to the proper wire. -Check that T-Tap is fully crimped. -Check that male spade is correctly inserted in T-Tap. -Check that GND ring terminal is seated solidly against vehicle body at dash bolt. -Check Module 2 fuse.	
Auto-dimming function does not	work properly	-Replace the mirror.	



Smart Junction Box

Wire Side View

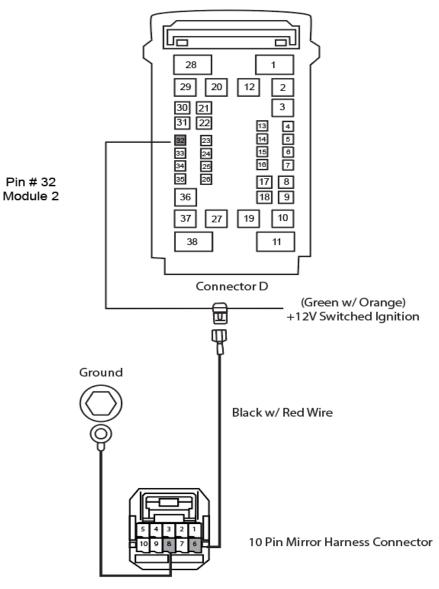

No	Gauge	Color	Function	Circuit	Fuse
1					
2					
3					
4					
5					
6	22	BLK w/ RED	IG (switched power)	Power Dist.	Module 2 (10 amp)
7					
8	22	BLK	GND		
9					
10					

