

### Notes to the installer:

- 1) Read the entire Installation Instructions prior to beginning the installation of the part.
- 2) Make sure the vehicle is completely clean and dry in the area(s) the part is to be installed.
- 3) Ensure the vehicle is properly protected in the area(s) that the accessory is to be installed.
- 4) NEVER place tools on painted surfaces, seating surfaces, dash pad, console or floor carpet/mats.
- 5) Always wear appropriate personal protective equipment, including gloves, safety glasses, etc., when required.
- 6) Record radio presets prior to disconnecting battery power, if needed.
- 7) Roll down the driver's window and adjust the power seats (if applicable) prior to disconnecting battery power, if needed.



No.	Qty	Description	No.	Qty	Description
1	2	Frt Lamp	5	1	LH Front Lamp Template
2	1	Switch	6	1	RH Front Lamp Template
3	1	ECU	7	1	Switch Template
4	1	Wiring Assy	8	1	Hardware Kit

### Hardware Kit Contents

А		в			с		D	<u> </u>	E	<u> </u>
4	Large Foam Pad (50x150mm)*	4	Medium Foam Pad (50x75mm)**		5	Small Foam Pad (30x140mm)**	4	Short Cable Tie	2	Long Cable Tie
				-			-			•

\* Indicates extra components intentionally included in kit as spares. \*\* Not needed for this application.

Follow instructions for proper placement of each component.

### Radio Presets - record customer preset frequencies if disconnecting battery power

FM1	FM2	FM3	FM4	FM5	
FM6	FM7	FM8	FM9	FM10	
AM1	AM2	AM3	AM4	AM5	
SAT1	SAT2	SAT3	SAT4	SAT5	

Hardware Total

19

### Special Instructions



# DO NOT PULL ON WIRES.

















### Function Check

	Item to be Checked		Result				
	Ignition Key ON > Engine OFF: Press the Interior Light Switch to turn on the LEDs.		Interior Light Kit LEDs illuminate.				
	Press and hold the Interior Light Switch for 0.5 seconds		Turns off the LEDs				
Troubleshoo	bting						
Issue / Concern			Items to be Checked				
	One of the LEDs does not turn on.		→ Check the connection of the LED connector that does not turn on. → Check the connector at the ECU and ensure it is locked into switch.				
	None of the LEDs turn on.		<ul> <li>→ Check the connectior at the ECU.</li> <li>→ Check the connection of the Switch connector.</li> <li>→ Check the connection of the Inline T-harness at the AUX / USB Panel.</li> <li>→ Check the 10A Fuse in the vehicle's illumination circuit.</li> <li>→ Replace the fuse if blown.</li> </ul>				

