

Genuine Accessories



Vehicle Model Multiple
Part No. 00048 ADU01

Accessory Applique, Door Handle Pocket
Difficulty (B)

• Accessory Installation

Note: Difficulty stated above reflects the minimum level of expertise required to install the accessory.
(A) Customer (B) Dealer Technician (C) Master Technician

Instructional Symbols / Definitions

| | | | | | |
|--|---|-------------|---|--|--|
| | Denotes warnings that may lead to serious physical injury or vehicle damage. | | Denotes quality processes to be checked prior to moving to the next step. | Denotes safety equipment required to be used such as a mask, goggles, rubber gloves, and hearing protection. | |
| | Denotes cautions to be taken to avoid physical injury or electronic component damage. | | Denotes specific tools that are necessary to complete the step. | | |
| | Denotes cautions to be taken to avoid vehicle and component damage. | NOTE | Denotes instructional steps necessary to complete the process. | | |

Basic Required Hand Tools

| | | |
|---|------------------|---------------------------------------|
| | | |
| Alcohol, Shampoo & Water (SLIP Mixture) | Microfiber Cloth | 50/50 Isopropyl Alcohol (70%) & Water |

| | | |
|------------------------|---|---|
| FMVSS 110 | | All dealers must determine if the weight they have added in the form of all options or accessories, when added to the weight of all Port Installed options or accessories, exceeds the lesser of 1.5% of GVWR or 100 lbs. If the additional weight does exceed the lesser of the indicated thresholds, a "Load Carrying Capacity Reduced" label must be installed. A black, fine-point, indelible marker must be used to write by hand onto the label, the reduced carrying capacity in kilograms or pounds, which is the total weight of all added options and accessories. Load Label Part Number: NP070-09003 |
| Compliance Information | | |
| 2pc | 0.113 oz 3.2 grams | |
| 4pc | 0.226 oz 6.4 grams (Gross Weight) | |

Notes to the Installer :

1. Read the entire Installation Instructions prior to beginning the installation of the part.
2. Make sure the vehicle is completely clean and dry in the area(s) the part is to be installed.
3. Ensure the vehicle is properly protected in the area(s) that the accessory is to be installed.
4. NEVER place tools on painted surfaces, seating surfaces, dash pad, console or floor carpet/mats.
5. Always wear appropriate personal protective equipment, including gloves, safety glasses, etc., when required.
6. After installation, do not wash vehicle for 24 hours.

Preparation - Before Installation :

1. Wetting Agents


Alcohol, Water & Shampoo: Mix 8oz Alcohol (70% isopropyl), 8oz of water, and 1ml of baby shampoo in a trigger type spray bottle marked "Slip". **Note:** The above listed solution has been formulated for use where ambient and vehicle surface temperature are within a range of 65°F to 90°F. If temperatures are outside this range, make incremental adjustments to the solution as necessary.

Alcohol & Water solution: Add 50/50 mix of isopropyl alcohol (70%) and water in a trigger-type spray bottle.

2. This product should be installed with proper installation tools.
3. Install this product while observing all warnings and precautions stated in this instruction booklet.
4. **VERY IMPORTANT:** Thoroughly wash vehicle with soap and water where Door Cup Film will be applied. If paint contaminants are found, refer to Hyundai Technical Service Bulletin 99-99-001 to determine the correct repair procedure.
5. It is recommended that the ambient temperature of the accessory and vehicle be between 65°F to 90°F at the time of installation and for two hours after.
6. Parts storage should be flat at room temperature and in a clean dry place. **Care should be taken to avoid a dusty environment.**
7. Place a large towel or pad on the ground to catch wetting mixture.
8. Make sure you have a clean, flat table/work area to use.

Genuine Accessories

Kit Overview

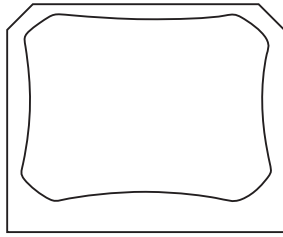




1


| No. | Qty. | Description |
|-----|------|-------------------------------|
| 1 | 5 | Appliques, Door Handle Pocket |


Genuine Accessories

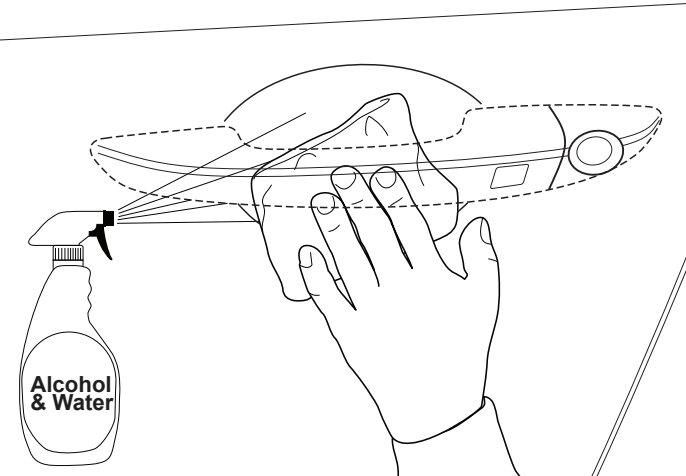
DRIVER'S DOOR SHOWN



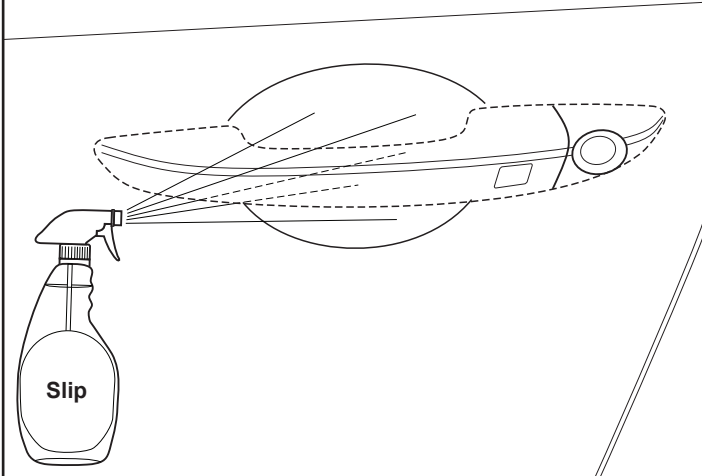


| | | |
|---|--|----------|
|  | Isopropyl Alcohol (70%) & Water and Microfiber Cloth | 1 |
| N O T E | A. Thoroughly clean the door handle cup area using Isopropyl Alcohol (70%) & Water and a Microfiber Cloth. | |
|  | Make sure application area is completely clean and dried. Inspect area for contaminants. If paint contaminants are found, refer to Hyundai Technical Service Bulletin 99-99-001. | |

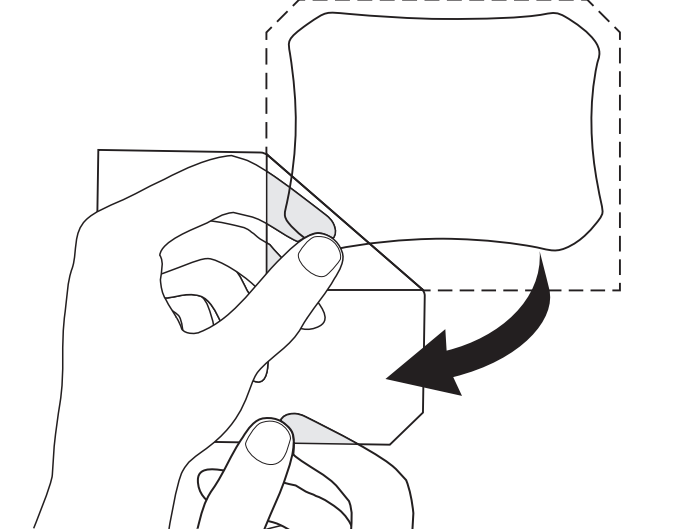


| | | |
|---|---|----------|
|  | Shampoo & Water Mixture in a Spray Bottle | 2 |
| N O T E | A. Lightly spray the door handle cup area that will receive the Applique. | |




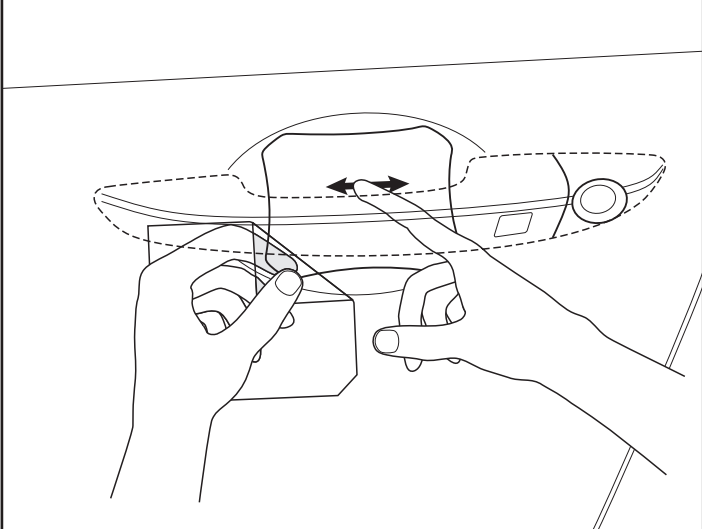

| | | |
|---|--|----------|
|  | | 3 |
| N O T E | A. Wet fingers prior to handling the Applique. B. Hold Applique at bottom corner & fold liner back. | |
|  | Pay special attention to not get any fingerprints or dirt on the Applique. | |




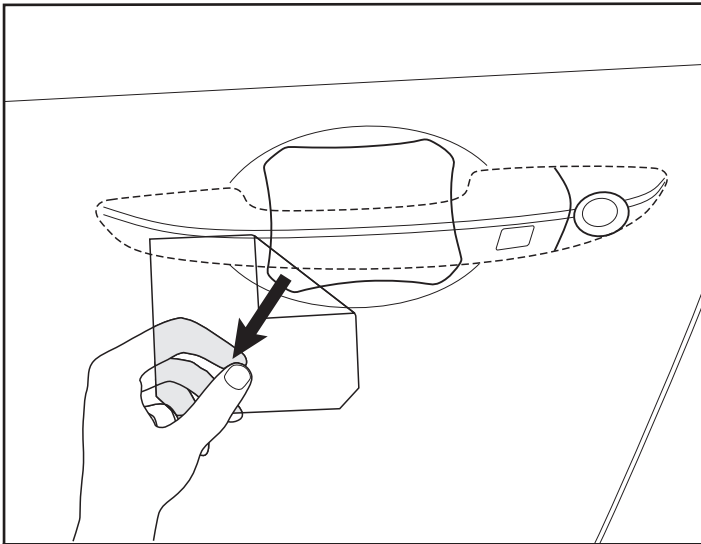

| | | |
|---|--|----------|
|  | | 4 |
| N O T E | A. Carefully bring Applique into position under door handle. B. Using index finger, rub center of the Applique to tack it down. | |

Genuine Accessories



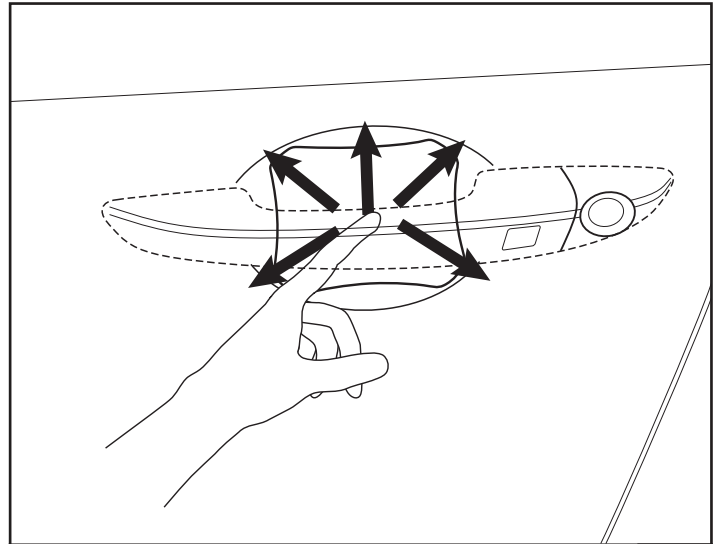



| | | |
|---|--|---|
|  | | 5 |
| N O T E | A. Remove the remaining bottom corner of liner. | |
|  | Pay special attention to not get any fingerprints or dirt on the Applique. | |



| | | |
|---|---|---|
|  | | 6 |
| N O T E | A. Using index finger, press the Applique from the center out using overlapping strokes. B. REPEAT THE PROCESS FOR ALL DOOR HANDLES. | |
|  | Inspect the Door Cup Film and ensure it is securely adhered to surface. | |

**Genuine Accessories
Visual Check**

| Items To Be Checked | | Results Of The Check |
|---|---|--|
|  | Use only the handling tabs when handling the Applique. Pay special attention to not get any fingerprints or dirt on the adhesive. | No dirt or fingerprints on the Applique. |
|  | Make sure the Applique is fully adhered. | Applique is not lifting and is fully adhered. Take special care to make sure all edges are fully adhered. |
|  | Make sure the Applique is free of any remaining adhesive after installation. Clean the Applique with soap and water if necessary. | No adhesive remaining on the Applique. |
|  | If an installation error occurs, i.e., scratched / marred Applique, dirt / debris under the Applique, crooked installation, etc., installer should remove, discard and replace the Applique. | Applique is installed correctly. |