



HYUNDAI Genuine Accessories

Vehicle Model Santa Fe
 Model Year 2013~
 HMA Part No. B8017 ADUP0 PIO
B8017 ADU00 DIO







Accessory Cargo Net
 Difficulty (A)

Note: Difficulty stated above reflects the minimum level of expertise required to install the accessory
 (A) Customer (B) Dealer Technician (C) Master Technician

FMVSS 110 Compliance Information	All dealers must determine if the weight they have added in the form of all options or accessories, when added to the weight of all Port Installed options or accessories, exceeds the lesser of 1.5% of GVWR or 100 lbs. If the additional weight does exceed the lesser of the indicated thresholds, a "Load Carrying Capacity Reduced" label must be installed. A black, fine-point, indelible marker must be used to write by hand onto the label, the reduced carrying capacity in kilograms or pounds, which is the total weight of all added options and accessories. Load Label Part Number: NP070-09003
Part Number: B8017 ADUP0 B8017 ADU00 0.466 lbs (Gross Weight)	

- Accessory Installation

Instructional Symbols / Definitions

 Denotes warnings that may lead to serious physical injury or vehicle damage.	 Denotes quality processes to be checked prior to moving to the next step.	Denotes safety equipment required to be used such as a mask, goggles, rubber gloves, and hearing protection.
 Denotes cautions to be taken to avoid physical injury or electronic component damage.	 Denotes specific tools that are necessary to complete the step.	
 Denotes cautions to be taken to avoid vehicle and component damage.	 Denotes instructional steps necessary to complete the process.	



Mask



Goggles



Rubber Gloves



Hearing Protection

Basic Required Hand Tools:

None


WARNING: Cargo nets are constructed of elastic and netting. Please use caution to avoid entanglement. Avoid eye injury. DO NOT overstretch the cargo net. ALWAYS, keep your face and body out of the cargo net's recoil path.

Notes to Installer:

- Read the entire installation pamphlet prior to beginning the installation of the accessory.
- Ensure that the vehicle is properly protected in the area that the accessory is to be installed.
- To prevent vehicle damage, never place tools on top of painted surfaces, seats, dash pad, console or floor carpet / mat.
- Always wear appropriate safety gear to include gloves and eye protection when required.
- After the installation of the net, please place the instructions in the vehicle glove compartment for later use if needed.


HYUNDAI Genuine Accessories

Kit Overview

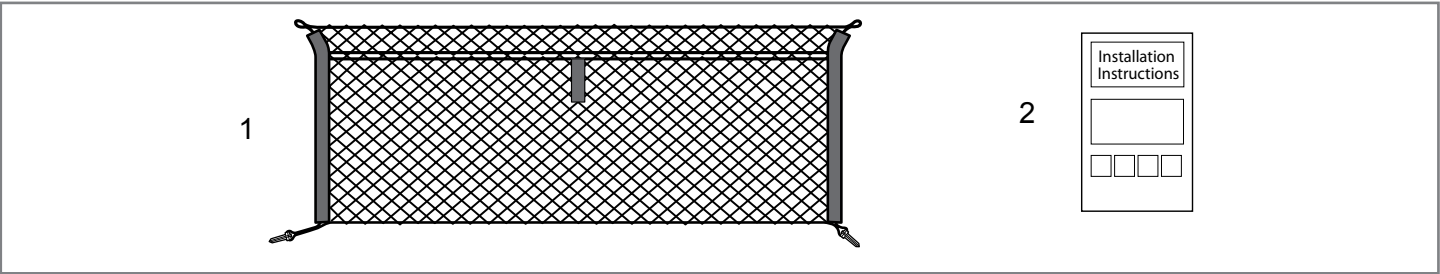

No.	Qty.	Description
1	1	Cargo Net
2	1	Installation Instructions


Instructions

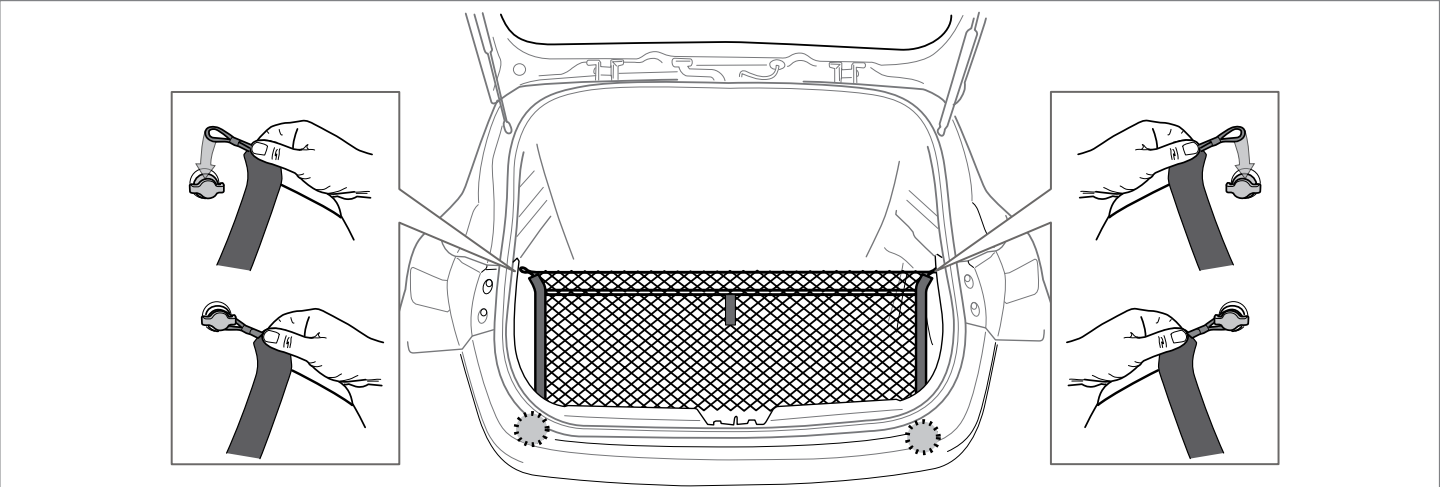

NOTE

Open rear hatch and locate the T-nut and D-ring attachment points as shown. Orient the cargo net so that the pull tab is facing the rear of the vehicle. Attach the upper loops of the cargo net to the T-nut as shown.

1

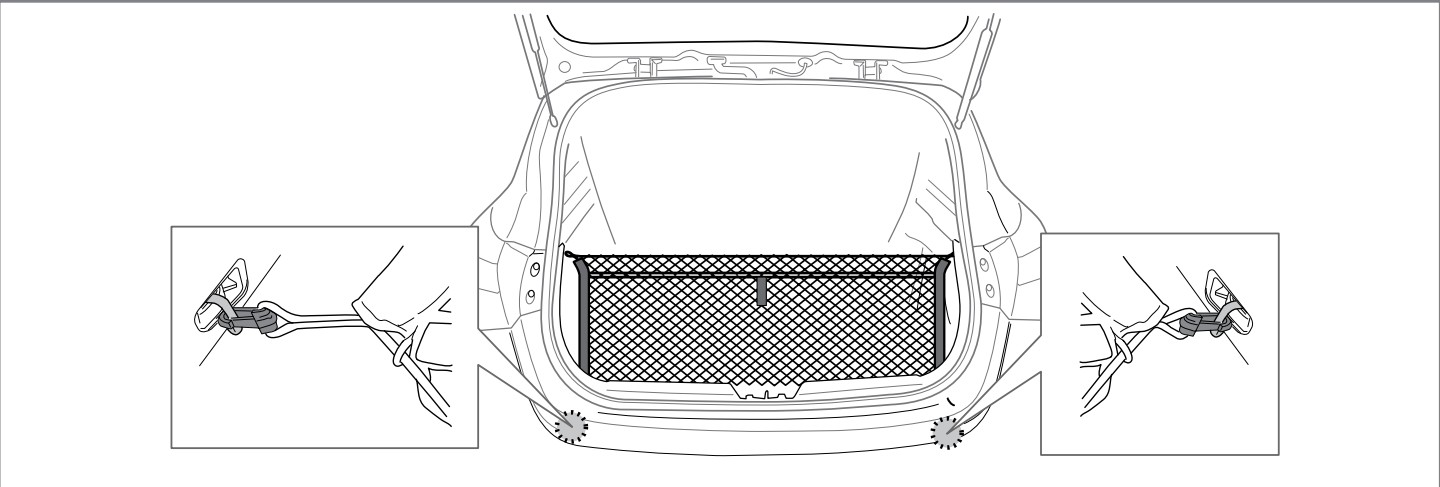

NOTE

Locate the lower D-rings. Attach the plastic clips of the cargo net to the lower D-rings as shown.

2