

Genuine Accessories



Vehicle Model **MULTI**

Model Year 2015-
 Part No. 3N083 ADU00
 Language English
 Rev. Date 6/24/2015

Accessory: **First Aid Kit, Premium**

Difficulty: A

Note: Difficulty stated above reflects the minimum level of expertise required to install the accessory:
 (A) Customer
 (B) Dealer Technician
 (C) Master Technician or Specialist

Instructional Symbols / Definitions

	Denotes warnings that may lead to serious physical injury or vehicle damage		Denotes quality processes to be checked prior to moving to the next step	Denotes personal protective equipment (PPEs) that may be required for a step. Examples of safety equipment icons noted below:	
	Denotes cautions to be taken to avoid physical injury or electronic component damage		Denotes specific tools that are necessary to complete a step		
	Denotes cautions to be taken to avoid vehicle and component damage	N O T E	Denotes important information to be reviewed during the step		
				Glasses	Gloves
				Mask	Hearing Protection

Basic Required Hand Tools

none

Part Weight (Gross)

1.51	lbs
0.69	kg


FMVSS 110 Compliance Information

All dealers must determine if the weight they have added in the form of all options or accessories, when added to the weight of all Port/Dealer Installed options or accessories, exceeds the lesser of 1.5% of GVWR or 100 lbs. If the additional weight does exceed the lesser of the indicated thresholds, a "Load Carrying Capacity Reduced" label must be installed. A black, fine-point, indelible marker must be used to write by hand onto the label, the reduced carrying capacity in kilograms or pounds, which is the total weight of all added options and accessories.
Load Label Part Number: NP070 - 09003

Notes to the installer:


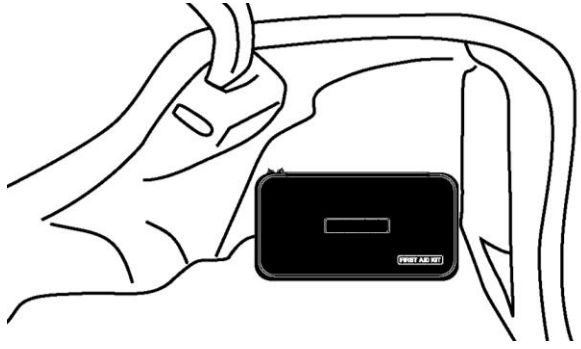

- 1 Read the entire Installation Instructions prior to beginning the installation of the part.
- 2 Make sure the vehicle is completely clean and dry in the area(s) the part is to be installed.
- 3 Ensure the vehicle is properly protected in the area(s) that the accessory is to be installed.
- 4 NEVER place tools on painted surfaces, seating surfaces, dash pad, console or floor carpet/mats.

Kit Overview / Visual Bill-of-Materials

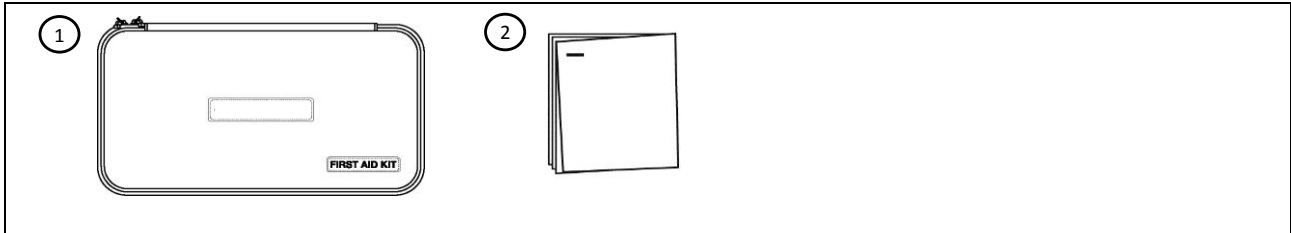

No.	Qty	Description
1	1	First Aid Kit
2	1	Installation Instructions

Genuine Accessories

1	
	
N O T E	<ol style="list-style-type: none">1. Open trunk2. Place First Aid Kit on trunk floor, against RH side wall, so the logo is visible and right-side up.3. Press First Aid Kit against trunk wall, to adhere the hook-and-loop fastener4. Ensure part is securely attached to trunk wall5. Close trunk.
	<p>WARNING! Unsecured cargo could cause serious personal injury in a sudden stop. Hook-and-loop fasteners are intended to prevent sliding and shifting ONLY. Attachment will not retain kit in the event of a sudden stop or collision.</p>