



HYUNDAI Genuine Accessories

Vehicle Model	Santa Fe /Santa Fe Sport	Accessory	Protective Film
Model Year	2013~	Difficulty	B
HMA Part No.	B8025 ADUP1 (PIO) B8025 ADU01 (DIO)		

- Preparation
- Accessory Installation
- Visual Check
- Care & Cleaning

Note: Difficulty stated above reflects the minimum level of expertise required to install the accessory
(A) Customer (B) Dealer Technician (C) Master Technician

FMVSS 110	All dealers must determine if the weight they have added in the form of all options or accessories, when added to the weight of all Port Installed options or accessories, exceeds the lesser of 1.5% of GVWR or 100 lbs. If the additional weight does exceed the lesser of the indicated thresholds, a "Load Carrying Capacity Reduced" label must be installed. A black, fine-point, indelible marker must be used to write by hand onto the label, the reduced carrying capacity in kilograms or pounds, which is the total weight of all added options and accessories. Load Label Part Number: NP070-09003
Compliance Information	
Part Number: B8025 ADU01 1.3 oz (Gross Weight)	



Denotes warnings that may lead to serious physical injury or vehicle damage.



Denotes quality processes to be checked prior to moving to the next step.

Denotes safety equipment required to be used such as a mask, goggles, rubber gloves, and hearing protection.



Denotes cautions to be taken to avoid physical injury or electronic component damage.



Denotes specific tools that are necessary to complete the step.



Mask



Goggles



Denotes cautions to be taken to avoid vehicle and component damage.

**N
O
T
E**

Denotes instructional steps necessary to complete the process.




Rubber Gloves



Hearing Protection


Basic Required Hand Tools

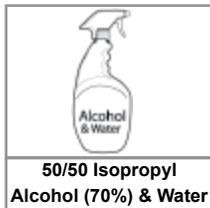


50/50 Isopropyl Alcohol (70%) & Water



Alcohol, Shampoo & Water

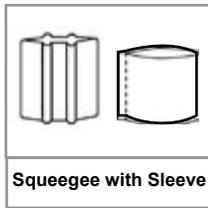

Squeegee with Sleeve

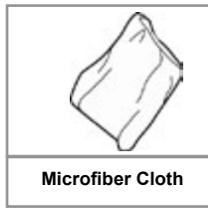

Microfiber Cloth

Preparation - Before Installation


1. Alcohol (use only 70% concentration Isopropyl alcohol), Shampoo & Water mixture: Mix 8 oz. of water, 8 oz. alcohol & 1 ml of baby shampoo in a trigger type spray bottle marked "SLIP." Note: The above listed solution has been formulated for use where ambient & vehicle surface temperatures are within a range of 65°F to 90°F. If temperatures exceed this range, add additional shampoo in increments of 1 ml to aid in alignment.
2. This product should be installed with proper installation tools.
3. Install this product while observing all warnings and precautions stated in this instruction booklet.
4. **VERY IMPORTANT:** Thoroughly wash hood with soap and water. If contaminants are found, clean with an automotive grade clay bar.
5. **VERY IMPORTANT:** Sleeve must be installed on Squeegee throughout entire installation process.
6. **VERY IMPORTANT:** Ambient temperature of the Protective Film and vehicle must be 65°F to 90°F at the time of installation and for two hours after.
7. Parts storage should be at room temperature and in a clean dry place. Care should be taken to avoid a dusty environment.
8. Place a large towel or pad on the ground to catch wetting mixture.

Notes to the Installer

1. Read the entire installation pamphlet prior to installation of the accessory.
2. After washing the hood area with soap and water and prior to installing the Protective Film, completely clean the installation area with the isopropyl alcohol and water mixture. If contaminants are present after cleaning, remove the contaminants using an automotive grade clay bar.
3. Inspect part for any dirt or debris on adhesive.
4. Installation results may vary based on condition of vehicle.
5. **VERY IMPORTANT -** Parts and vehicle surface temperature must be between 65° and 90° degrees F at time of installation.
6. **VERY IMPORTANT -** Installer's hands must be completely clean from dirt or grease.

HYUNDAI Genuine Accessories


Kit Overview

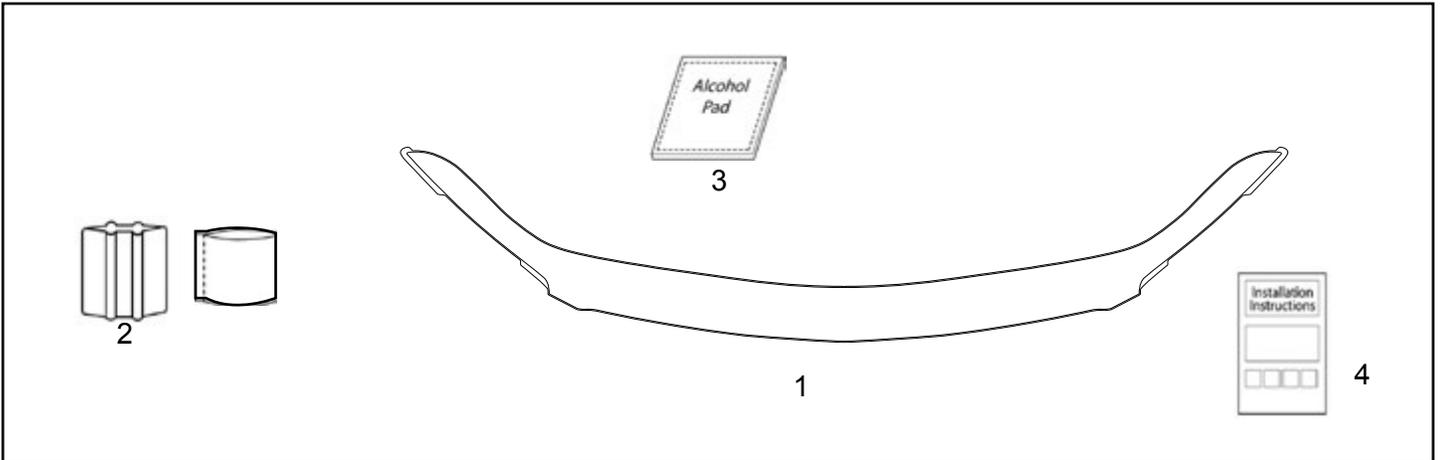


No.	Qty.	Description
1	1	Protective Film
2	1	Squeegee with Sleeve
3	4	Alcohol Pad
4	1	Instructions

Note: Items 2 and 3 are not included in PIO kit.


HYUNDAI Genuine Accessories

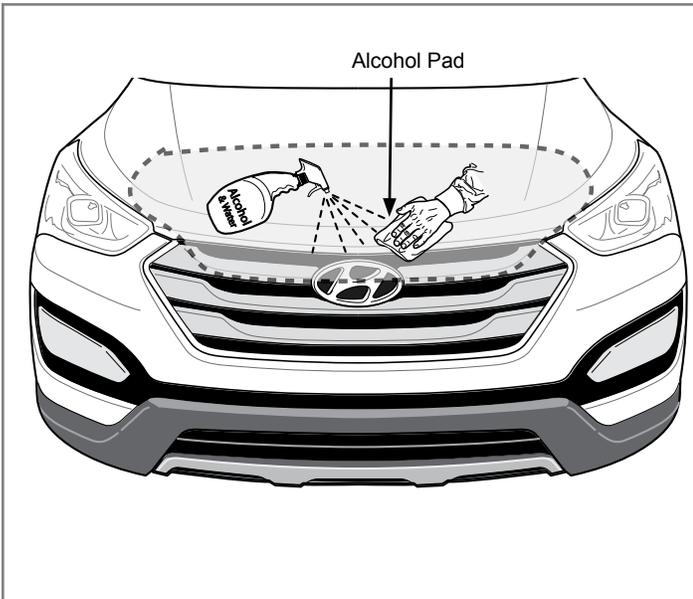

	Alcohol Prep Pad or Isopropyl Alcohol & Water Mixture in a Spray Bottle and a Microfiber Cloth	1
NOTE	Thoroughly clean the hood area using the four (4) supplied alcohol prep pads or isopropyl alcohol and water mixture and a microfiber cloth.	
	Make sure hood is completely clean and dried. Inspect hood surface for contaminants. Clean surface with automotive quality clay bar if required.	

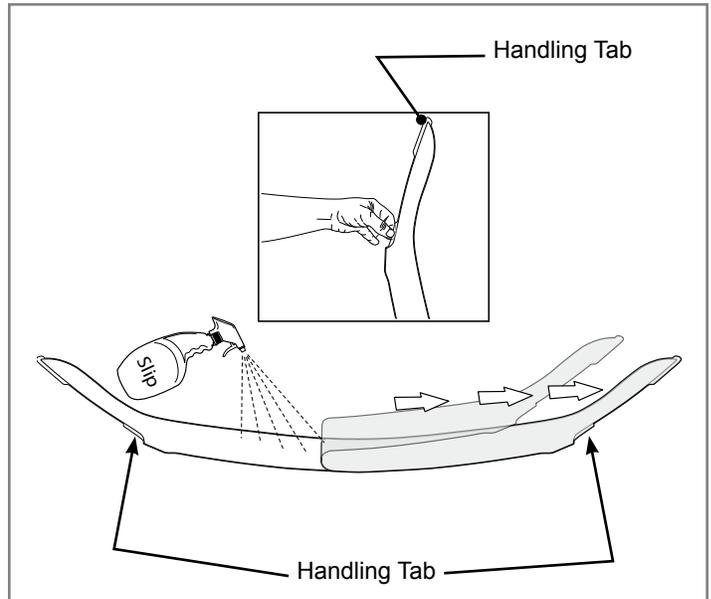

	Alcohol, Shampoo & Water Mixture (SLIP Mixture)	2
NOTE	Grasp only the Handling Tab and remove the liner from the back of the Protective Film. Spray both the Protective Film and area of installation on the hood with the SLIP mixture.	
	Pay special attention to not get any finger prints or dirt on the Protective Film.	

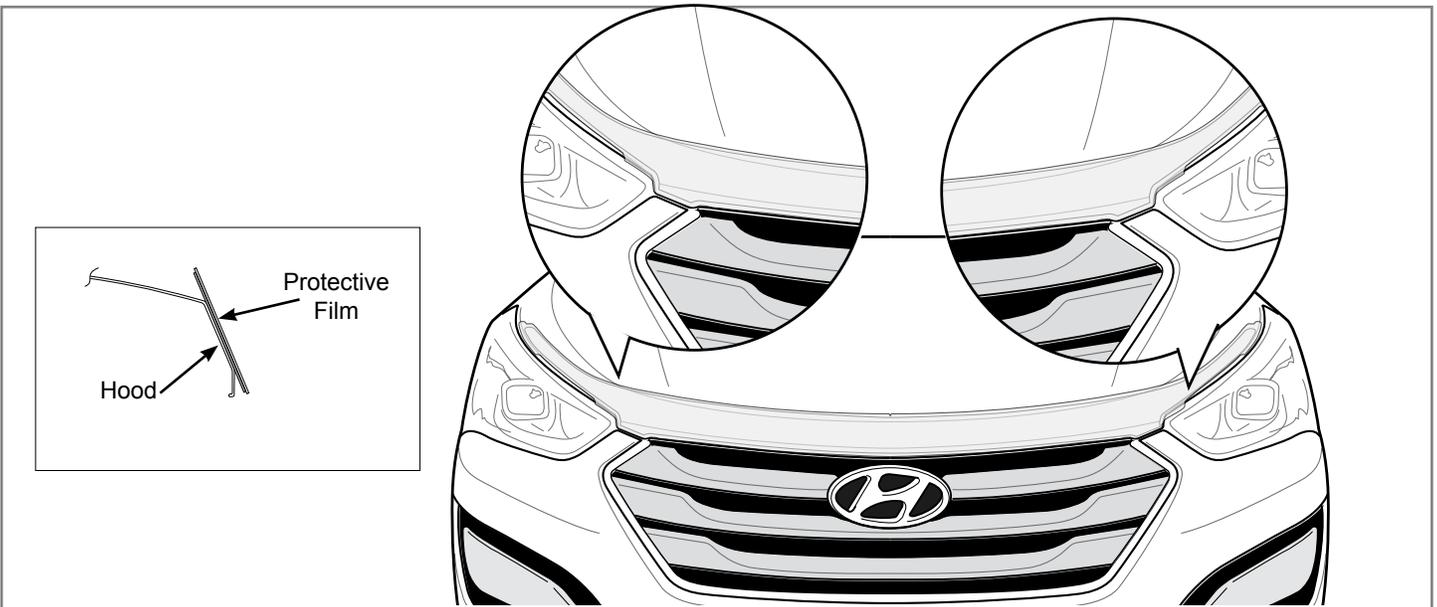


	Alcohol, Shampoo & Water Mixture (SLIP Mixture)	3
NOTE	With the vehicle still wet with the "SLIP" mixture, position the Protective Film onto the hood by visually aligning the front leading edge of the hood to the edge of the premask as shown above. The Protective Film's premask and liner should align around the corners of the headlight, centered left to right. If necessary, spray additional "SLIP" mixture to aid in the alignment.	
	Do not wrap the edge at this time. Hood must be wet with SLIP mixture to aid in installation.	

HYUNDAI Genuine Accessories

Squeegee Sequence:

1) Front Surface of Hood

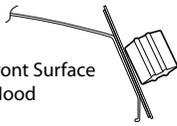

Alcohol, Shampoo & Water Mixture (SLIP Mixture) and Squeegee with Sleeve

4

NOTE

Starting in the center, squeegee the Protective Film firmly onto the front surface (see insert) of the hood using overlapping squeegee strokes. Continue to squeegee the edge of the hood as shown above.



Inspect for bubbles. If bubbles are found, follow procedure in Visual Check to remove bubbles.



Do not squeegee the vertical surface at this time. Make sure sleeve is installed on squeegee.



Alcohol, Shampoo & Water Mixture (SLIP Mixture)

5



NOTE

Carefully remove the premask at 180° from the Protective Film as shown above.



Do not pull premask straight up, this could lift Protective Film.

HYUNDAI Genuine Accessories
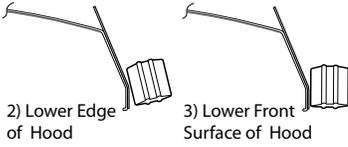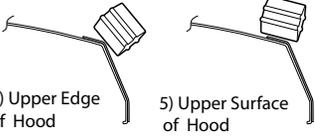
<p>Squeegee Sequence:</p>  <p>2) Lower Edge of Hood 3) Lower Front Surface of Hood</p>		
<p>Squeegee Sequence:</p>  <p>4) Upper Edge of Hood 5) Upper Surface of Hood</p>		
	<p>Alcohol, Shampoo & Water Mixture (SLIP Mixture) and Squeegee with Sleeve</p>	<p>6</p>
<p>N O T E</p>	<p>Spray the partially applied Protective Film with the SLIP mixture and squeegee the remaining portion of the Protective Film to the hood. It is very important to use a horizontal squeegee stroke. Continue this squeegee stroke pattern from the center, working outwards to complete the installation. Re-squeegee the entire part including any edges that may have lifted due to insufficient pressure.</p>	
	<p>Inspect for bubbles or lifting. Make sure sleeve is installed on squeegee.</p>	

HYUNDAI Genuine Accessories Visual Check

Items To Be Checked		Results Of The Check
	Use only the handling tabs when handling the Protective Film. Pay special attention to not get any finger prints or dirt on the Protective Film.	No dirt or finger prints on Protective Film.
	Check for bubbles. If bubbles are found, re-wet Protective Film with the soap and water mixture and using a squeegee with sleeve, push/pull/remove bubbles to the closest edge of the Protective Film.	No bubbles present.
	Make sure Protective Film is fully adhered.	Protective Film is not lifting and is fully adhered. Take special care to make sure all edges are fully adhered.
	Make sure Protective Film is free of any remaining premask adhesive after installation. Clean the Protective Film with soap and water if necessary.	No premask adhesive remaining on Protective Film.
	If an installation error occurs, i.e. scratched/ marred film, dirt/debris under film, crooked installation, etc., installer should remove, discard and replace the Protective Film.	Protective Film is installed correctly.

Care & Cleaning

Wash car with soapy water as needed. (Do not use other chemical based cleaners.)