

## Genuine Accessories



**GENESIS**

**Vehicle Model** G90

**Model Year** 2017~  
**Part No.** D2F46 AK100  
D2F46 AU200  
**Language** English  
**Rev. Date** 8/10/2016

**Accessory:** Rear Mudguards

**Difficulty:** B

**Note:** Difficulty stated above reflects the minimum level of expertise required to install the accessory:

- (A) Customer
- (B) Dealer Technician
- (C) Master Technician or Specialist

### Instructional Symbols / Definitions



Denotes warnings that may lead to serious physical injury or vehicle damage



Denotes quality processes to be checked prior to moving to the next step

Denotes personal protective equipment (PPEs) that may be required for a step. Examples of safety equipment icons noted below:



Denotes cautions to be taken to avoid physical injury or electronic component damage



Denotes specific tools that are necessary to complete a step



Glasses



Gloves



Denotes cautions to be taken to avoid vehicle and component damage

NOTE

Denotes important information to be reviewed during the step




Mask




Hearing Protection

### Basic Required Tools

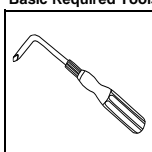

Right Angle #2 Phillips Screwdriver

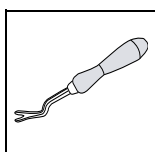

Clip Removal Tool

### Part Weight (Gross)


<b>0.54</b>	lbs
<b>0.25</b>	kg

All dealers must determine if the weight they have added in the form of all options or accessories, when added to the weight of all Port/Dealer Installed options or accessories, exceeds the lesser of 1.5% of GVWR or 100 lbs. If the additional weight does exceed the lesser of the indicated thresholds, a "Load Carrying Capacity Reduced" label must be installed. A black, fine-point, indelible marker must be used to write by hand onto the label, the reduced carrying capacity in kilograms or pounds, which is the total weight of all added options and accessories.

### Notes to the installer:

- 1 Read the entire Installation Instructions prior to beginning the installation of the part.
- 2 Make sure the vehicle is completely clean and dry in the area(s) the part is to be installed.
- 3 Ensure the vehicle is properly protected in the area(s) that the accessory is to be installed.
- 4 NEVER place tools on painted surfaces, seating surfaces, dash pad, console or floor carpet/mats.
- 5 Always wear appropriate personal protective equipment, including gloves, safety glasses, etc., when required.

### Kit Overview

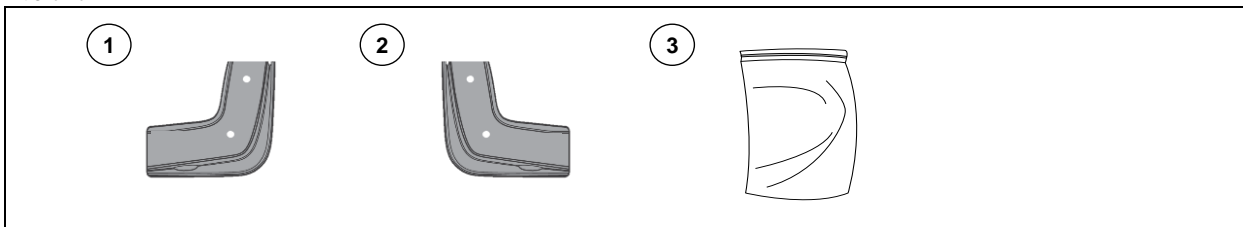

No.	Qty	Description
1	1	Rear Mudguard (LH)
2	1	Rear Mudguard (RH)
3	1	Hardware Bag


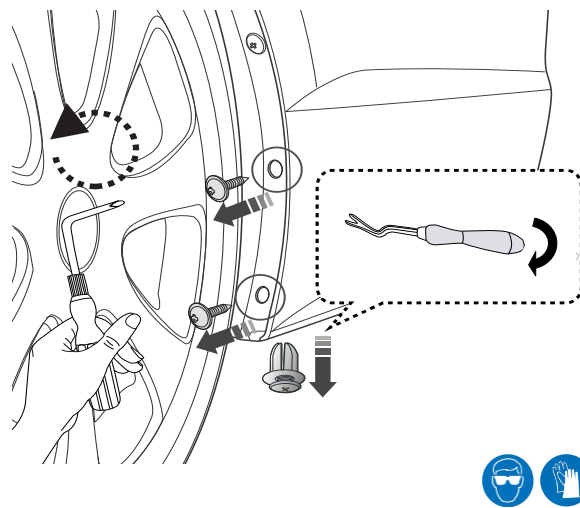

### Hardware Kit Contents


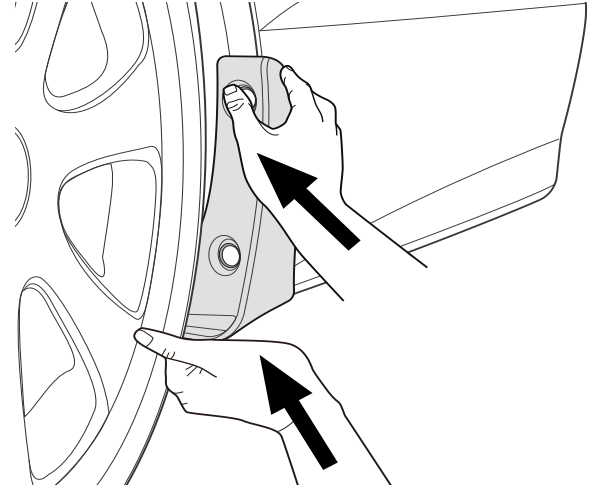

A	
4	Self Tapping Screw


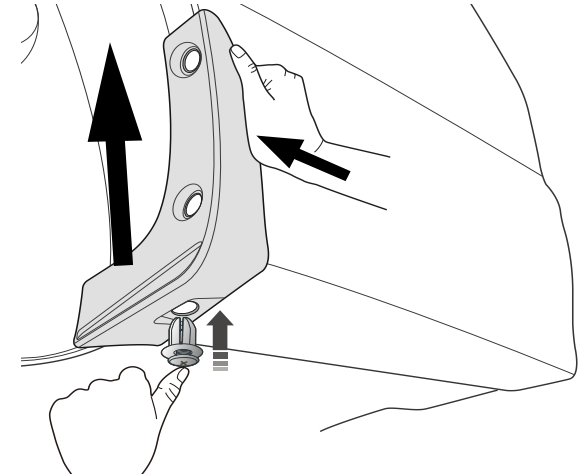
B	
2	Plastic Retainer


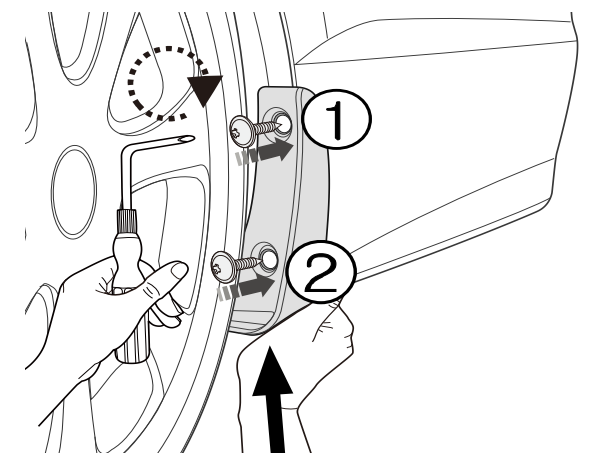

Hardware Total
6


## Genuine Accessories

<b>1</b>		<b>Right Angle #2 Phillips Screwdriver and Clip Removal Tool</b>
		
		
<div style="display: flex; justify-content: space-between;"> <div style="width: 5%; text-align: center;"> <b>N O T E</b> </div> <div style="width: 90%;"> <ol style="list-style-type: none"> <li>1. Release the center portion of one (1) Plastic Retainer and remove from the vehicle as shown.</li> <li>2. Remove the two (2) Screws from the highlighted areas as shown.</li> <li>3. Discard the removed hardware.</li> </ol> </div> </div>		

<b>2</b>		<b>Right Angle #2 Phillips Screwdriver</b>
		
<div style="display: flex; justify-content: space-between;"> <div style="width: 5%; text-align: center;"> <b>N O T E</b> </div> <div style="width: 90%;"> <ol style="list-style-type: none"> <li>1. Align the Rear Mudguard as shown ensuring a proper fit.</li> </ol> </div> </div>		
<div style="display: flex; justify-content: space-between;"> <div style="width: 5%; text-align: center;">  </div> <div style="width: 90%;"> <p>Make sure to push the mudguard upward and in during the installation to eliminate any possible gaps.</p> </div> </div>		

<b>3</b>		<b>Right Angle #2 Phillips Screwdriver</b>
		
<div style="display: flex; justify-content: space-between;"> <div style="width: 5%; text-align: center;"> <b>N O T E</b> </div> <div style="width: 90%;"> <ol style="list-style-type: none"> <li>1. While pushing the Rear Mudguard in as shown, insert one (1) Plastic Retainer into the underside hole. Make sure to push in the center portion of the retainer to lock the retainer in place.</li> </ol> </div> </div>		

<b>4</b>		<b>Right Angle #2 Phillips Screwdriver</b>
		
<div style="display: flex; justify-content: space-between;"> <div style="width: 5%; text-align: center;"> <b>N O T E</b> </div> <div style="width: 90%;"> <ol style="list-style-type: none"> <li>1. While pushing the Rear Mudguard up and in, insert and fasten one (1) Self Tapping Screw into the upper hole.</li> <li>2. Insert and fasten one (1) Self Tapping Screw into the lower hole.</li> <li>3. Repeat steps 1-4 for the opposite side.</li> </ol> </div> </div>		
<div style="display: flex; justify-content: space-between;"> <div style="width: 5%; text-align: center;">  </div> <div style="width: 90%;"> <p>After the installation, check for any visible gaps. If any gap exceeds 0.5mm, loosen the mounting screws and refit the Rear Mudguard to the body to achieve the correct specification. Be careful not to over-tighten or strip the head of the screw.</p> </div> </div>		

Visual Check	Item to be Checked
	Make sure the Rear Mudguard is properly aligned to the vehicle.

Result	Result
	Rear Mudguard is properly aligned.