

Genuine Accessories



Vehicle Model: Elantra GT

Model Year 2018-
Part No. G3F46 AK000

Language English
Rev. Date 12/11/2018

Accessory: Mudguards, Front

Difficulty: (B)

Note: Difficulty stated above reflects the minimum level of expertise required to install the accessory:
(A) Customer
(B) Dealer Technician
(C) Master Technician or Specialist

Electronic Installation Instructions



If this is a printed copy of the installation instructions, ensure you have the latest revision by scanning the QR code or by entering the website address listed below before beginning installation. Use the latest revision date as noted by "Rev. Date" above.

www.hyundaiaccessories.com/admin_media_uploads/installationSheets/g3f46_ak000.pdf

Application Notes

Applicable to Elantra GT and Elantra GT N Line

Instructional Symbols / Definitions



Denotes warnings that may lead to serious physical injury or vehicle damage



Denotes quality processes to be checked prior to moving to the next step

Denotes personal protective equipment (PPEs) that may be required for a step. Examples of safety equipment icons noted below:



Denotes cautions to be taken to avoid physical injury or electronic component damage



Denotes specific tools that are necessary to complete a step



Glasses



Gloves



Denotes cautions to be taken to avoid vehicle and component damage

**N
O
T
E**

Denotes important information to be reviewed during the step




Mask



Hearing Protection

Basic Required Tools

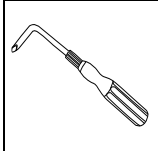

Right Angle #2
Phillips Screwdriver

Part Weight (Gross)

0.54

lbs

0.24


kg

All dealers must determine if the Net weight they have added in the form of all options or accessories, when added to the weight of all Port/Dealer Installed options or accessories, exceeds the lesser of 1.5% of GVWR or 100 lbs. If the additional weight does exceed the lesser of the indicated thresholds, a "Load Carrying Capacity Reduced" label must be installed. A black, fine-point, indelible marker must be used to write by hand onto the label, the reduced carrying capacity in kilograms or pounds, which is the total weight of all added options and accessories.
Load Label Part Number: NP070 - 09003

Notes to the installer:

- 1 Read the entire Installation Instructions prior to beginning the installation of the part.
- 2 Make sure the vehicle is completely clean and dry in the area(s) the part is to be installed.
- 3 Ensure the vehicle is properly protected in the area(s) that the accessory is to be installed.
- 4 NEVER place tools on painted surfaces, seating surfaces, dash pad, console or floor carpet/mats.
- 5 Always wear appropriate personal protective equipment, including gloves, safety glasses, etc., when required.

Kit Overview

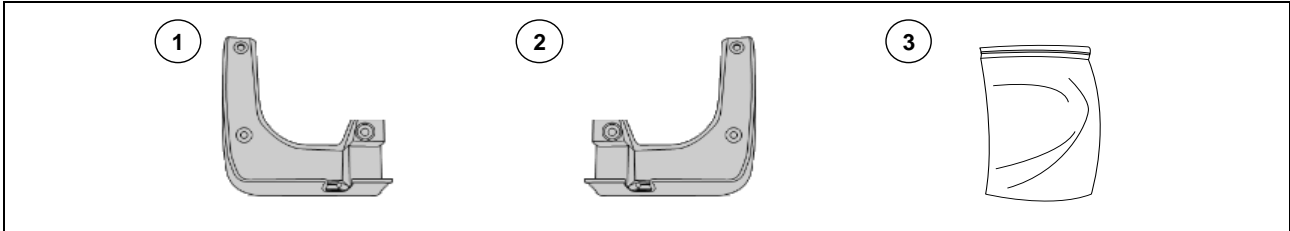


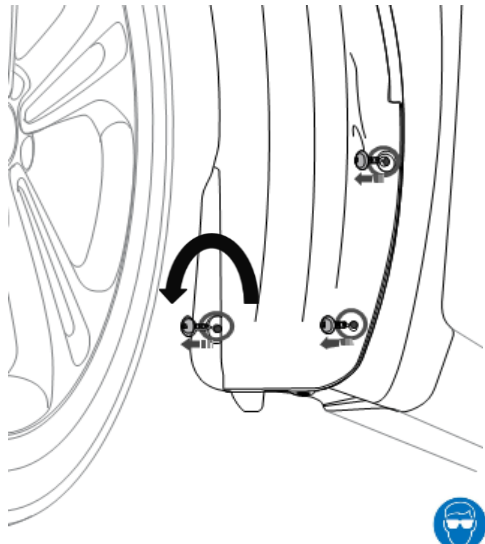
No.	Qty	Description
1	1	Front Mudguard (LH)
2	1	Front Mudguard (RH)
3	1	Hardware Bag


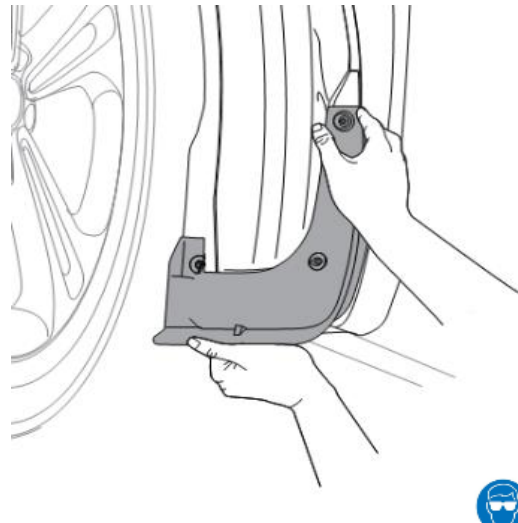

Hardware Kit Contents


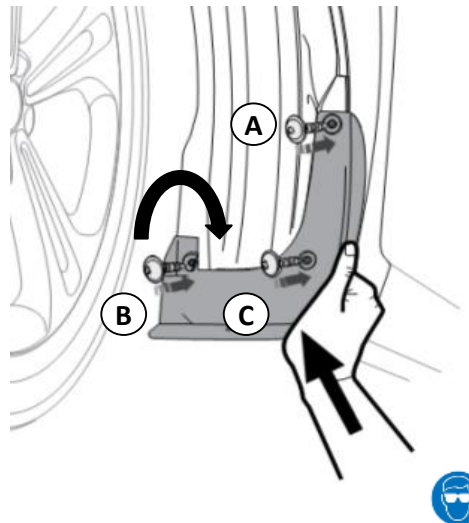

A	
6	Screw

Hardware Total
6

Genuine Accessories



1		Right Angle #2 Phillips Screwdriver
		
N O T E	<p>NOTE: Fully turn the steering wheel to the left when installing the driver's side front mudguard (LH) and fully turn the steering wheel to the right when installing the passenger's side front mudguard (RH).</p> <p>A. Starting on the driver's side front wheel well area, remove the three (3) screws as shown.</p> <p>C. Discard the removed hardware.</p>	

2		
		
N O T E	<p>A. Align the driver's side front mudguard (LH) as shown ensuring a proper fit.</p>	
	<p>Make sure to push the mudguard upward and inward during the installation to eliminate any possible gaps.</p>	

3		Right Angle #2 Phillips Screwdriver
		
N O T E	<p>A. While pushing the mudguard upward and inward as shown, insert and fasten one (1) provided screw into the upper hole.</p> <p>B. Insert and fasten one (1) provided screw into the inboard hole.</p> <p>C. Insert and fasten one (1) provided screw into the lower hole.</p> <p>D. Repeat steps 1-3 for passenger's side front mudguard (RH).</p> <p>E. Installation is complete.</p>	
	<p>Check for any visible gaps. If any gaps exceed 0.5mm, loosen the mounting screws and refit the mudguard(s) to the body to decrease or eliminate the gaps. Be careful not to over-tighten or strip the screw head.</p>	

Genuine Accessories

Visual Check

Item to be Checked		Result	
	Make sure to push the Front Mudguards upward and inward during the installation to eliminate any possible gaps.	Front Mudguards are properly aligned.	
	Check for any visible gaps. If any gaps exceed 0.5mm, loosen the mounting screws and refit the mudguard(s) to the body to decrease or eliminate the gaps.	Any visible gaps do not exceed 0.5mm.	