

Genuine Accessories



Vehicle Model: Multiple

Model Year 2018~

Part No. J0F72 AU000

Language English

Rev. Date 12/17/2018











Accessory: Roadside Assistance Kit

Difficulty: (A)

Note: Difficulty stated above reflects the minimum level of expertise required to install the accessory:

- (A) Customer
- (B) Dealer Technician
- (C) Master Technician or Specialist

Instructional Symbols / Definitions

 Denotes warnings that may lead to serious physical injury or vehicle damage	 Denotes quality processes to be checked prior to moving to the next step	Denotes personal protective equipment (PPEs) that may be required for a step. Examples of safety equipment icons noted below:
 Denotes cautions to be taken to avoid physical injury or electronic component damage	 Denotes specific tools that are necessary to complete a step	 Glasses
 Denotes cautions to be taken to avoid vehicle and component damage	 Denotes important information to be reviewed during the step	 Gloves  Mask  Hearing Protection

Basic Required Tools

None

Part Weight (Gross)

4.90	lbs
2.22	kg

FMVSS 110 Compliance Information


All dealers must determine if the Net weight they have added in the form of all options or accessories, when added to the weight of all Port/Dealer Installed options or accessories, exceeds the lesser of 1.5% of GVWR or 100 lbs. If the additional weight does exceed the lesser of the indicated thresholds, a "Load Carrying Capacity Reduced" label must be installed. A black, fine-point, indelible marker must be used to write by hand onto the label, the reduced carrying capacity in kilograms or pounds, which is the total weight of all added options and accessories.

Load Label Part Number: NP070 - 09003

Notes to the installer:


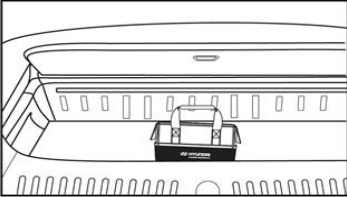
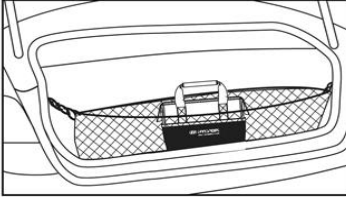
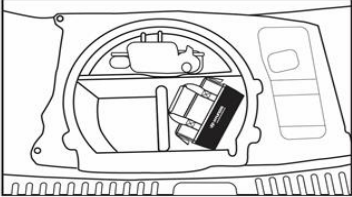
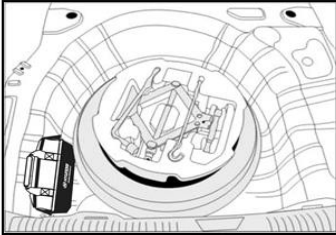
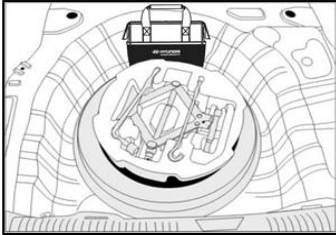
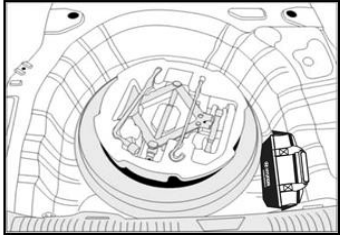

- 1) Read the entire Installation Instructions prior to beginning the installation of the part.
- 2) Make sure the vehicle is completely clean and dry in the area(s) the part is to be installed.
- 3) Ensure the vehicle is properly protected in the area(s) that the accessory is to be installed.
- 4) NEVER place tools on painted surfaces, seating surfaces, dash pad, console or floor carpet/mats.
- 5) Always wear appropriate personal protective equipment, including gloves, safety glasses, etc., when required.

Kit Overview

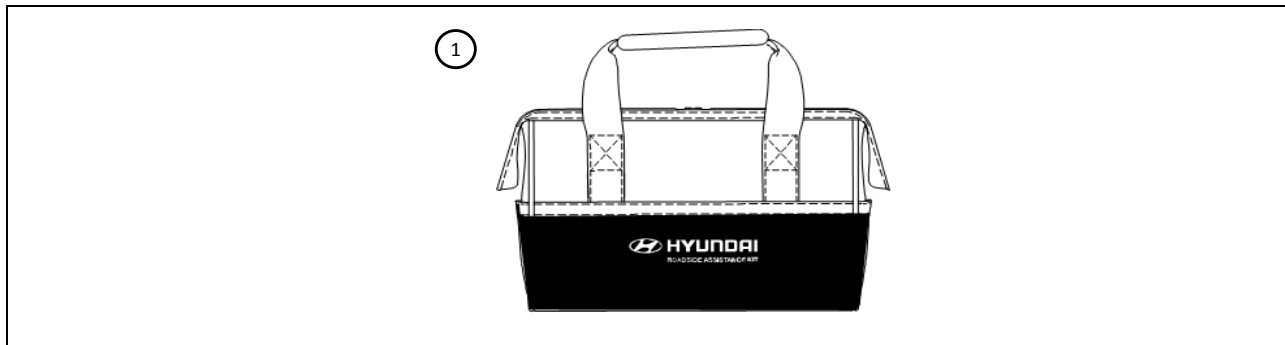



No.	Qty	Description
1	1	Roadside Assistance Kit

Genuine Accessories

1		
  		
  		
N O T E	<p>A. Place Roadside Assistance Kit in a secured location of vehicle; including sub-floor storage, spare tire well, Tire Mobility Kit tray or cargo net (if equipped).</p> <p>B. Ensure all compartments, liners and covers can close without interference from the Roadside Assistance Kit.</p>	
<div style="display: flex; align-items: center;">  <div> <p>Warning:</p> <p>Install Roadside Assistance Kit per instructions.</p> <p>In a sudden stop or collision, unsecured cargo could cause personal injury.</p> </div> </div>		

Visual Check

Item to be Checked		Result	
	Use care when handling and placing the Roadside Assistance Kit to avoid contact with any dirt.	No dirt on the Roadside Assistance Kit.	
	Confirm proper placement of the Roadside Assistance Kit.	The Roadside Assistance Kit should be in a secured position with the Hyundai logo facing the Installer.	

Care & Cleaning

Cleaning Instructions for:

MULTIPLE

Roadside Assistance Kit

Spot clean with a damp cloth as needed (do not use chemical based cleaners).