

Genuine Accessories



Vehicle Model: **Kona EV**

Model Year 2019-

Part No. K4F46 AK100

Language English

Rev. Date 7/18/2018

Accessory: **Mudguards, Rear**

Difficulty: (B)



Note: Difficulty stated above reflects the minimum level of expertise required to install the accessory:

- (A) Customer
- (B) Dealer Technician
- (C) Master Technician or Specialist

Instructional Symbols / Definitions

| | | | | | |
|--|--|----------------------------|--|---|--------------------|
| | Denotes warnings that may lead to serious physical injury or vehicle damage | | Denotes quality processes to be checked prior to moving to the next step | Denotes personal protective equipment (PPEs) that may be required for a step. Examples of safety equipment icons noted below: | |
| | Denotes cautions to be taken to avoid physical injury or electronic component damage | | Denotes specific tools that are necessary to complete a step | | |
| | Denotes cautions to be taken to avoid vehicle and component damage | N O T E | Denotes important information to be reviewed during the step | | |
| | | | | Glasses | Gloves |
| | | | | Mask | Hearing Protection |

Basic Required Tools

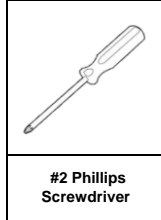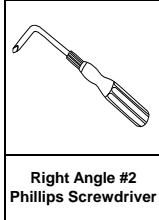

Part Weight (Gross)

| | |
|-------------|-----|
| 0.30 | lbs |
| 0.14 | kg |

FMVSS 110 Compliance Information

All dealers must determine if the Net weight they have added in the form of all options or accessories, when added to the weight of all Port/Dealer Installed options or accessories, exceeds the lesser of 1.5% of GVWR or 100 lbs. If the additional weight does exceed the lesser of the indicated thresholds, a "Load Carrying Capacity Reduced" label must be installed. A black, fine-point, indelible marker must be used to write by hand onto the label, the reduced carrying capacity in kilograms or pounds, which is the total weight of all added options and accessories.


Load Label Part Number: NP070 - 09003

Notes to the installer:

- 1) Read the entire Installation Instructions prior to beginning the installation of the part.
- 2) Make sure the vehicle is completely clean and dry in the area(s) the part is to be installed.
- 3) Ensure the vehicle is properly protected in the area(s) that the accessory is to be installed.
- 4) NEVER place tools on painted surfaces, seating surfaces, dash pad, console or floor carpet/mats.
- 5) Always wear appropriate personal protective equipment, including gloves, safety glasses, etc., when required.


Genuine Accessories


Kit Overview

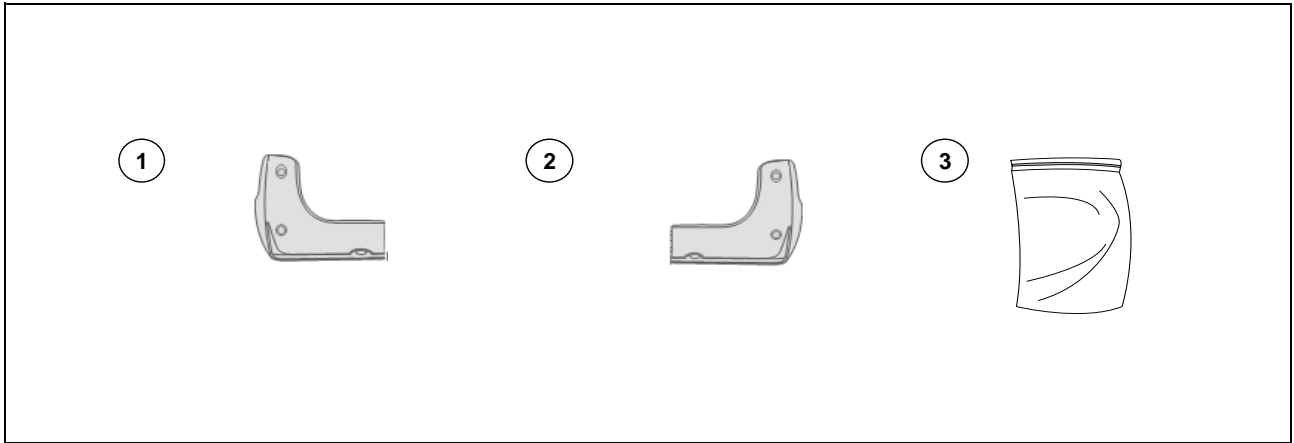

| No. | Qty | Description |
|-----|-----|--------------------|
| 1 | 1 | Rear Mudguard (LH) |
| 2 | 1 | Rear Mudguard (RH) |
| 3 | 1 | Hardware Bag |


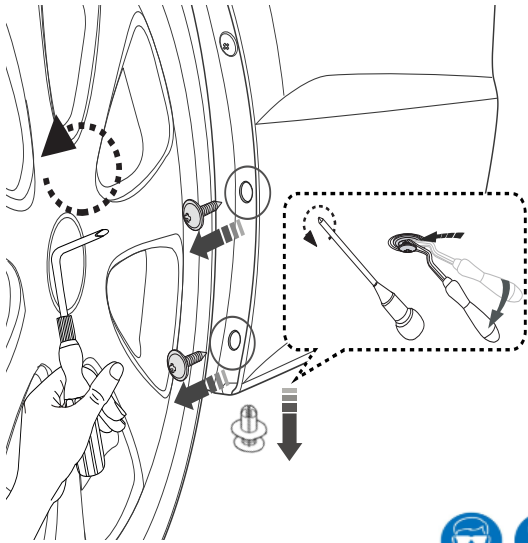
Hardware Kit Contents


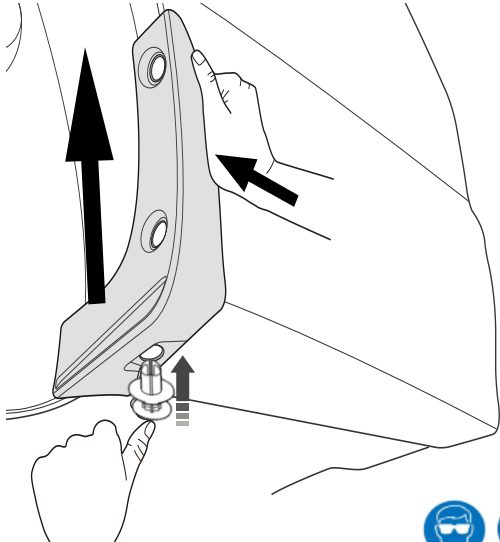

| | |
|---|---|
| A |  |
| 4 | Self-Tapping Screw (M6) |


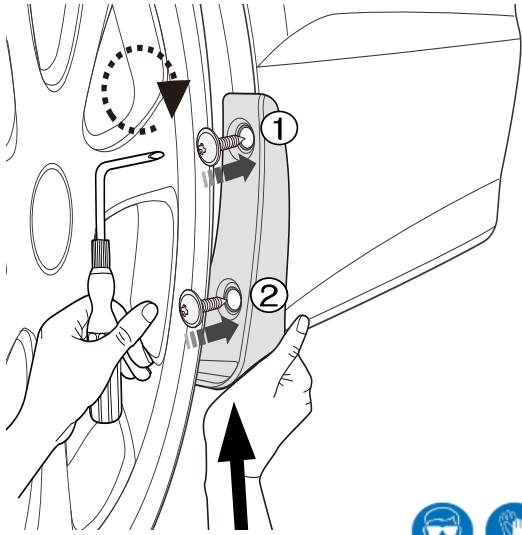

| | |
|---|---|
| B |  |
| 2 | Plastic Retainer |

| |
|----------------|
| Hardware Total |
| 6 |

Genuine Accessories



| | | |
|---|--|--|
| 1 |  | Right Angle #2 Phillips Screwdriver, Clip Removal Tool and #2 Phillips Screwdriver |
|  | | |
| N O T E | A. At the driver's side rear wheel well, if applicable, unscrew the center screw of the plastic retainer and then remove the plastic retainer from the underside of the vehicle using a clip removal tool. B. Remove the two (2) screws as shown. C. Discard the hardware. | |

| | | |
|--|--|--|
| 2 |  | |
|  | | |
| N O T E | A. Align the Rear Mudguard as shown ensuring a proper fit. B. Insert one (1) provided plastic retainer into the hole as shown. Make sure to push in the center portion of the plastic retainer to lock the retainer in place. | |
|  | Make sure to push the mudguard upward and in during the installation to eliminate any possible gaps. | |

| | | |
|---|--|-------------------------------------|
| 3 |  | Right Angle #2 Phillips Screwdriver |
|  | | |
| N O T E | A. While pushing the mudguard up as shown, insert and fasten one (1) provided M6 screw into the upper hole as shown. B. Insert and fasten one (1) provided M6 screw into the lower hole as shown. C. Repeat steps 1-3 for the opposite side Rear Mudguard. D. Installation is complete. | |
|  | Check for any visible gaps. If any gap exceeds 0.5mm, loosen the mounting screws and refit the Front Mudguard to the body to decrease or eliminate the gaps. Be careful not to over-tighten or strip the screw head. | |

Genuine Accessories

Visual Check

| | Item to be Checked | Result |
|---|---|---------------------------------------|
|  | Make sure to push the Rear Mudguards upward and inward during the installation to eliminate any possible gaps. | Rear Mudguards are properly aligned. |
|  | After the installation, check for any visible gaps. If any gap exceeds 0.5mm, loosen the mounting screws and refit the mudguard(s) to the body to decrease or eliminate the gaps. | Any visible gaps do not exceed 0.5mm. |