

# Genuine Accessories



Vehicle Model: Palisade

Model Year 2020-  
 Part No. S8F17 AU000 (DIO)  
 S8F17 AU600 (PIO)  
 Language English  
 Rev. Date 11/19/2018

Accessory: Cargo Net

Difficulty: ( A )

**Note:** Difficulty stated above reflects the minimum level of expertise required to install the accessory:  
 (A) Customer  
 (B) Dealer Technician  
 (C) Master Technician or Specialist

**Electronic Installation Instructions**



If this is a printed copy of the installation instructions, ensure you have the latest revision by scanning the QR code or by entering the website address listed below before beginning installation. Use the latest revision date as noted by "Rev. Date" above.

[www.hyundaiaccessories.com/admin\\_media\\_uploads/installationSheets/s8f17\\_au000.pdf](http://www.hyundaiaccessories.com/admin_media_uploads/installationSheets/s8f17_au000.pdf)

**Instructional Symbols / Definitions**

	Denotes warnings that may lead to serious physical injury or vehicle damage		Denotes quality processes to be checked prior to moving to the next step	Denotes personal protective equipment (PPEs) that may be required for a step. Examples of safety equipment icons noted below:	
	Denotes cautions to be taken to avoid physical injury or electronic component damage		Denotes specific tools that are necessary to complete a step		
	Denotes cautions to be taken to avoid vehicle and component damage	<b>N O T E</b>	Denotes important information to be reviewed during the step		
				Glasses	Gloves
				Mask	Hearing Protection

**Basic Required Tools**

None

**Part Weight (Gross)**

<b>0.87</b>	lbs
<b>0.39</b>	kg


**FMVSS 110 Compliance Information**

All dealers must determine if the Net weight they have added in the form of all options or accessories, when added to the weight of all Port/Dealer Installed options or accessories, exceeds the lesser of 1.5% of GVWR or 100 lbs. If the additional weight does exceed the lesser of the indicated thresholds, a "Load Carrying Capacity Reduced" label must be installed. A black, fine-point, indelible marker must be used to write by hand onto the label, the reduced carrying capacity in kilograms or pounds, which is the total weight of all added options and accessories.  
**Load Label Part Number: NP070 - 09003**

**Notes to the installer:**

- 1) Read the entire Installation Instructions prior to beginning the installation of the part.
- 2) Make sure the vehicle is completely clean and dry in the area(s) the part is to be installed.
- 3) Ensure the vehicle is properly protected in the area(s) that the accessory is to be installed.
- 4) NEVER place tools on painted surfaces, seating surfaces, dash pad, console or floor carpet/mats.
- 5) Always wear appropriate personal protective equipment, including gloves, safety glasses, etc., when required.

**Kit Overview**

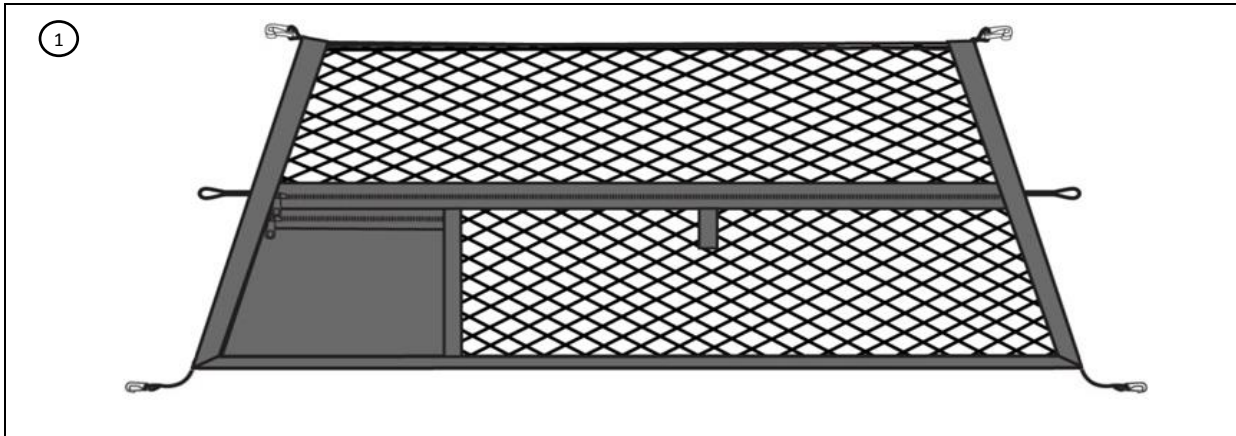

No.	Qty	Description
1	1	Cargo Net

## Genuine Accessories

1		
NOTE		<p>A. Open tailgate.                  B. For upper vertical installation, identify the T-Anchor upper attachment points.                  C. Orient the Cargo Net with the pouch facing the rear of the vehicle, and attach the upper loops of the Cargo Net to the T-Anchor as shown.</p>
		<b>Ensure upper loops are secure to T-Anchors.</b>

2		
NOTE		<p>A. For lower vertical installation, attach the Long Hooks to the side D-Rings as shown.</p>
		<b>Ensure the hooks are secure to D-Rings.</b>

3		
NOTE		<p>A. To secure the rear panel of the net, attach each Short Hooks to the sewn loops at the bottom of the front panel as shown.</p>
		<b>Ensure lower short hooks are secure to sewn loop.</b>

4		
NOTE		<p>A. For horizontal installation, locate the four (4) D-Ring attachment points.                  B. Position the net as shown above.                  C. Attach the two (2) Short Hooks to the rear D-Rings as shown.                  D. Attach the two (2) Long Hooks to the front D-Rings as shown.</p>
		<b>Ensure hooks are secure to D-Rings.</b>

**Visual Check**

	Item to be Checked
	Ensure upper loops are secure to T-Anchors (Vertical Position).
	Ensure short hooks are secure to sewn loops (Vertical Position).
	Ensure hooks are secure to D-Rings.

	Result
	Upper loops are secure to T-Anchors (Vertical Position).
	Short hooks are secure to sewn loops (Vertical Position).
	Hooks are secure to D-Rings.