

# Genuine Accessories



**Vehicle Model:** Palisade

**Model Year:** 2020~

**Part No.:** S8F46 AK000

**Language:** English

**Rev. Date:** 3/19/2019

**Accessory:** Splash Trims, Front

**Difficulty:** ( B )

**Note:** Difficulty stated above reflects the minimum level of expertise required to install the accessory:  
 (A) Customer  
 (B) Dealer Technician  
 (C) Master Technician or Specialist

**Electronic Installation Instructions**

If this is a printed copy of the installation instructions, ensure you have the latest revision by scanning the QR code or by entering the website address listed below before beginning installation. Use the latest revision date as noted by "Rev. Date" above.

[www.hyundaiaccessories.com/admin\\_media\\_uploads/installationSheets/s8f46\\_ak000.pdf](http://www.hyundaiaccessories.com/admin_media_uploads/installationSheets/s8f46_ak000.pdf)

**Instructional Symbols / Definitions**

 Denotes warnings that may lead to serious physical injury or vehicle damage	 Denotes quality processes to be checked prior to moving to the next step	Denotes personal protective equipment (PPEs) that may be required for a step. Examples of safety equipment icons noted below:   Glasses  Gloves  Mask  Hearing Protection
 Denotes cautions to be taken to avoid physical injury or electronic component damage	 Denotes specific tools that are necessary to complete a step	
 Denotes cautions to be taken to avoid vehicle and component damage	<div style="border: 1px solid black; padding: 2px; text-align: center; width: 20px; margin: 0 auto;">                     N O T E                 </div> Denotes important information to be reviewed during the step	

**Basic Required Tools**

**#2 Phillips  
Screwdriver**

**Part Weight (Gross)**

<b>0.37</b>	lbs
<b>0.17</b>	kg

**FMVSS 110 Compliance Information**

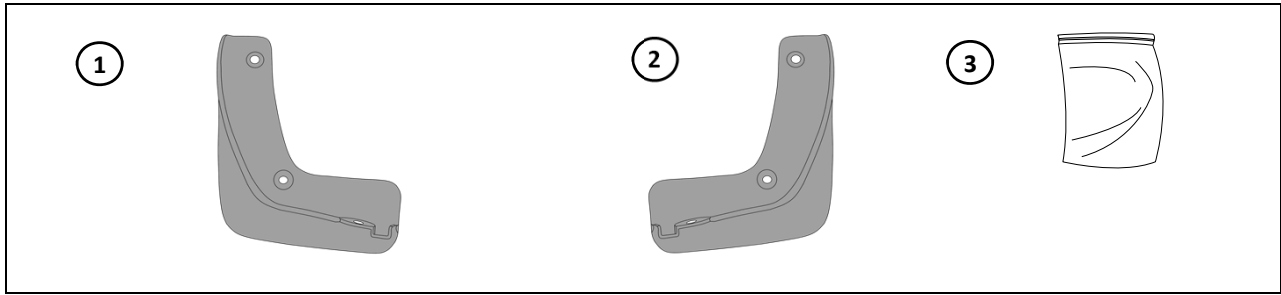
All dealers must determine if the Net weight they have added in the form of all options or accessories, when added to the weight of all Port/Dealer Installed options or accessories, exceeds the lesser of 1.5% of GVWR or 100 lbs. If the additional weight does exceed the lesser of the indicated thresholds, a "Load Carrying Capacity Reduced" label must be installed. A black, fine-point, indelible marker must be used to write by hand onto the label, the reduced carrying capacity in kilograms or pounds, which is the total weight of all added options and accessories.  
**Load Label Part Number: NP070 - 09003**

**Notes to the installer:**

- 1) Read the entire Installation Instructions prior to beginning the installation of the part.
- 2) Make sure the vehicle is completely clean and dry in the area(s) the part is to be installed.
- 3) Ensure the vehicle is properly protected in the area(s) that the accessory is to be installed.
- 4) NEVER place tools on painted surfaces, seating surfaces, dash pad, console or floor carpet/mats.
- 5) Always wear appropriate personal protective equipment, including gloves, safety glasses, etc., when required.



# Genuine Accessories

## Kit Overview


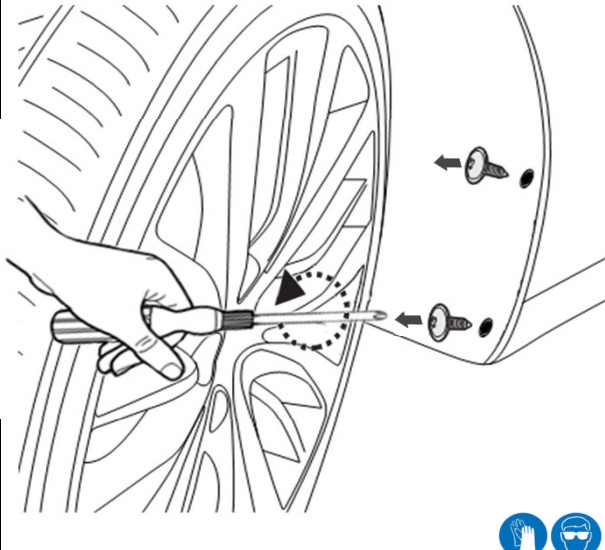





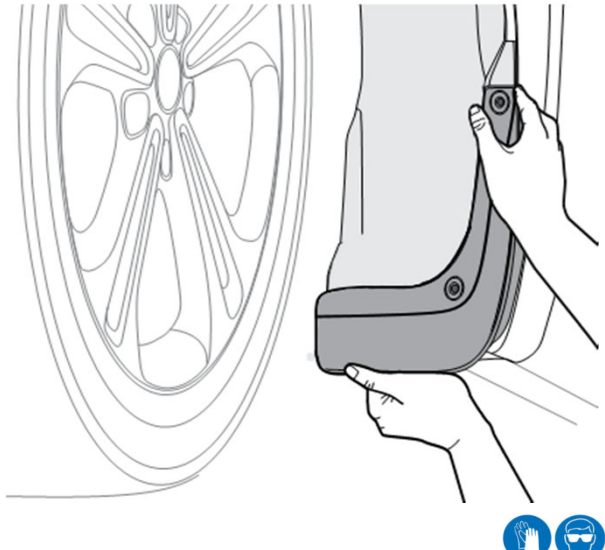



No.	Qty	Description
1	1	Front Splash Trim LH
2	1	Front Splash Trim RH
3	1	Hardware Bag


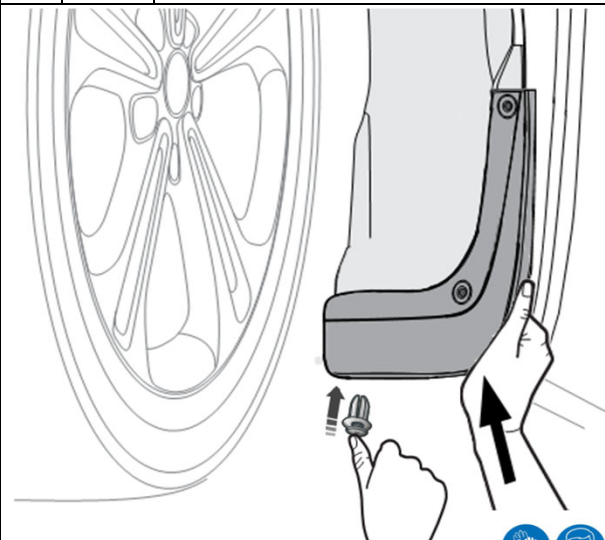



## Hardware Kit Contents


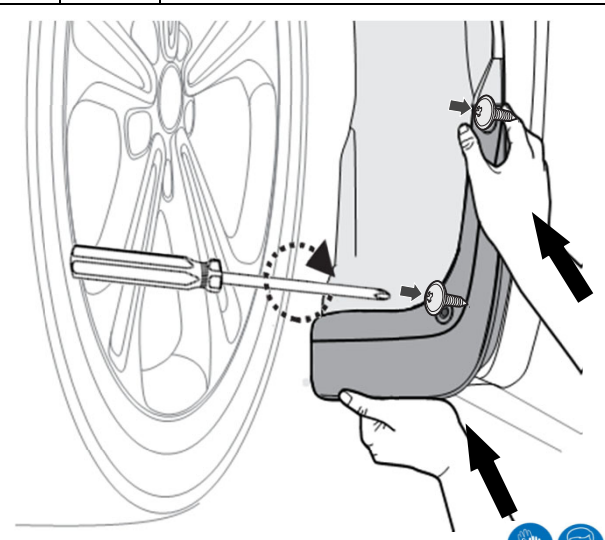



A		B	
4	Screw	2	Plastic Retainer

Hardware Kit Total
6

1		#2 Phillips Screwdriver
		
N O T E	<p><b>NOTE:</b> Fully turn the steering wheel to the left when installing the driver's side front splash trim (LH) and fully turn the steering wheel to the right when installing the passenger's side front splash trim (RH).</p> <p>A. Starting on the driver's side front wheel well area, remove the two (2) screws as shown.</p> <p>B. Discard the removed hardware.</p>	
 		



2		
		
N O T E	<p>A. Align the driver's side front splash trim (LH) as shown ensuring a proper fit.</p>	
 		
 <p>Make sure to push the splash trim upward and inward during the installation to eliminate any possible gaps.</p>		

3		
		
N O T E	<p>A. Insert one (1) provided retainer into the bottom hole as shown. Make sure to push in the center portion of the plastic retainer to lock the retainer in place.</p>	
 		
 <p>Make sure to push the splash trim upward and inward during the installation to eliminate any possible gaps.</p>		

4		#2 Phillips Screwdriver
		
N O T E	<p>A. While pushing the splash trim upward and inward as shown, insert and fasten two (2) provided screws as shown.</p> <p>B. Repeat steps 1-4 for passenger's side front splash trim (RH).</p> <p>C. Installation is complete.</p>	
 		
 <p>Check for any visible gaps. If any gaps exceed 0.5mm, loosen the mounting screws and refit the splash trim(s) to the body to decrease or eliminate the gaps. Be careful not to over-tighten or strip the screw head.</p>		

## Genuine Accessories

**Visual Check**

	Item to be Checked	Result
	Make sure to push the Front Splash Trims upward and inward during the installation to eliminate any possible gaps.	Front Splash Trims are properly aligned.
	Check for any visible gaps. If any gaps exceed 0.5mm, loosen the mounting screws and refit the splash trim(s) to the body to decrease or eliminate the gaps.	Any visible gaps do not exceed 0.5mm.