



## Hyundai Genuine Accessories

Vehicle Models

Model Year

Part No.

Accent 4 Door / Elantra 4 Door

Elantra Coupe / Sonata

2014~ (Accent)

2014~ 2016 (Elantra)

2015~ (Sonata)

2017~ (Elantra)

00018 ADUP2 / 00018 ADU02

Accessory

Difficulty

Cargo Hook











( B )

- Accessory Installation


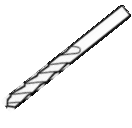













**Note:** Difficulty stated above reflects minimum level of expertise required to install the accessory

( A ) Customer ( B ) Dealer Technician ( C ) Master Technician

### Instructional Symbols / Definitions

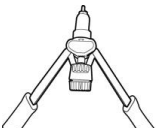	Denotes warnings that may lead to serious physical injury or vehicle damage.		Denotes quality processes to be checked prior to moving to the next step.	Denotes safety equipment required to be used such as a mask, goggles, rubber gloves, and hearing protection.	
	Denotes cautions to be taken to avoid physical injury or electronic component damage.		Denotes specific tools that are necessary to complete the step.		
	Denotes cautions to be taken to avoid vehicle and component damage.		Denotes instructional steps necessary to complete the process.		
				Mask	Goggles
				Rubber Gloves	Hearing Protection

### Basic Required Hand Tools

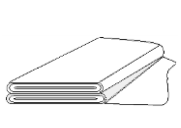
					
Electric Drill	1/8" Drill Bit	3/8" Universal Step Drill	1/8" Drill Stop	10mm Socket	Center Punch
					
Deburring Tool	Primer	Rivnut® Tool	Ratchet	Torque Wrench	Tape
			<b>FMVSS 110 Compliance Information</b>  <b>Part Number:</b> 00018 ADUP2 00018 ADU02  0.3 lbs 0.14 kg (Gross Weight)		
Vacuum Cleaner	Clean Cloth	Scissors			

### Notes to the Installer:

- 1) Read the entire installation instructions prior to beginning the installation of this accessory.
- 2) Make sure the vehicle is completely clean before the accessory installation.
- 3) Ensure the vehicle is properly protected in the area(s) that the accessory is to be installed.
- 4) To prevent vehicle damage, never place tools on top of painted surfaces, seat, dash pad, console or floor carpet / mats.
- 5) Always wear appropriate safety gear to include gloves and safety glasses when required.
- 6) Make sure there are no metal chips on trunk floor after install is completed.

All dealers must determine if the weight they have added in the form of all options or accessories, when added to the weight of all Port/Dealer Installed options or accessories, exceeds the lesser of 1.5% of GVWR or 100 lbs. If the additional weight does exceed the lesser of the indicated thresholds, a "Load Carrying Capacity Reduced" label must be installed. A black, fine-point, indelible marker must be used to write by hand onto the label, the reduced carrying capacity in kilograms or pounds, which is the total weight of all added options and accessories.  
Load Label Part Number: NP070 - 09003

## Hyundai Genuine Accessories


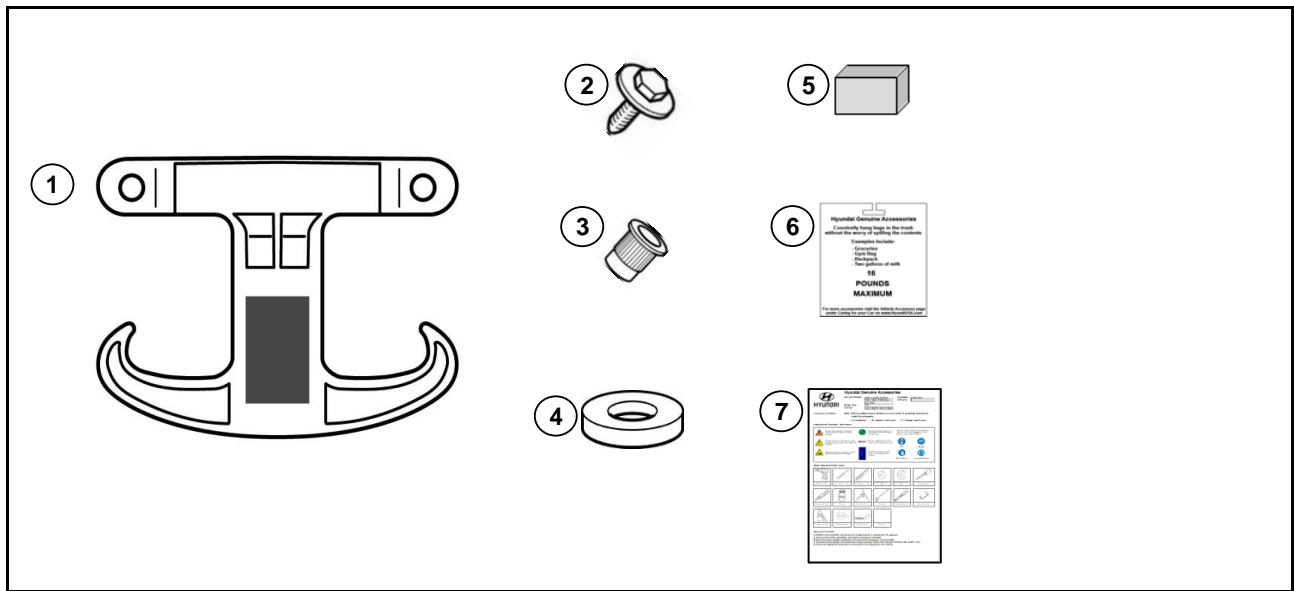


No.	Qty.	Description
1	1	Cargo Hook
2	2	M6 Bolt
3	2	Rivnut®
4	2	M6 Washer
5	1	Foam Block
6	1	Marketing Card
7	1	Installation Instructions

**NOTE:** For 2017~ Elantra, the M6 washers are only used for this application.  
 In addition, the Cargo Hook is installed rearwards.  
 Mounting the Cargo Hook forward is possible if the customer desires.

## Hyundai Genuine Accessories

### Accent 4DR Template Location

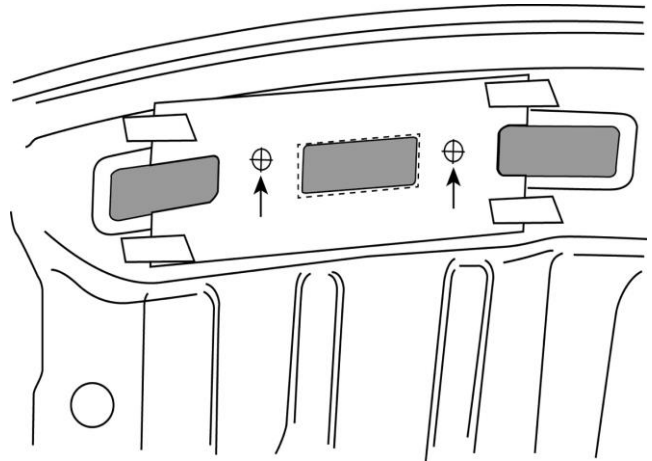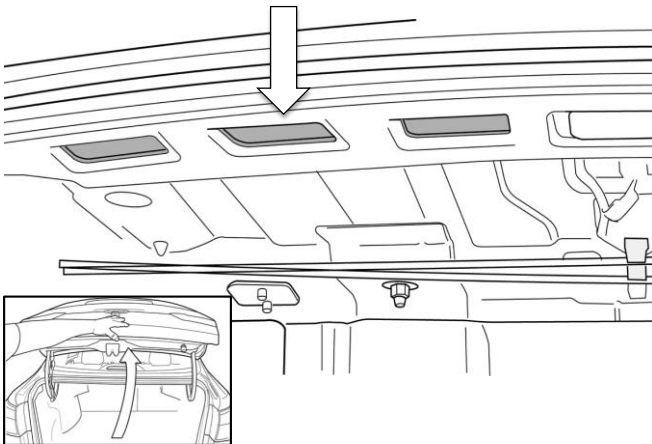

Clean Cloth

1

**NOTE**

1. Open trunk lid.
2. Cover vehicle floor panel and bumper with a Clean Cloth.
3. Locate installation position, (left side of trunk) as shown above
4. If a second hook is being installed, the installation position is symmetrically on the right side of trunk.



Prior to installation, confirm the correct mounting location based on the vehicle model that the Cargo Hook will be installed.



Scissors and Tape

2



**NOTE**

1. Obtain proper template located at the end of these installation instructions. Using scissors, cut out the template along the hash lines, including the center portion.
2. Apply tape and orient template to the package shelf opening such that the template aligns to the Two dimples as noted above by hash marks.
3. Fully adhere the template to the package shelf and visually inspect for proper orientation (Accent 4DR template shown above).
4. Ensure template is properly oriented and fully seated as shown.



Confirm template is flat against metal surfaces to ensure proper alignment of the two hole positions.

### 2014~ 2016 Elantra 4DR/ 2014~ Elantra Coupe Template Location

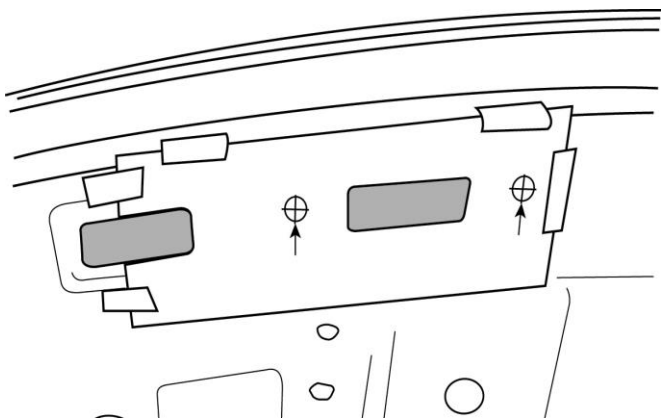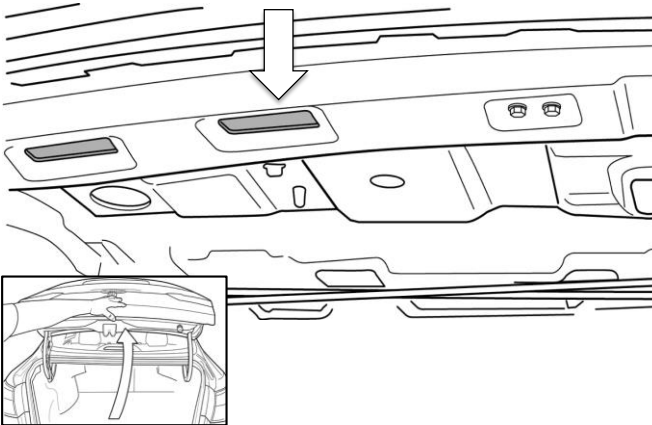

Clean Cloth

3

**NOTE**

1. Open trunk lid.
2. Cover vehicle floor panel and bumper with a Clean Cloth.
3. Locate installation position, (left side of trunk) as shown above (left of luggage lamp) for the applicable vehicle.
4. If a second hook is being installed, the installation position is symmetrically on the right side of trunk.



Prior to installation, confirm the correct mounting location based on the vehicle model that the Cargo Hook will be installed.



Scissors and Tape

4



**NOTE**

1. Obtain proper template located at the end of these installation instructions. Using scissors, cut out the template along the hash lines, including the center portion.
2. Apply tape and orient template to the package shelf opening such that the template aligns to the opening and surrounding surface structures.
3. Fully adhere the template to the package shelf and visually inspect for proper orientation (Elantra 4DR /Elantra Coupe template shown above).
4. Ensure template is properly oriented and fully seated as shown.



Confirm template is flat against metal surfaces to ensure proper alignment of the two hole positions.



## 2017~ Elantra Template location

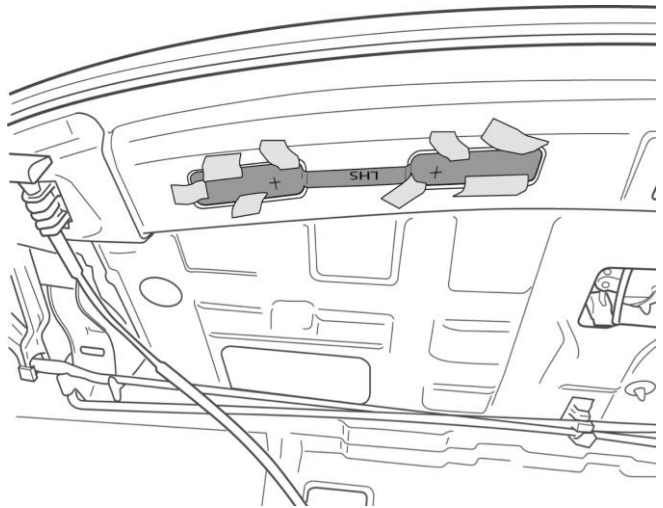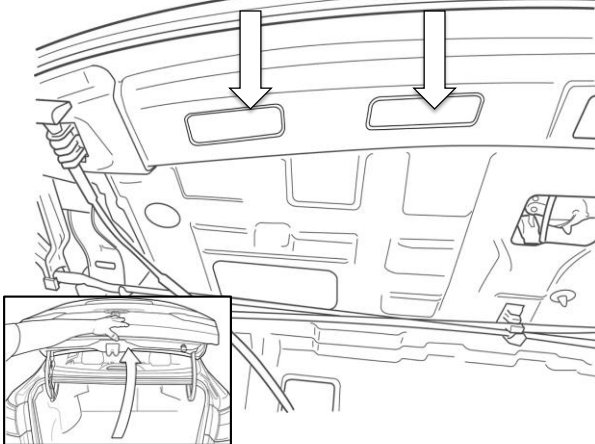

	Clean Cloth	5
NOTE	<ol style="list-style-type: none"> <li>1. Open trunk lid.</li> <li>2. Cover vehicle floor panel and bumper with a Clean Cloth.</li> <li>3. Locate installation position, (left side of trunk) as shown above</li> <li>4. If a second hook is being installed, the installation position is symmetrically on the right side of trunk.</li> </ol>	
	Prior to installation, confirm the correct mounting location based on the vehicle model that the Cargo Hook will be installed.	

	Scissors and Tape	6
NOTE	<ol style="list-style-type: none"> <li>1. Obtain proper template located at the end of these installation instructions. Using scissors, cut out the template along the hash lines, including the center portion.</li> <li>2. Apply tape and orient template to the package shelf opening such that the template aligns to the two dimples as noted above by hash marks.</li> <li>3. Fully adhere the template to the package shelf and visually inspect for proper orientation (2017~ Elantra 4DR template shown above).</li> <li>4. Ensure template is properly oriented and fully seated as shown.</li> </ol>	
	Confirm template is flat against metal surfaces to ensure proper alignment of the two hole positions.	


## Sonata Template Location

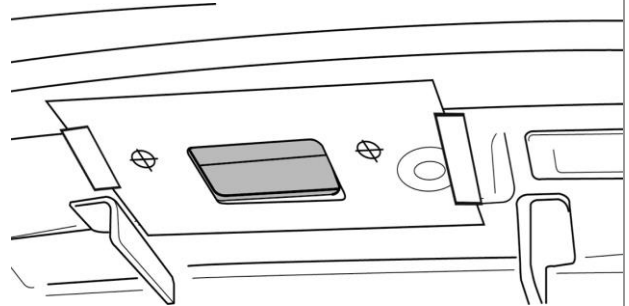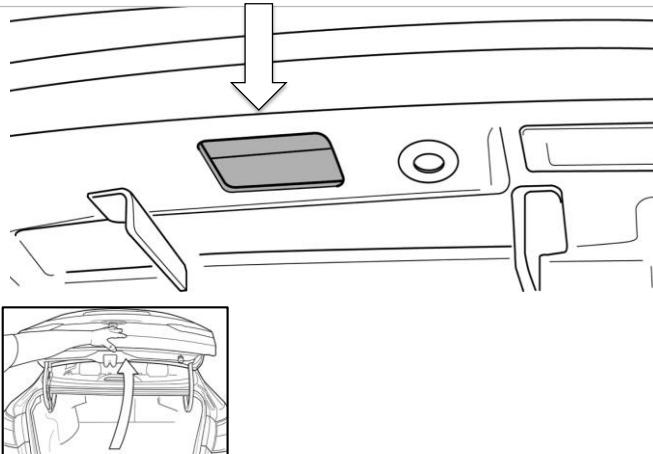

	Clean Cloth	7
NOTE	<ol style="list-style-type: none"> <li>1. Open trunk lid.</li> <li>2. Cover vehicle floor panel and bumper with a Clean Cloth.</li> <li>3. Locate installation position, (left side of trunk) as shown above (left of luggage lamp) for the applicable vehicle.</li> <li>4. If a second hook is being installed, the installation position is symmetrically on the right side of trunk.</li> </ol>	
	Prior to installation, confirm the correct mounting location based on the vehicle model that the Cargo Hook will be installed.	


	Scissors and Tape	8
NOTE	<ol style="list-style-type: none"> <li>1. Obtain proper template located at the end of these installation instructions. Using scissors, cut out the template along the hash lines, including the center portion.</li> <li>2. Apply tape and orient template to the package shelf opening such that the template aligns to the opening and surrounding surface structures.</li> <li>3. Fully adhere the template to the package shelf and visually inspect for proper orientation (Sonata template shown above).</li> <li>4. Ensure template is properly oriented and fully seated as shown.</li> </ol>	
	Confirm template is flat against metal surfaces to ensure proper alignment of the two hole positions.	

## Hyundai Genuine Accessories

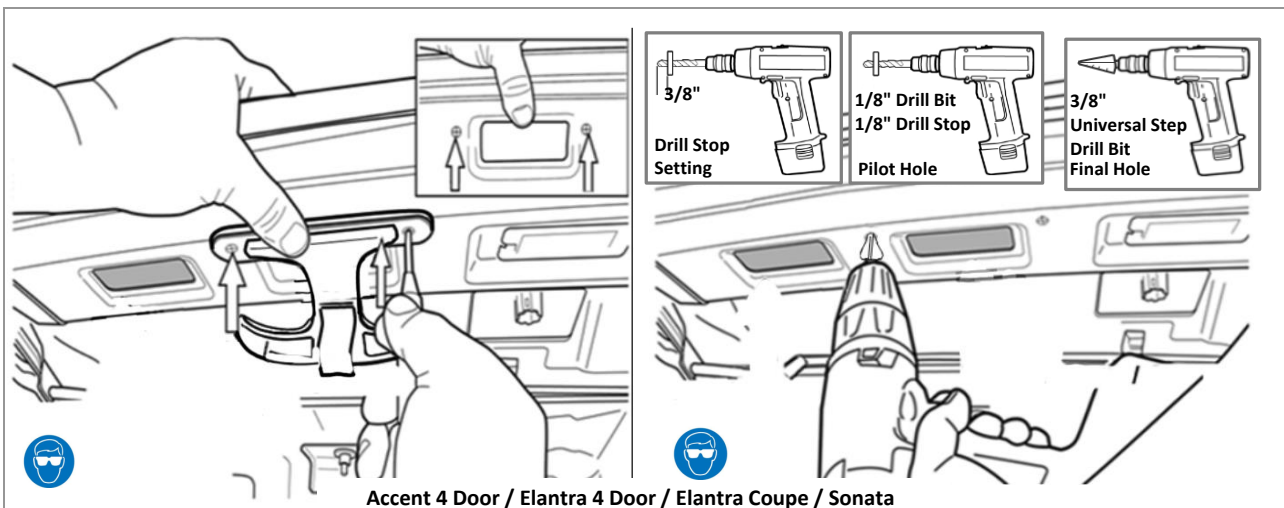

Accent 4 Door / Elantra 4 Door / Elantra Coupe / Sonata

Center Punch <span style="float: right;">9</span>	Electric Drill, 1/8" Drill Stop, 1/8" Drill Bit, and 3/8" Universal Drill Bit <span style="float: right;">10</span>
<p><b>NOTE</b></p> <ol style="list-style-type: none"> <li>1. With one hand, hold the Cargo Hook flat against the template and confirm proper alignment of the template.</li> <li>2. Align the center punch over each of the marked positions (cross hairs) on the template.</li> <li>3. Mark each drill location with the center punch.</li> <li>4. Remove rear edge of template and visually confirm the punch marks are in a position clear from the radius of the package shelf opening to safely use a Universal Step Drill Bit.</li> <li>5. Remove the template.</li> </ol> <p>Confirm the cargo hook is flat against the metal surface to ensure proper alignment of the holes prior to using the center punch.</p> <p>Once the two locations are marked, visually confirm they are equally spaced outside the opening and the final 3/8" diameter hole will not contact the radius near the opening.</p> <p> If mark is too close to the radius near opening, reinstall the template and confirm placement of the Cargo Hook prior to using the center punch.</p> <p>Confirm the correct mounting location based on the vehicle model that the Cargo Hook will be installed.</p>	<p><b>NOTE</b></p> <ol style="list-style-type: none"> <li>1. Install the 1/8" drill stop 3/8" from the tip on the 1/8" drill bit.</li> <li>2. Visually confirm that no harness is routed over the point of the hole to be drilled.</li> <li>3. Drill a straight pilot hole through panel of package tray. Repeat process on second marked point.</li> <li>4. Replace the 1/8" drill bit with the Universal Step Drill.</li> <li>5. Using the Universal Step Drill bit, open the two pilot holes. Drill to the 3/8" step position at a slow rate through panel of package tray.</li> </ol> <p>Prior to drilling, ensure the correct location on the vehicle the cargo hook will be installed into.</p> <p>Do not oversize the 3/8" Universal Step Drill hole.</p> <p> Be cautious not to bend panel hole opening when drilling. Bending or ovaling a hole will result in difficulty to insert the Rivnut® and poor retention strength.</p> <p>Ensure after drilling, make sure the trunk floor is cleaned of all metal pieces.</p>

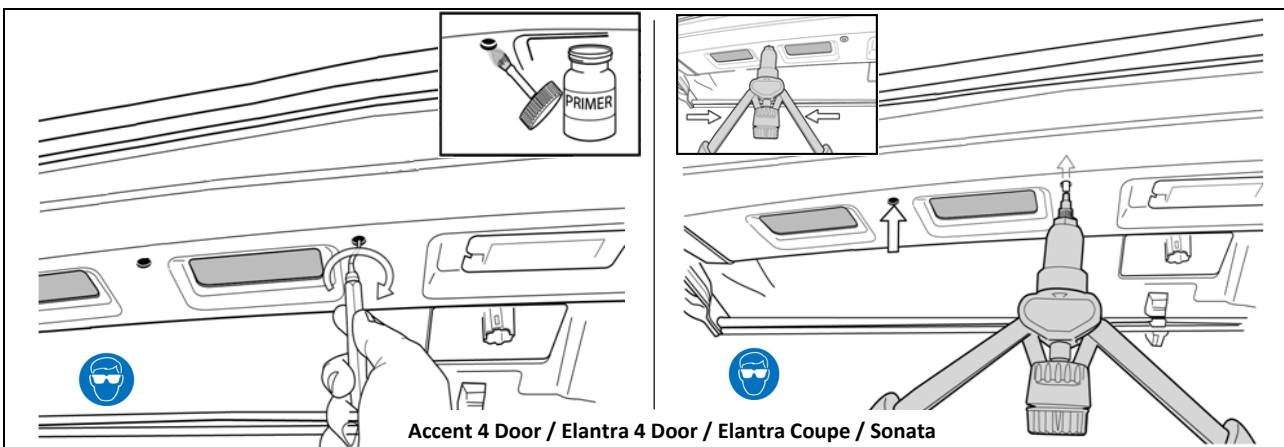



Accent 4 Door / Elantra 4 Door / Elantra Coupe / Sonata

Deburring Tool and Primer <span style="float: right;">11</span>	Rivnut® Tool <span style="float: right;">12</span>
<p><b>NOTE</b></p> <ol style="list-style-type: none"> <li>1. Deburr the two (2) holes with the Deburring Tool ensuring no burrs remain.</li> <li>2. Once deburred, apply Primer.</li> <li>3. Allow the primer to dry (approximately 5 minutes) dependent on environment conditions.</li> </ol> <p> Be careful to ensure the primer does not get on the vehicle, other than the required exposed areas.</p>	<p><b>NOTE</b></p> <ol style="list-style-type: none"> <li>1. Adjust Rivnut® Tool for the proper Rivnut® compression depth required to secure to vehicle panel. Confirm how to adjust Rivnut® Tool through the use of the manufacture instructions.</li> <li>2. Install two (2) Rivnuts® using the Rivnut® tool in both drilled hole locations.</li> </ol> <p> Confirm that the Rivnut® is secured and flush to vehicle panel once installed.</p>



## Hyundai Genuine Accessories

If Installing on 2017~ Elantra Sedan, proceed to Step 15.

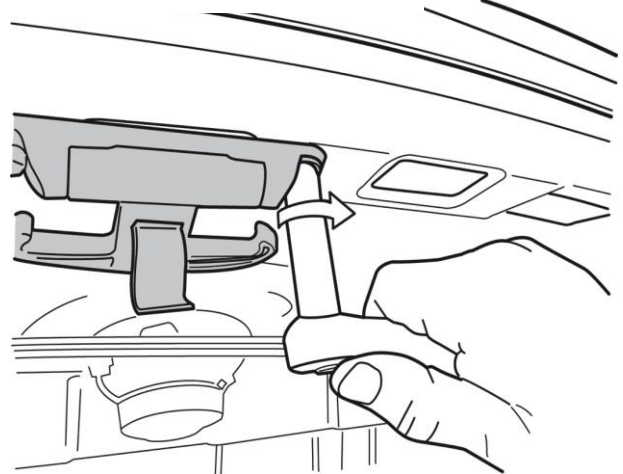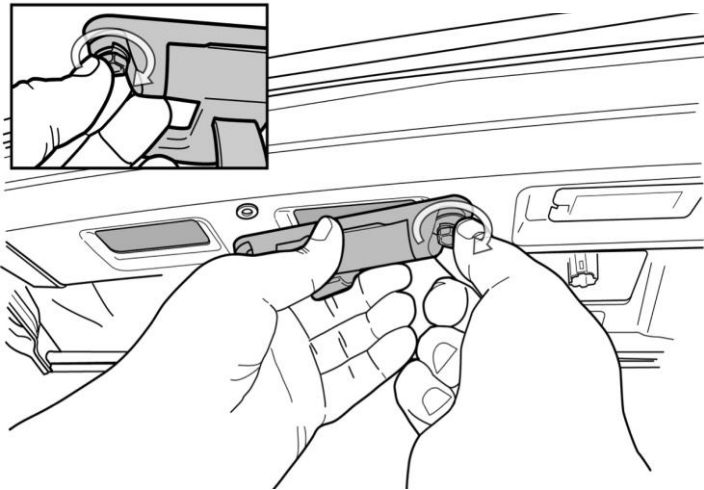

13

**NOTE**

1. Orient the Cargo Hook so it folds forward towards the front of vehicle.
2. Hand tighten two (2) supplied M6 bolts through base of the Cargo Hook and into the previously installed Rivnuts®.



Ratchet, Torque Wrench and 10mm Socket

14



**NOTE**

1. Using a Ratchet and 10mm Socket, evenly tighten the two (2) M6 bolts until seated.
2. Using a Torque Wrench, tighten the bolts to the following:  
6.8 N.m (0.70 Kgf.m, 5.0 lb-ft.)

**Do not over torque the bolts. This will cause the previously installed Rivnut® to spin in the hole.**



## 2017~ Elantra Sedan Only

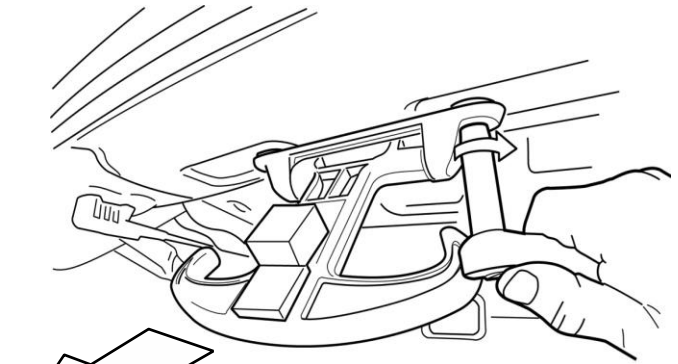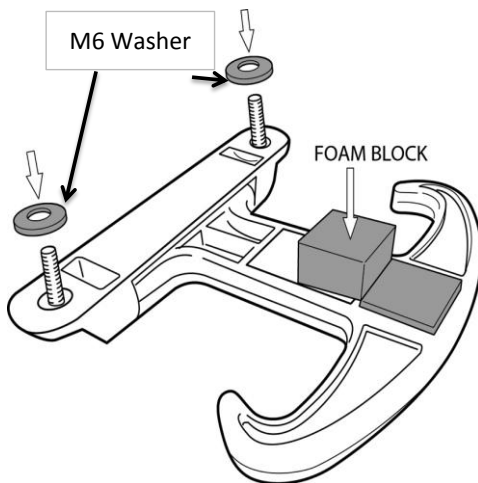

**Hook Folds Toward Rear of Trunk**



15

**NOTE**

1. Adhere foam block onto hook handle as shown.  
NOTE: Step 17, item 2, is not applicable for 2017~ Elantra.
2. Install M6 bolt with washer on top of hook bracket as shown.




16

**NOTE**

1. Orient the cargo hook so that hook folds towards rear of vehicle.
2. Hand tighten the two (2) M6 bolts through base of cargo hook, the washers and into previously installed Rivnut®. Complete installation as noted in step 14 above.





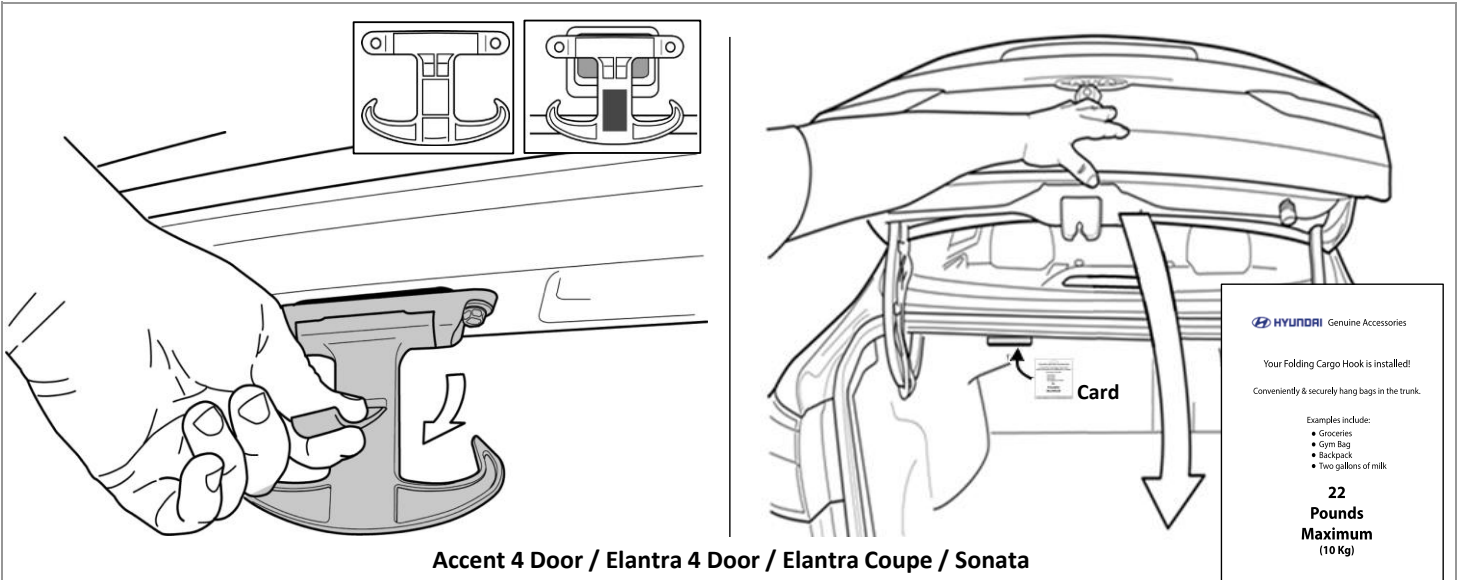



## Hyundai Genuine Accessories



		17		Vacuum Cleaner	18
<b>NOTE</b>	<ol style="list-style-type: none"> <li>1. Lower and raise the cargo hook and visually confirm the position of contact (where the hook touches the body panel).</li> <li>2. Remove the adhesive backing paper from the one (1) provided foam block. Secure to the package tray above the cargo hook as shown and compress to ensure good adhesion between the two surfaces.</li> <li>3. Mechanically confirm the hook lowers and raises freely.</li> <li>4. Visually confirm there are no gaps between hook and the vehicle panel at the fasteners.</li> </ol>		<b>NOTE</b>	<ol style="list-style-type: none"> <li>1. Ensure marketing card is attached to cargo hook.</li> <li>2. Ensure the clean cloth is removed from vehicle luggage area and is clean of all debris.</li> <li>3. If necessary, vacuum vehicle luggage area to remove any metal chips.</li> <li>4. Close trunk lid</li> </ol>	
	<b>The hook should rest in a horizontal position when not in use.</b>				


## Hyundai Genuine Accessories Visual Check

		Results of the check
	Folding Hook	Rests in horizontal position and rotates 90° freely.
	Folding Hook	Sits flush to panel with no gaps.
	M6 Fasteners	Fully seated into folding hooks.
	M6 Washer (2017~ Elantra Only)	Installed between hook bracket and sheet metal.
	M6 Fasteners Torqued	Torque to: 6.8 N.m (0.70 Kgf.m, 5.0 lb-ft.).
	Marketing Card	Ensure card is properly attached to pull strap.


### Care & Cleaning

Wash cargo hook with soapy water as needed. Do not use other chemical based cleaners.




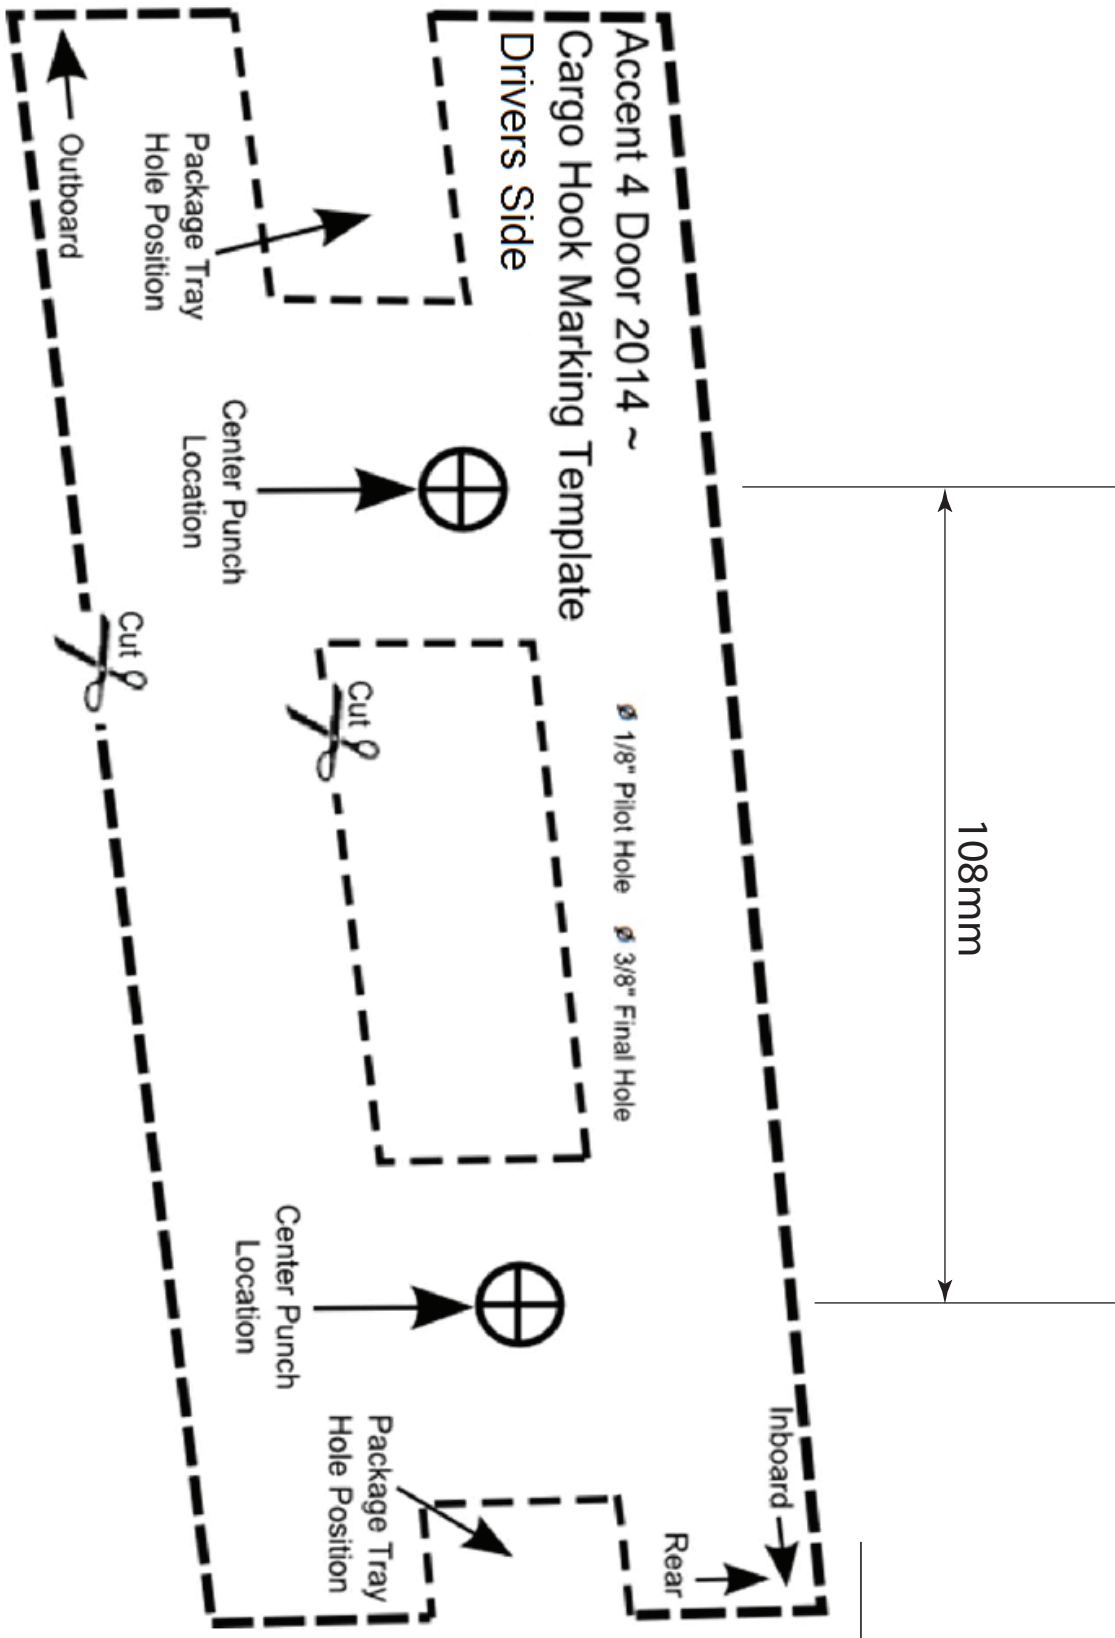

Scale 1:1 (50 mm)  
Printer Setup (Scale = None)

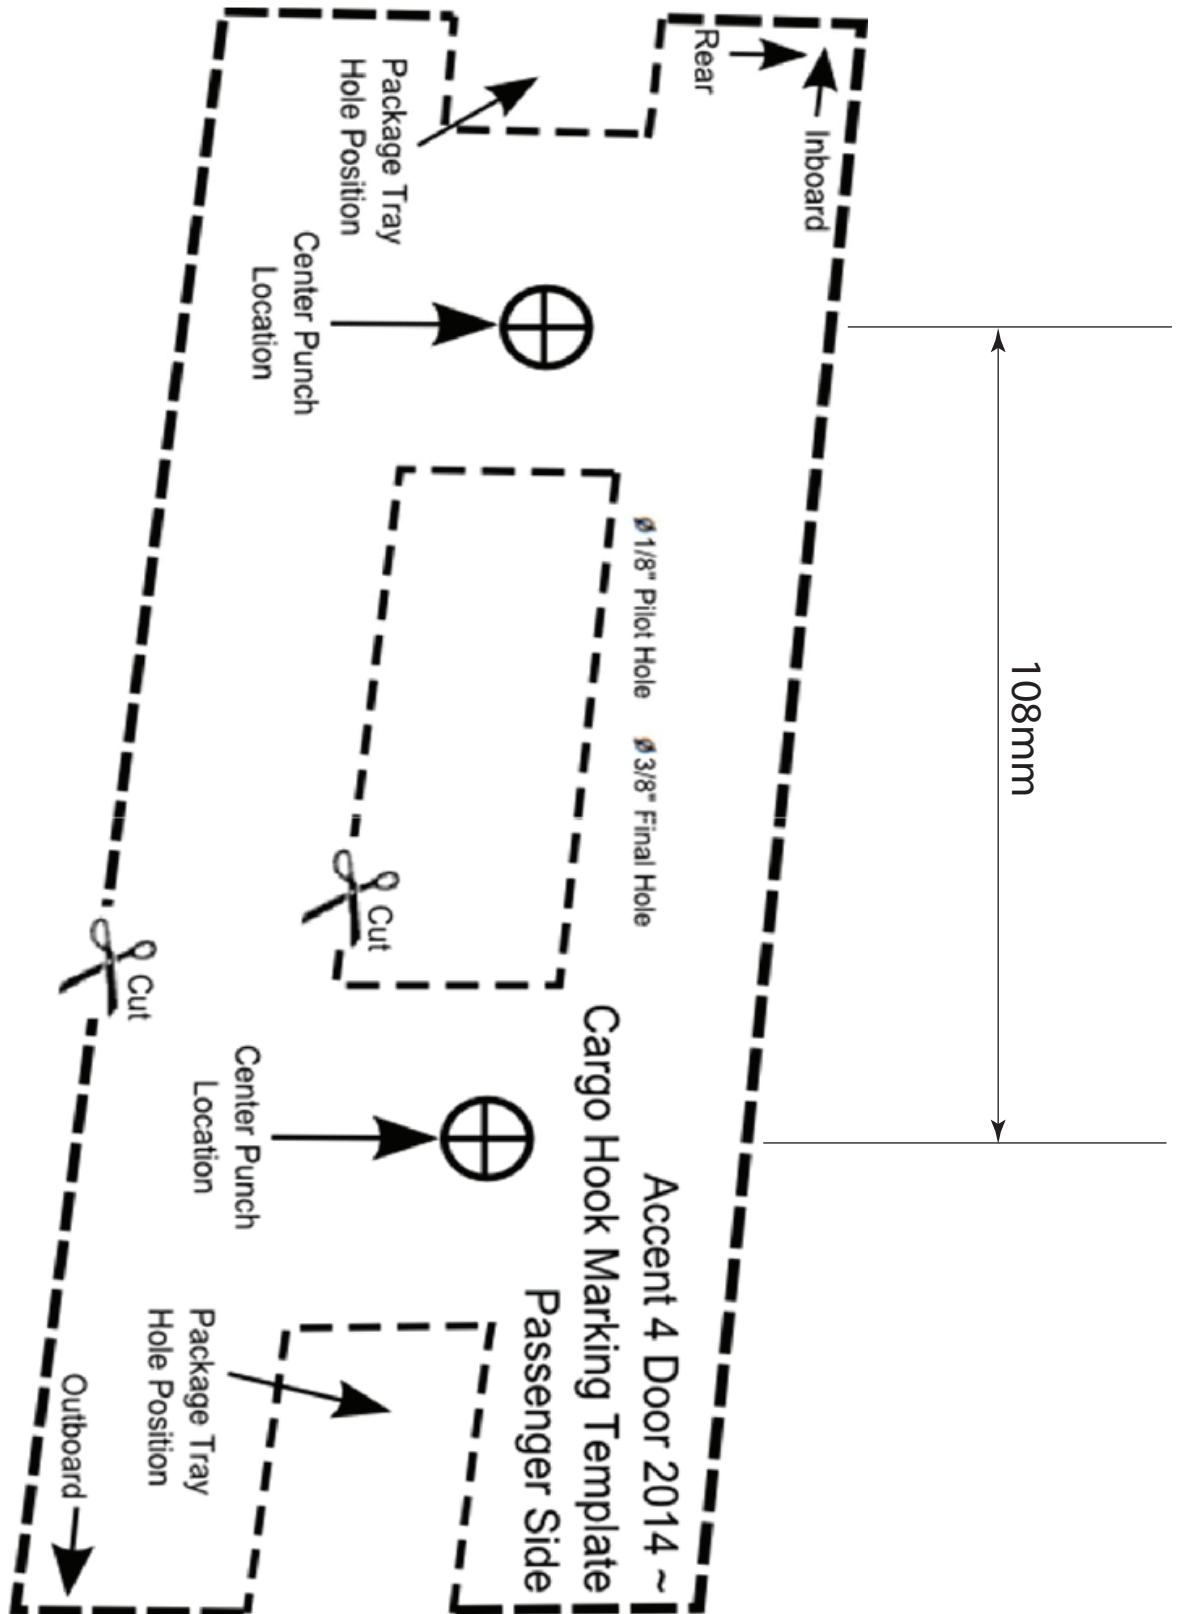


Scale 1:1 (50 mm)  
Printer Setup (Scale = None)

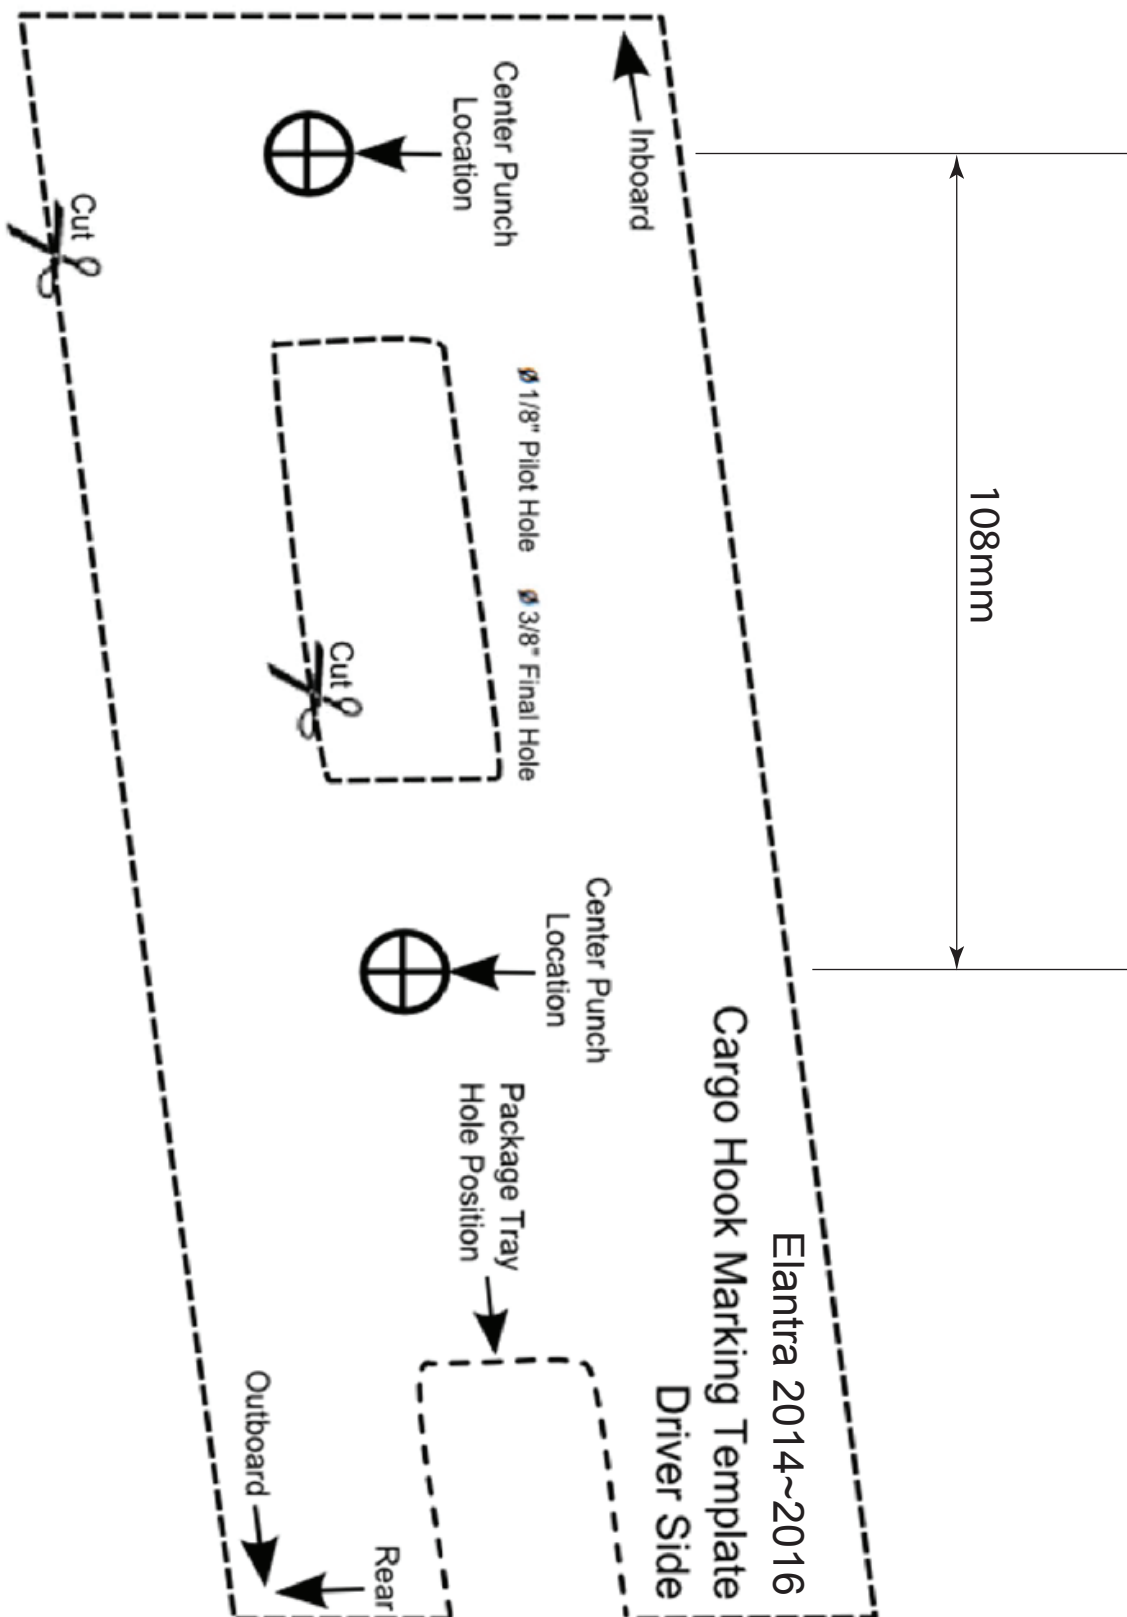

Scale 1:1 (50 mm)



Printer Setup (Scale = None)

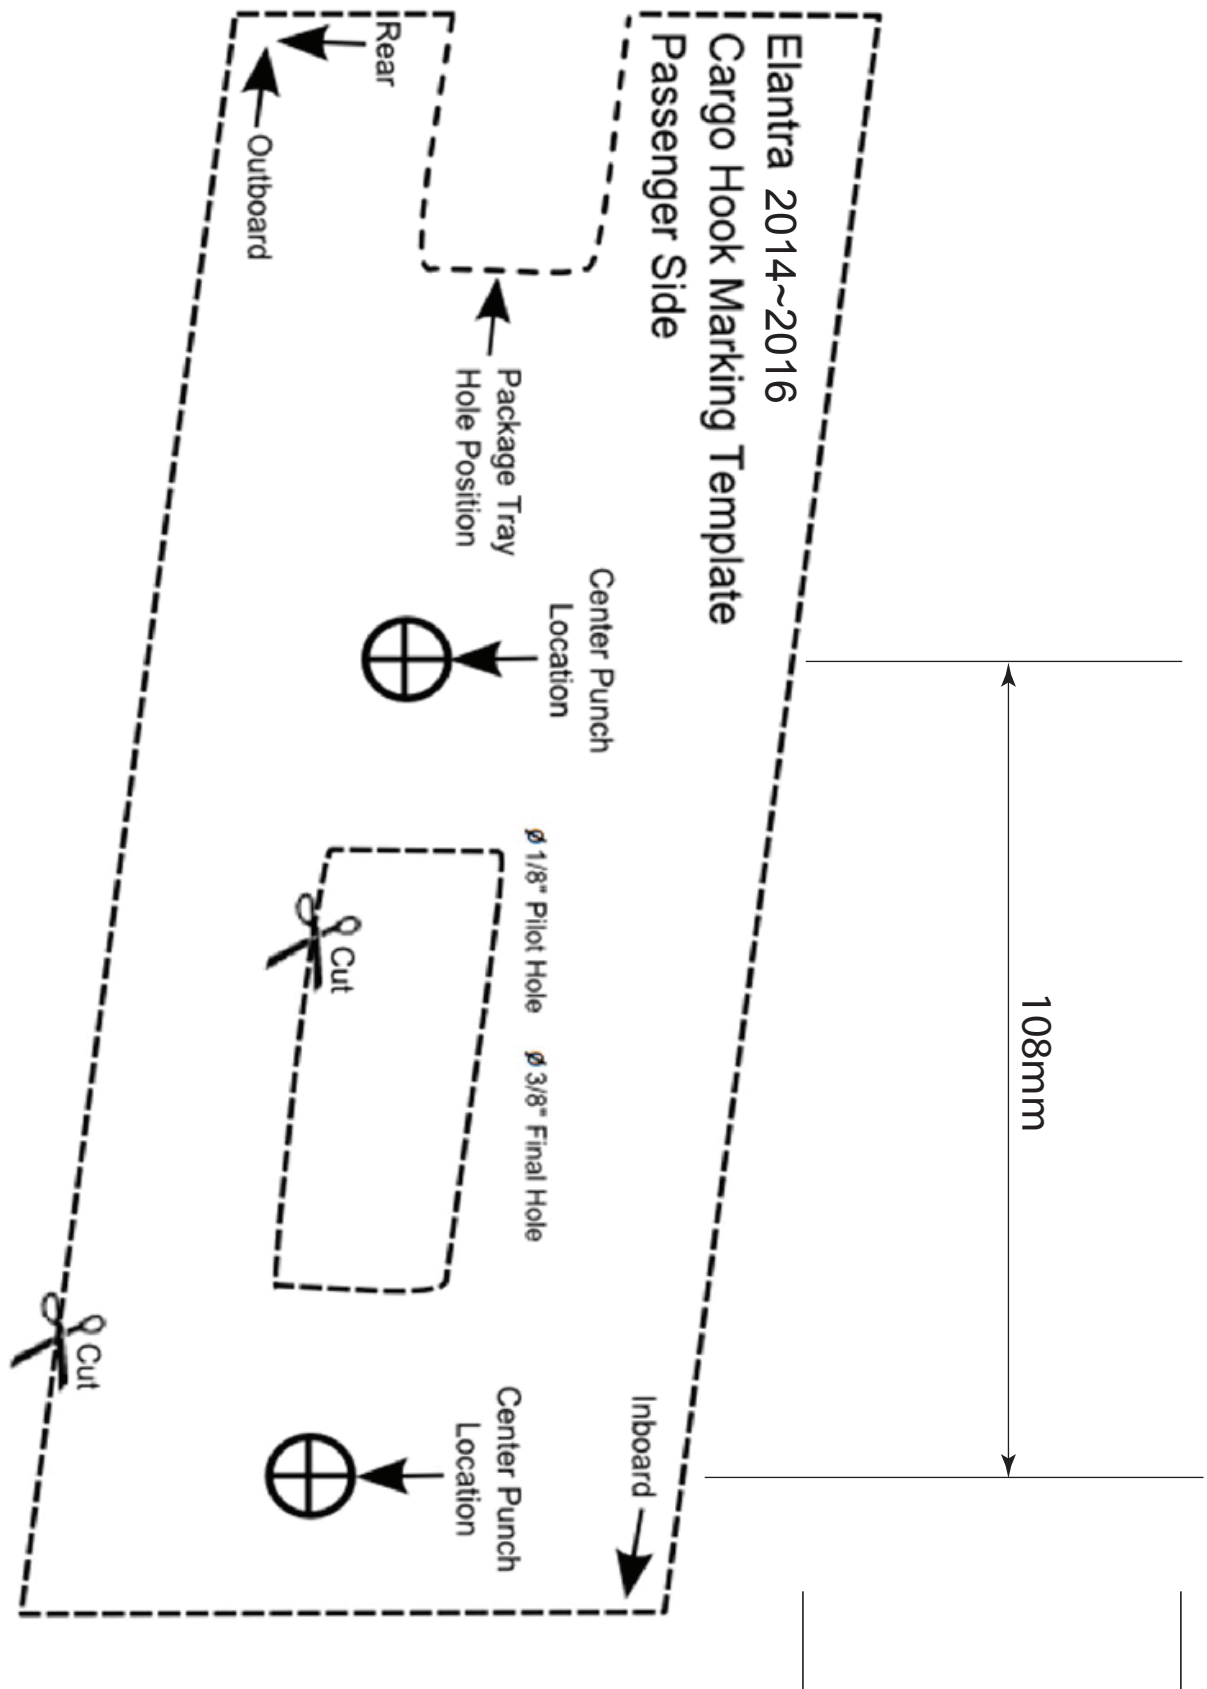

Printer Setup (Scale = None)

108mm

Sonata 2015 ~  
Cargo Hook Marking Template  
Passenger Side

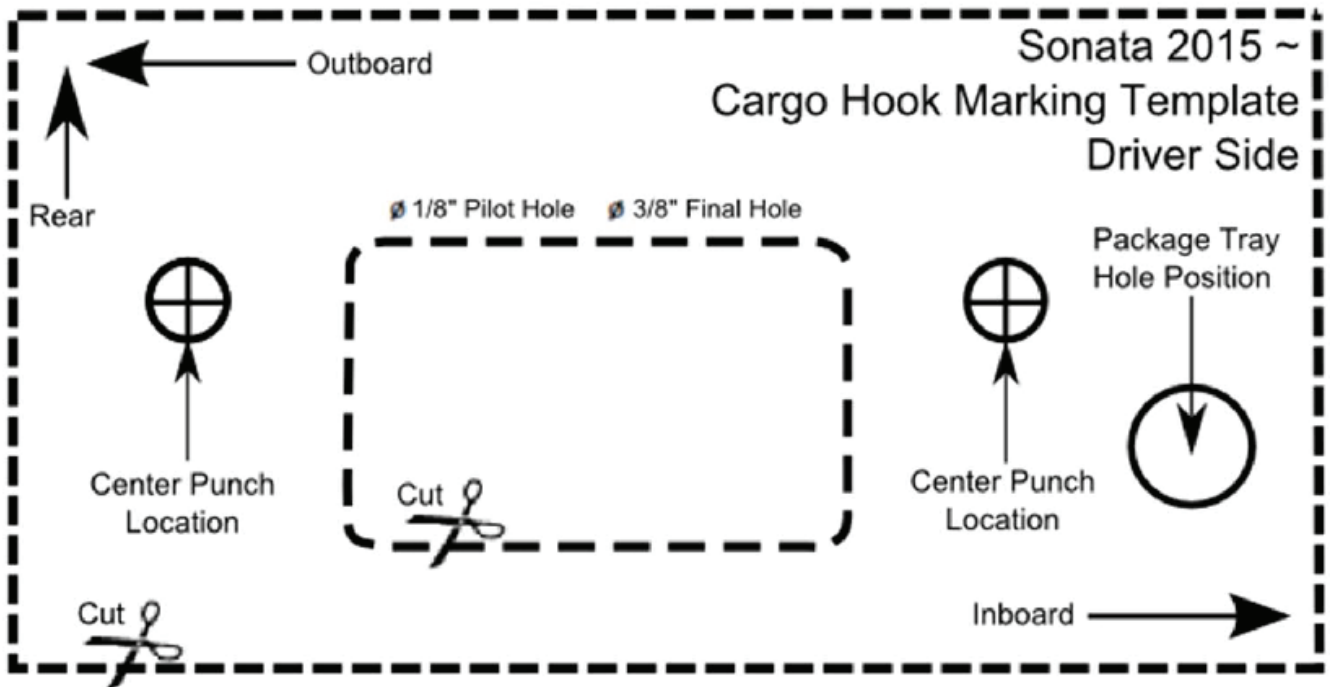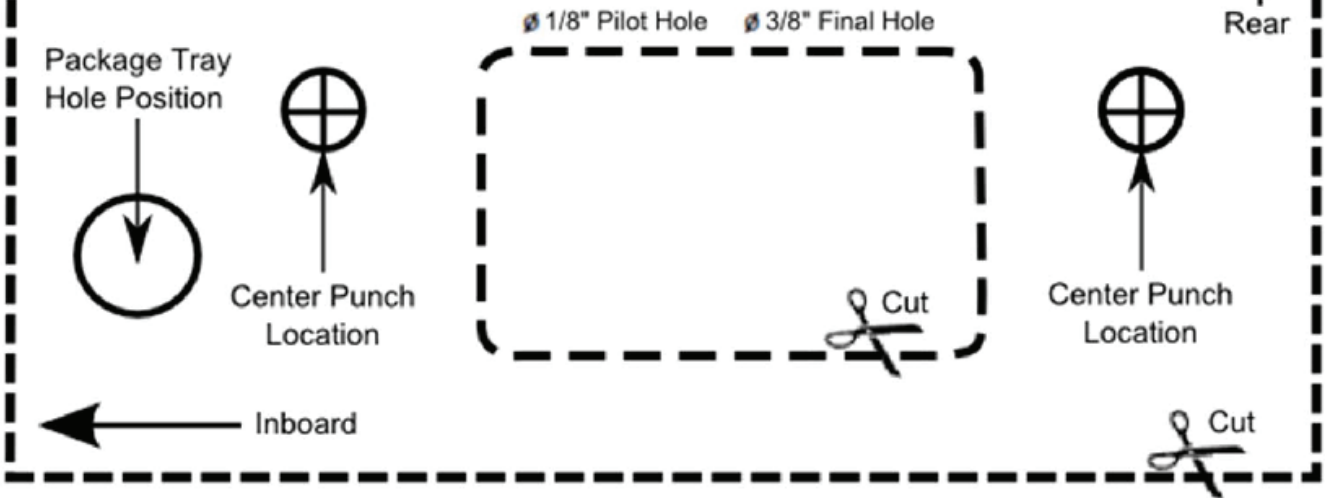


108mm

Scale 1:1 (50 mm)

Printer Setup (Scale = None)

**NOTE: Due to the curvature of the package shelf, the center line to center line dimension of the template is wider than the actual cargo hook part.**

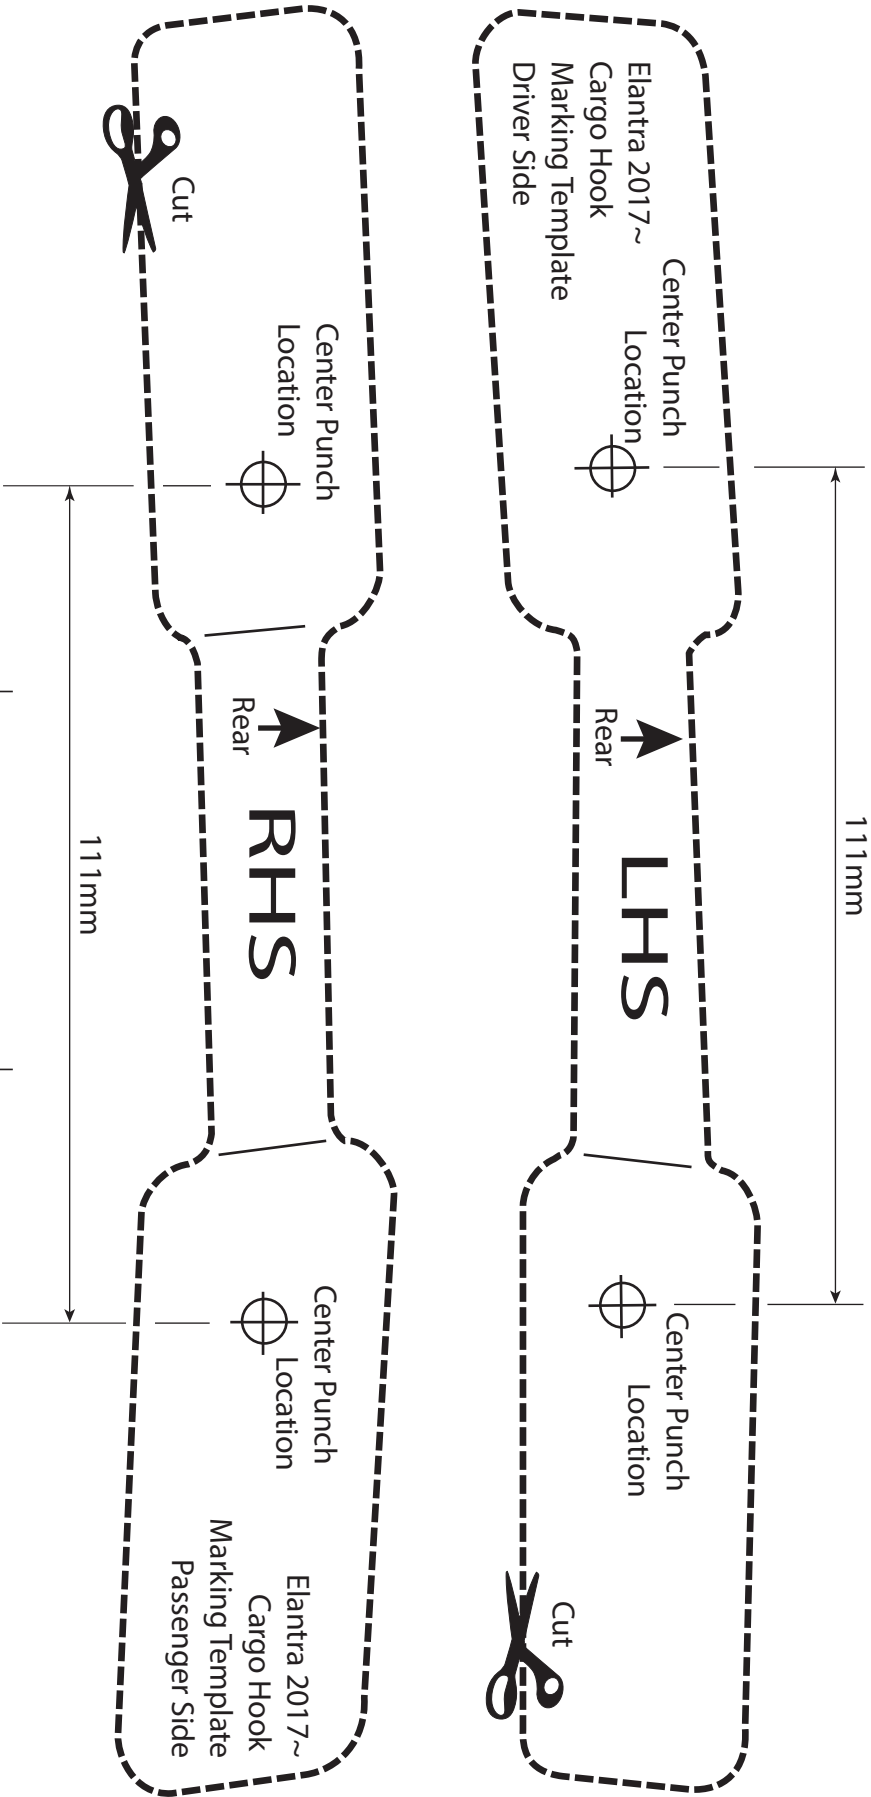

Scale 1:1 (50 mm)

Printer Setup (Scale = None)