

Genuine Accessories



Vehicle Models: Accent 4-DR / Elantra 4-DR

Accessory: Cargo Hook

	Elantra Coupe / Sonata
Model Year	2014~2017 Accent 4-Door
	2014~2016 Elantra Sedan
	2015~2019 Sonata
	2017~ Elantra Sedan
	2018~ Accent
	2020~ Sonata
Part No.	00018 ADU04 (DIO)
	00018 ADUP4 (PIO)
Language	English
Rev. Date	5/1/2019

Difficulty: (B)

Note: Difficulty stated above reflects the minimum level of expertise required to install the accessory.

- (A) Customer
(B) Dealer Technician
(C) Master Technician or Specialist

Electronic Installation Instructions



If this is a printed copy of the installation instructions, ensure you have the latest revision by scanning the QR code or by entering the website address listed below before beginning installation. Use the latest revision date as noted by "Rev. Date" above.

www.hyundaiaccessories.com/admin_media_uploads/installationSheets/00018_ADU04.pdf

Instructional Symbols / Definitions



Denotes warnings that may lead to serious physical injury or vehicle damage



Denotes quality processes to be checked prior to moving to the next step

Denotes personal protective equipment (PPEs) that may be required for a step. Examples of safety equipment icons noted below:



Denotes cautions to be taken to avoid physical injury or electronic component damage



Denotes specific tools that are necessary to complete a step



Glasses



Gloves



Denotes cautions to be taken to avoid vehicle and component damage

**N
O
T
E**

Denotes important information to be reviewed during the step



Mask



Hearing Protection

Basic Required Tools



Electric Drill



1/8" Drill Bit



10mm Drill Bit



1/8" and 10mm Drill Stops



10mm Socket



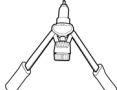
Center Punch



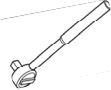
Deburring Tool



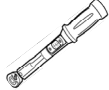
Primer



Rivnut® Tool



Ratchet



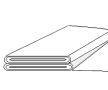
Torque Wrench



Masking Tape



Vacuum Cleaner



Clean Drop Cloth (Large)



Scissors

Part Weight (Gross)

0.30 lbs

0.14 kg

FMVSS 110 Compliance Information

All dealers must determine if the Net weight they have added in the form of all options or accessories, when added to the weight of all Port/Dealer Installed options or accessories, exceeds the lesser of 1.5% of GVWR or 100 lbs. If the additional weight does exceed the lesser of the indicated thresholds, a "Load Carrying Capacity Reduced" label must be installed. A black, fine-point, indelible marker must be used to write by hand onto the label, the reduced carrying capacity in kilograms or pounds, which is the total weight of all added options and accessories.

Load Label Part Number: NP070 - 09003

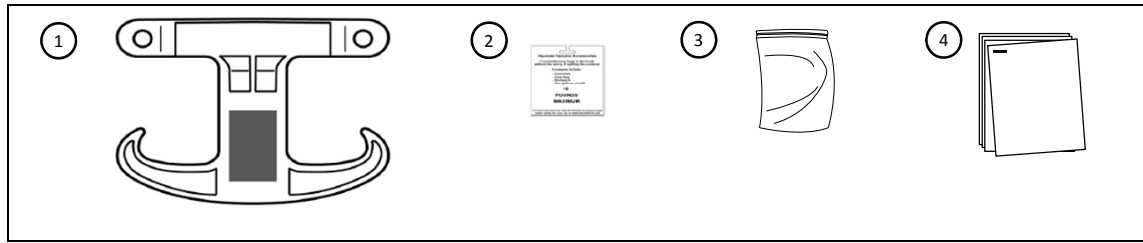
Notes to the installer:

- 1) Read the entire Installation Instructions prior to beginning the installation of this accessory.
- 2) Make sure the vehicle is completely clean and dry in the area(s) the part is to be installed.
- 3) Ensure the vehicle is properly protected in the area(s) that the accessory is to be installed.
- 4) NEVER place tools on painted surfaces, seating surfaces, dash pad, console or floor carpet/mats.
- 5) Always wear appropriate personal protective equipment, including gloves, safety glasses, etc., when required.
- 6) Roll down the driver's window and adjust the power seats (if applicable) prior to disconnecting battery power, if needed.
- 7) **Make sure there are no metal chips on trunk floor after installation is completed.**
- 8) **Very Important: Prior to installation, confirm the correct mounting location based on the vehicle model that the Cargo Hook will be installed. Obtain proper template and ensure it is correctly oriented.**

Revision Date
05/01/2019

Genuine Accessories

Kit Overview



No.	Qty	Description
1	1	Cargo Hook
2	1	Marketing Bag
3	1	Hardware Bag
4	1	Templates (DIO Only)

Hardware Overview



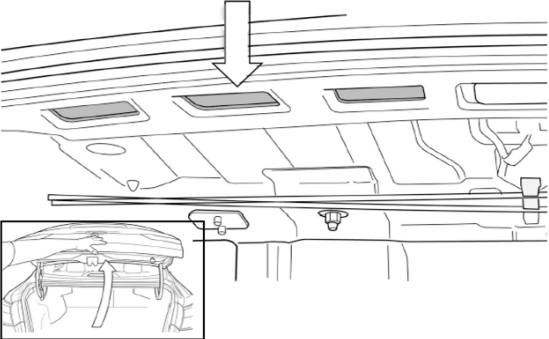
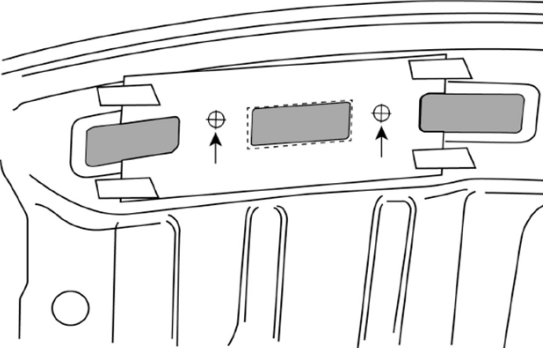




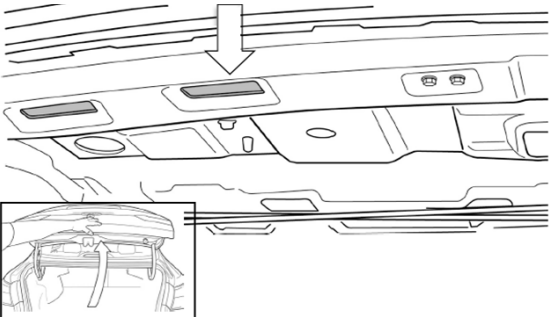
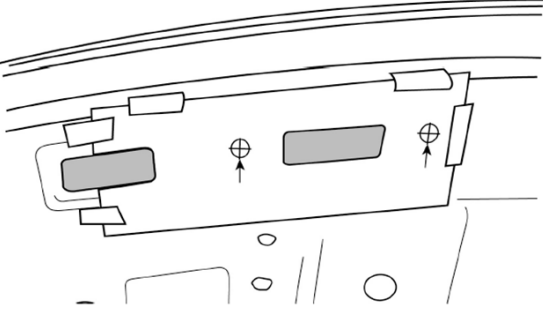


A		B		C		D	
2	Bolt (M6)	2	Rivnut®	2	Washer (M6)*	1	Foam Block

* Washers (M6) are only used for 2017~ Elantra


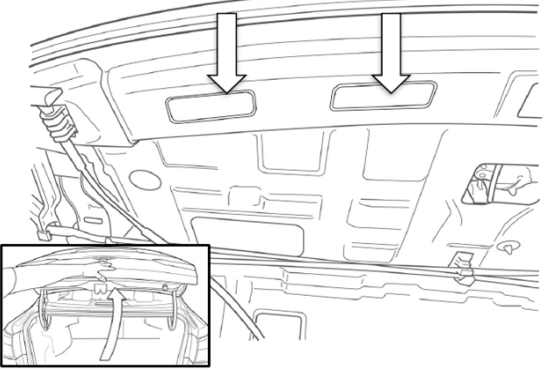


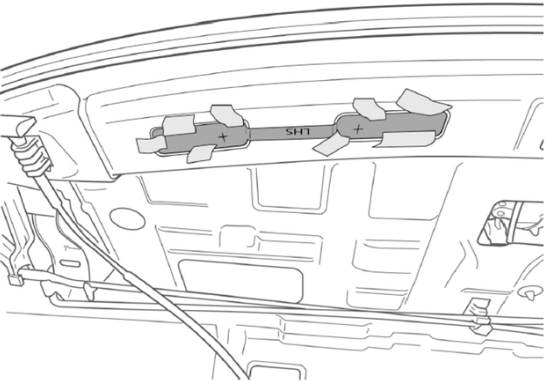


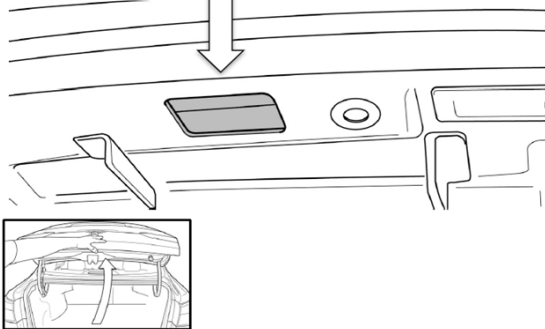


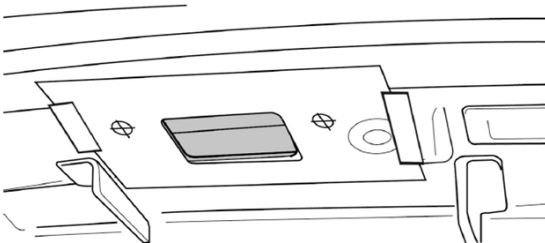

Follow instructions for proper placement of each component.

Hardware Total
7

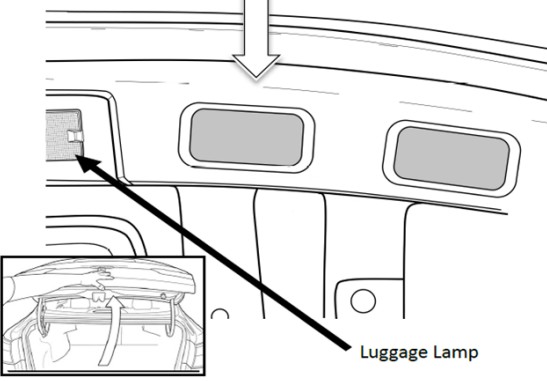

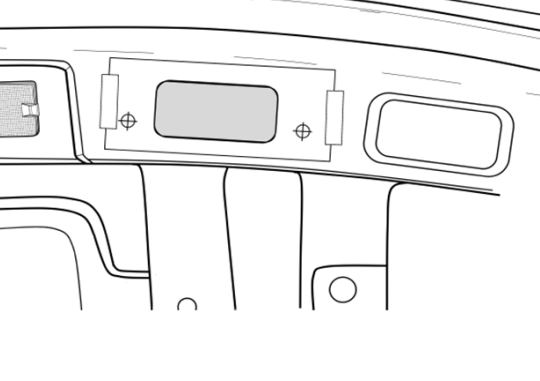

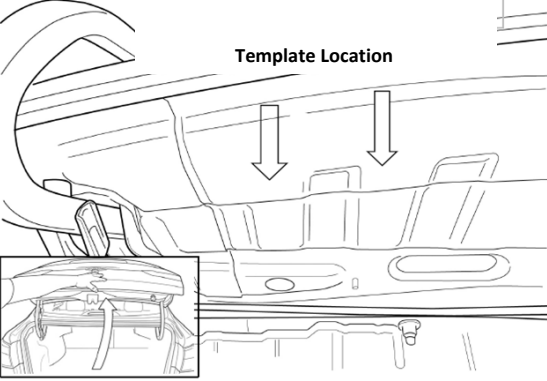

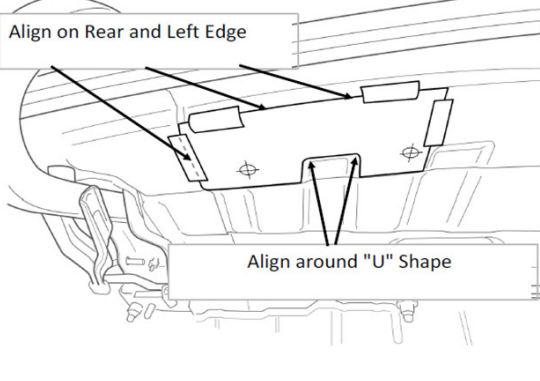

Genuine Accessories

1  Clean Drop Cloth	2  Scissors and Masking Tape
<div style="border: 1px solid black; padding: 5px; text-align: center; margin-bottom: 10px;"> 2014~2017 Accent 4DR Only </div> <p style="text-align: center;">Template Location</p> 	<div style="border: 1px solid black; padding: 5px; text-align: center; margin-bottom: 10px;"> 2014~2017 Accent 4DR Only </div> 
<div style="display: flex; align-items: center;"> <div style="writing-mode: vertical-rl; transform: rotate(180deg); border: 1px solid black; padding: 5px; margin-right: 10px;">NOTE</div> <div> <p>A. Open trunk lid.</p> <p>B. Cover vehicle floor panel and bumper with a clean drop cloth.</p> <p>C. Locate installation position, (left side of trunk) as shown above.</p> <p>D. If a second hook is being installed, the installation position is symmetrically on the right side of trunk.</p> </div> </div>	<div style="display: flex; align-items: center;"> <div style="writing-mode: vertical-rl; transform: rotate(180deg); border: 1px solid black; padding: 5px; margin-right: 10px;">NOTE</div> <div> <p>A. Obtain proper template from kit. Using scissors, cut out the template along the hash lines, including the center portion.</p> <p>B. Apply masking tape and orient template to the package shelf such that the template aligns to the opening and surrounding surface structures.</p> <p>C. Fully adhere the template to the package shelf and visually inspect for proper orientation as shown above.</p> <p>D. Ensure template is properly oriented and fully seated as shown.</p> <p>E. Skip to step 13.</p> </div> </div>
<div style="display: flex; align-items: center;">  <div style="margin-left: 10px;"> <p>Prior to installation, confirm the correct mounting location based on the vehicle model that the cargo hook will be installed.</p> </div> </div>	<div style="display: flex; align-items: center;">  <div style="margin-left: 10px;"> <p>Confirm template is flat against metal surfaces to ensure proper alignment of the two hole positions.</p> </div> </div>
3  Clean Drop Cloth	4  Scissors and Masking Tape
<div style="border: 1px solid black; padding: 5px; text-align: center; margin-bottom: 10px;"> 2014~2016 Elantra 4DR / 2014~ Elantra Coupe Only </div> <p style="text-align: center;">Template Location</p> 	<div style="border: 1px solid black; padding: 5px; text-align: center; margin-bottom: 10px;"> 2014~2016 Elantra 4DR / 2014~ Elantra Coupe Only </div> 
<div style="display: flex; align-items: center;"> <div style="writing-mode: vertical-rl; transform: rotate(180deg); border: 1px solid black; padding: 5px; margin-right: 10px;">NOTE</div> <div> <p>A. Open trunk lid.</p> <p>B. Cover vehicle floor panel and bumper with a clean drop cloth.</p> <p>C. Locate installation position, (left side of trunk, left of the luggage lamp) as shown above.</p> <p>D. If a second hook is being installed, the installation position is symmetrically on the right side of trunk.</p> </div> </div>	<div style="display: flex; align-items: center;"> <div style="writing-mode: vertical-rl; transform: rotate(180deg); border: 1px solid black; padding: 5px; margin-right: 10px;">NOTE</div> <div> <p>A. Obtain proper template from kit. Using scissors, cut out the template along the hash lines, including the center portion.</p> <p>B. Apply masking tape and orient template to the package shelf such that the template aligns to the opening and surrounding surface structures.</p> <p>C. Fully adhere the template to the package shelf and visually inspect for proper orientation as shown above.</p> <p>D. Ensure template is properly oriented and fully seated as shown.</p> <p>E. Skip to step 13.</p> </div> </div>
<div style="display: flex; align-items: center;">  <div style="margin-left: 10px;"> <p>Prior to installation, confirm the correct mounting location based on the vehicle model that the cargo hook will be installed.</p> </div> </div>	<div style="display: flex; align-items: center;">  <div style="margin-left: 10px;"> <p>Confirm template is flat against metal surfaces to ensure proper alignment of the two hole positions.</p> </div> </div>


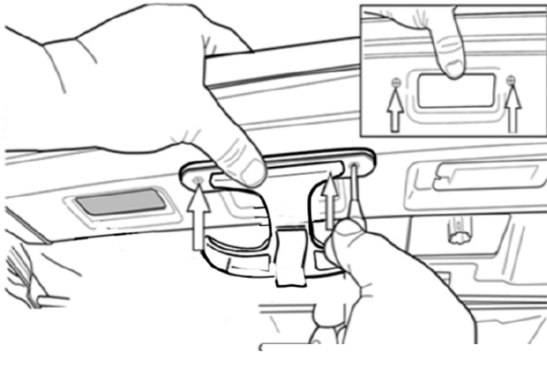


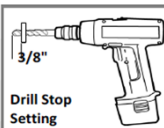
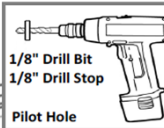
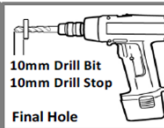
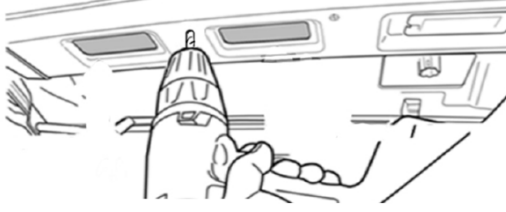


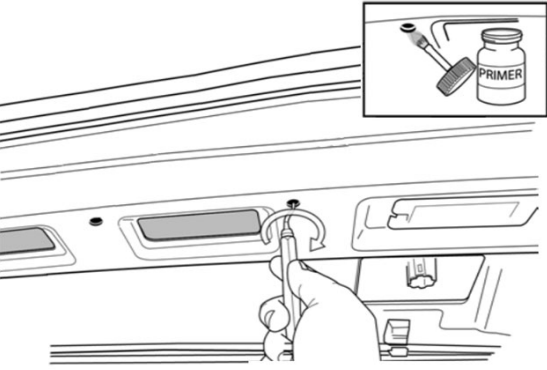


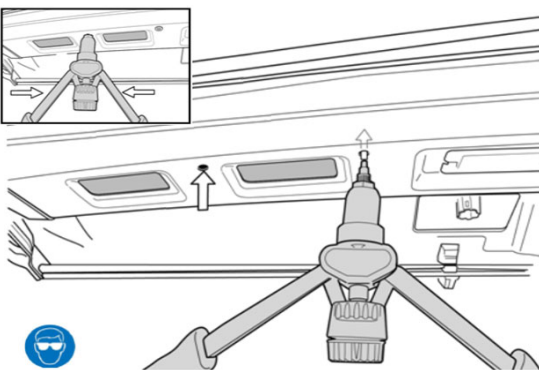

Genuine Accessories

5	 Clean Drop Cloth
<div style="text-align: center; border: 1px solid black; padding: 5px; margin-bottom: 10px;">2017~ Elantra Only</div> <div style="text-align: center; margin-bottom: 10px;">Template Location</div> 	
NOTE	<p>A. Open trunk lid. B. Cover vehicle floor panel and bumper with a clean drop cloth. C. Locate installation position, (left side of trunk) as shown above. D. If a second hook is being installed, the installation position is symmetrically on the right side of trunk.</p>
	<div style="display: flex; align-items: center;">  <p>Prior to installation, confirm the correct mounting location based on the vehicle model that the cargo hook will be installed.</p> </div>
6	 Scissors and Masking Tape
<div style="text-align: center; border: 1px solid black; padding: 5px; margin-bottom: 10px;">2017~ Elantra Only</div> 	
NOTE	<p>A. Obtain proper template from kit. Using scissors, cut out the template along the hash lines. B. Apply masking tape and orient template to the package shelf such that the template aligns to the surrounding surface structures. C. Fully adhere the template to the package shelf and visually inspect for proper orientation as shown above. D. Ensure template is properly oriented and fully seated as shown. E. Skip to step 13.</p>
	<div style="display: flex; align-items: center;">  <p>Confirm template is flat against metal surfaces to ensure proper alignment of the two hole positions.</p> </div>
7	 Clean Drop Cloth
<div style="text-align: center; border: 1px solid black; padding: 5px; margin-bottom: 10px;">2015~2019 Sonata Only</div> <div style="text-align: center; margin-bottom: 10px;">Template Location</div> 	
NOTE	<p>A. Open trunk lid. B. Cover vehicle floor panel and bumper with a clean drop cloth. C. Locate installation position, (left side of trunk, left of the luggage lamp) as shown above. D. If a second hook is being installed, the installation position is symmetrically on the right side of trunk.</p>
	<div style="display: flex; align-items: center;">  <p>Prior to installation, confirm the correct mounting location based on the vehicle model that the cargo hook will be installed.</p> </div>
8	 Scissors and Masking Tape
<div style="text-align: center; border: 1px solid black; padding: 5px; margin-bottom: 10px;">2015~2019 Sonata Only</div> 	
NOTE	<p>A. Obtain proper template from kit. Using scissors, cut out the template along the hash lines, including the center portion. B. Apply masking tape and orient template to the package shelf such that the template aligns to the opening and surrounding surface structures. C. Fully adhere the template to the package shelf and visually inspect for proper orientation as shown above. D. Ensure template is properly oriented and fully seated as shown. E. Skip to step 13.</p>
	<div style="display: flex; align-items: center;">  <p>Confirm template is flat against metal surfaces to ensure proper alignment of the two hole positions.</p> </div>


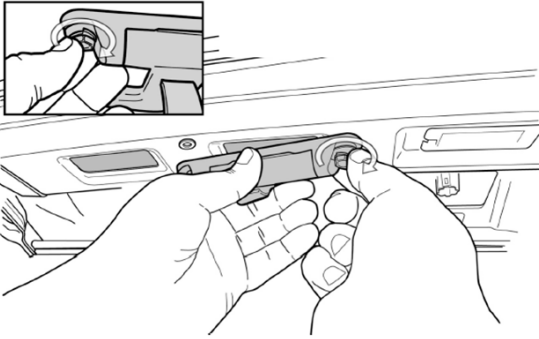
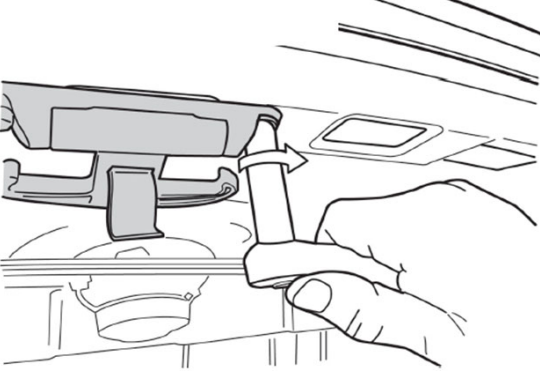


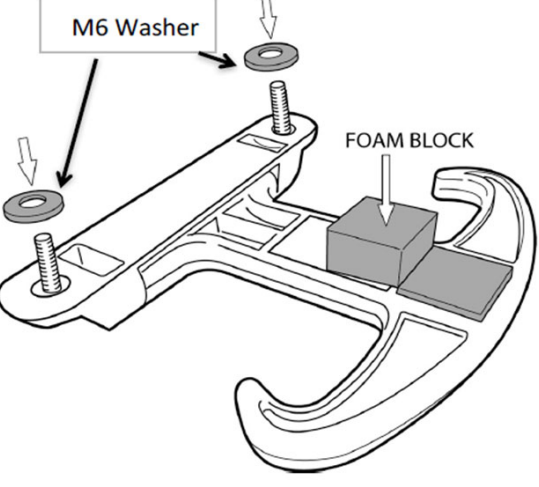
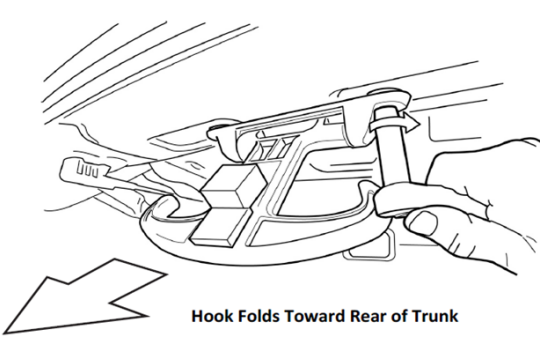

Genuine Accessories

9	Clean Drop Cloth
<div style="text-align: center; border: 1px solid black; padding: 5px; margin-bottom: 10px;">2020~ Sonata Only</div> <div style="text-align: center;"> <p>Template Location</p>  <p>Luggage Lamp</p> </div>	
NOTE	<p>A. Open trunk lid. B. Cover vehicle floor panel and bumper with a clean drop cloth. C. Locate installation position, (right side of trunk, right of the luggage lamp) as shown above. D. If a second hook is being installed, the installation position is symmetrically on the left side of trunk.</p>
	<div style="display: flex; align-items: center;">  <p>Prior to installation, confirm the correct mounting location based on the vehicle model that the cargo hook will be installed.</p> </div>
10	Scissors and Masking Tape
<div style="text-align: center; border: 1px solid black; padding: 5px; margin-bottom: 10px;">2020~ Sonata Only</div> 	
NOTE	<p>A. Obtain proper template from kit. Using scissors, cut out the template along the hash lines, including the center portion. B. Apply masking tape and orient template to the package shelf such that the template aligns to the opening and surrounding surface structures. C. Fully adhere the template to the package shelf and visually inspect for proper orientation as shown above. D. Ensure template is properly oriented and fully seated as shown. E. Skip to step 13.</p>
	<div style="display: flex; align-items: center;">  <p>Confirm template is flat against metal surfaces to ensure proper alignment of the two hole positions.</p> </div>
11	Clean Drop Cloth
<div style="text-align: center; border: 1px solid black; padding: 5px; margin-bottom: 10px;">2018~ Accent Only</div> <div style="text-align: center;"> <p>Template Location</p>  </div>	
NOTE	<p>A. Open trunk lid. B. Cover vehicle floor panel and bumper with a clean drop cloth. C. Locate installation position, (left side of trunk) as shown above.</p>
	<div style="display: flex; align-items: center;">  <p>Prior to installation, confirm the correct mounting location based on the vehicle model that the cargo hook will be installed.</p> </div>
12	Scissors and Masking Tape
<div style="text-align: center; border: 1px solid black; padding: 5px; margin-bottom: 10px;">2018~ Accent Only</div> <div style="text-align: center;"> <p>Align on Rear and Left Edge</p>  <p>Align around "U" Shape</p> </div>	
NOTE	<p>A. Obtain proper template from kit. Using scissors, cut out the template along the hash lines. B. Apply masking tape and orient template to the package shelf such that the template aligns to the surrounding surface structures. C. Fully adhere the template to the package shelf and visually inspect for proper orientation as shown above. D. Ensure template is properly oriented and fully seated as shown.</p>
	<div style="display: flex; align-items: center;">  <p>Confirm template is flat against metal surfaces to ensure proper alignment of the two hole positions.</p> </div>


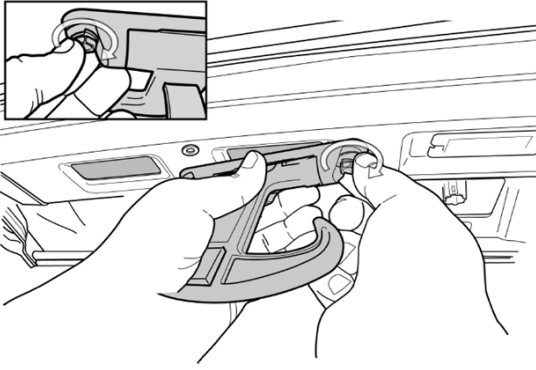


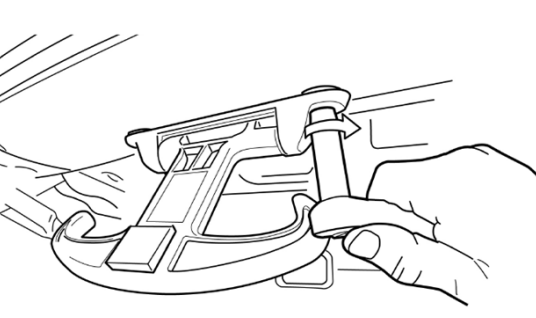


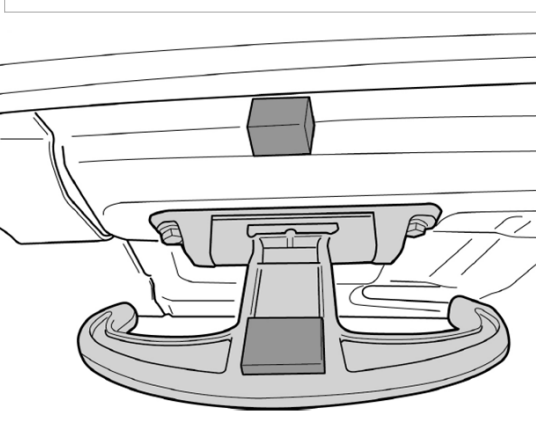

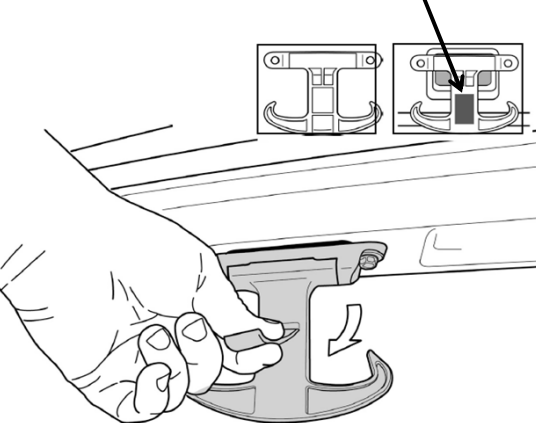

Genuine Accessories

13	 Center Punch
	<p style="text-align: center;">Accent 4 Door / Elantra 4 Door / Elantra Coupe / Sonata</p> 
NOTE	<p>A. With one hand, hold the cargo hook flat against the template and confirm proper alignment of the template. B. Align the center punch over each of the marked positions (cross hairs) on the template. C. Mark each drill location with the center punch. D. Remove rear edge of template and visually confirm the punch marks are in a position clear from the radius of the package self opening to safely use a drill bit. E. Remove the template.</p>
	<p>Confirm the cargo hook is flat against the metal surface to ensure proper alignment of the holes prior to using the center punch. Once the two locations are marked, visually confirm they are equally spaced outside the opening (if applicable) and the final 10mm diameter hole will not contact the radius near the opening (if applicable). If mark is too close to the radius near opening, reinstall the template and confirm placement of the cargo hook prior to using the center punch. Confirm the correct mounting location based on the vehicle model that the cargo hook will be installed.</p>
14	 Electric Drill, 1/8" Drill Bit, 1/8" Drill Stop, 10mm Drill Bit, 10mm Drill Stop
	<p style="text-align: center;">Accent 4 Door / Elantra 4 Door / Elantra Coupe / Sonata</p> <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;">  <p>3/8" Drill Stop Setting</p> </div> <div style="text-align: center;">  <p>1/8" Drill Bit 1/8" Drill Stop Pilot Hole</p> </div> <div style="text-align: center;">  <p>10mm Drill Bit 10mm Drill Stop Final Hole</p> </div> </div> 
NOTE	<p>A. Install the 1/8" drill stop 3/8" from the tip on the 1/8" drill bit. B. Visually confirm that no harness is routed over the point of the hole to be drilled. C. Drill a straight pilot hole through panel of package tray. Repeat process on second marked point. D. Change the 1/8" drill bit with the 10mm drill bit and drill stop. E. Using the 10mm drill bit, open the two pilot holes. Drill at a high speed through panel of package tray.</p>
	<p>Prior to drilling, ensure the correct location on the vehicle the cargo hook will be installed into. Do NOT oversize the 10mm drill hole. Be cautious not to bend panel hole opening when drilling. Bending or ovaling a hole will result in difficulty to insert the Rivnut® and poor retention strength. After drilling, make sure the trunk floor is cleaned of all metal chips.</p>
15	 Deburring Tool and Primer
	<p style="text-align: center;">Accent 4 Door / Elantra 4 Door / Elantra Coupe / Sonata</p> 
NOTE	<p>A. Deburr the two (2) holes ensuring no burrs remain. B. Once deburred, apply primer to exposed metal. C. Allow the primer to dry (approximately five (5) minutes, dependent on environment conditions).</p>
	<p>Ensure the primer does NOT get on the vehicle, other than the required exposed metal areas.</p>
16	 Rivnut® Tool
	<p style="text-align: center;">Accent 4 Door / Elantra 4 Door / Elantra Coupe / Sonata</p> 
NOTE	<p>A. Adjust Rivnut® tool for the proper Rivnut® compression depth required to secure to vehicle panel. Confirm how to adjust Rivnut® tool through the use of the manufacture instructions. B. Install two (2) Rivnut® using the Rivnut® tool in both drilled hole locations.</p>
	<p>Confirm that the Rivnut® is secured and flush to vehicle panel once installed.</p>

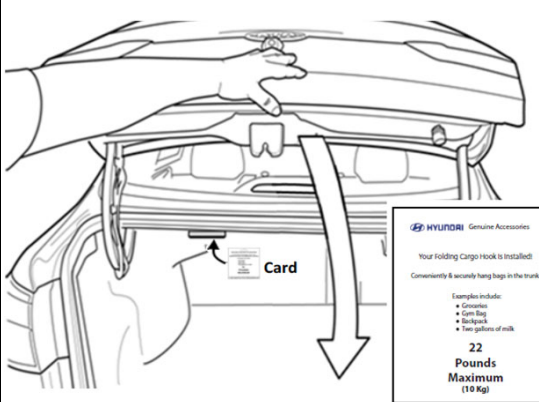
Genuine Accessories

17		<div data-bbox="251 199 787 262" style="border: 1px solid black; padding: 5px; text-align: center;"> <p>If Installing on 2017~ Elantra Sedan, Proceed to Step 19.</p> </div> <div data-bbox="251 325 787 661">  </div> <div data-bbox="251 787 787 955" style="border: 1px solid black; padding: 5px;"> <p>NOTE</p> <p>A. Orient the cargo hook so it folds forward towards the front of vehicle. B. Hand tighten two (2) supplied M6 bolts through base of the cargo hook and into the previously installed Rivnuts*.</p> </div>
18	Ratchet, Torque Wrench and 10mm Socket	<div data-bbox="831 199 1367 262" style="border: 1px solid black; padding: 5px; text-align: center;"> <p>If Installing on 2017~ Elantra Sedan, Proceed to Step 19.</p> </div> <div data-bbox="831 325 1367 703">  </div> <div data-bbox="831 787 1367 955" style="border: 1px solid black; padding: 5px;"> <p>NOTE</p> <p>A. Using a ratchet and 10mm socket, evenly tighten the two (2) M6 bolts until seated. B. Using a torque wrench, tighten the bolts to: 6.8 N.m (0.70 kgf.m, 5.0 lbf-ft).</p> </div> <div data-bbox="831 955 1367 1018" style="border: 1px solid black; padding: 5px;"> <p> Do not over-torque the bolts. This will cause the previously installed Rivnut* to spin in the hole.</p> </div>
19		<div data-bbox="251 1096 787 1159" style="border: 1px solid black; padding: 5px; text-align: center;"> <p>2017~ Elantra Sedan Only</p> </div> <div data-bbox="251 1186 787 1669">  </div> <div data-bbox="251 1680 787 1848" style="border: 1px solid black; padding: 5px;"> <p>NOTE</p> <p>A. Remove the adhesive backing paper from the one (1) provided foam block and adhere foam block onto hook handle as shown. B. Install M6 bolt with washer on top of hook bracket as shown.</p> </div>
20	Ratchet, Torque Wrench and 10mm Socket	<div data-bbox="831 1096 1367 1159" style="border: 1px solid black; padding: 5px; text-align: center;"> <p>2017~ Elantra Sedan Only</p> </div> <div data-bbox="831 1186 1367 1522">  <p style="text-align: center;">Hook Folds Toward Rear of Trunk</p> </div> <div data-bbox="831 1680 1367 1848" style="border: 1px solid black; padding: 5px;"> <p>NOTE</p> <p>A. Orient the cargo hook so that hook folds towards rear of vehicle. B. Hand tighten the two (2) M6 bolts through base of cargo hook, the washers and into previously installed Rivnut*. Complete installation as noted in step 17. C. Using a ratchet and 10mm socket, evenly tighten the two (2) M6 bolts until seated. D. Using a torque wrench, tighten the bolts to: 6.8 N.m (0.70 kgf.m, 5.0 lbf-ft).</p> </div> <div data-bbox="831 1848 1367 1906" style="border: 1px solid black; padding: 5px;"> <p> Do not over-torque the bolts.</p> </div>

Genuine Accessories

21		
<div data-bbox="251 195 784 254" style="border: 1px solid black; padding: 5px; text-align: center;">2018~ Accent & 2020~ Sonata Only</div> 		
NOTE	<p>A. Orient the cargo hook so it folds towards the rear of vehicle.</p> <p>NOTE: Image above is generic, refer to step 9 & 10 or 11 & 12 for location.</p> <p>B. Hand tighten two (2) supplied M6 bolts through base of the cargo hook and into the previously installed Rivnuts®.</p>	
	 <p>The hook should rest in a horizontal position when not in use.</p>	
22		Ratchet, Torque Wrench and 10mm Socket
<div data-bbox="831 195 1364 254" style="border: 1px solid black; padding: 5px; text-align: center;">2018~ Accent & 2020~ Sonata Only</div>  <p style="text-align: center;">Hook Folds Toward Rear of Trunk</p>		
NOTE	<p>A. Using a ratchet and 10mm socket, evenly tighten the two (2) M6 bolts until seated.</p> <p>B. Using a torque wrench, tighten the bolts to: 6.8 N.m (0.70 kgf.m, 5.0 lbf-ft).</p>	
	 <p>Do not over-torque the bolts. This will cause the previously installed Rivnuts® to spin in the hole.</p>	
23		
<div data-bbox="251 1092 784 1150" style="border: 1px solid black; padding: 5px; text-align: center;">2018~ Accent & 2020~ Sonata Only</div> 		
NOTE	<p>A. Remove the adhesive backing paper from the one (1) provided foam block and adhere foam block into channel under package shelf as shown.</p>	
24		
 <p style="text-align: center;">Foam Block</p>		
NOTE	<p>A. Lower and raise the cargo hook and visually confirm the position of contact (where the hook touches the body panel).</p> <p>B. Remove the adhesive backing paper from the one (1) provided foam block. Secure foam block to the package tray above the cargo hook as shown and compress to ensure good adhesion between the two surfaces.</p> <p>C. Mechanically confirm the hook lowers and raises freely.</p> <p>D. Visually confirm there are no gaps between hook and the vehicle panel at the fasteners.</p>	
	 <p>The hook should rest in a horizontal position when not in use.</p>	

Genuine Accessories

25		Vacuum Cleaner
 <div style="position: absolute; top: 220px; left: 390px; border: 1px solid black; padding: 5px; width: 150px;"> <p>HYUNDAI Genuine Accessories</p> <p>Your Folding Cargo Hook is installed!</p> <p>Conveniently & securely hang bags in the trunk.</p> <p>Examples include:</p> <ul style="list-style-type: none"> • Grocery • Gym Bag • Backpack • Two gallons of milk <p>22 Pounds Maximum (10 Kg)</p> </div>		
NOTE	<p>A. Ensure marketing card is attached to cargo hook.</p> <p>B. Ensure the clean drop cloth is removed from vehicle luggage area and is clean of all debris.</p> <p>C. If necessary, vacuum vehicle luggage area to remove any metal chips.</p> <p>D. Close trunk lid.</p>	

Visual Check

Item to be Checked		Result	
	Folding Hook	Hook rests in horizontal position and rotates 90° freely.	
	Folding Hook	Hook sits flush to panel with no gaps.	
	M6 Fasteners	Fasteners are seated into hook at torqued properly.	
	M6 Washers (2017~ Elantra Only)	Washers are installed between hook bracket and sheet metal.	
	Marketing Card	Card is properly attached to pull strap.	

Care & Cleaning

Wash cargo hook with soapy water as needed. Do not use other chemical based cleaners.