

Genuine Accessories



Vehicle Model **Santa Fe Sport**

Accessory: **Rear Mudguard Kit**

Model Year 2017-

Difficulty: B

Part No. 2WF46 AC550

Language English

Rev. Date 12/3/2015

Note: Difficulty stated above reflects the minimum level of expertise required to install the accessory:
 (A) Customer
 (B) Dealer Technician
 (C) Master Technician or Specialist

Instructional Symbols / Definitions

	Denotes warnings that may lead to serious physical injury or vehicle damage		Denotes quality processes to be checked prior to moving to the next step	Denotes personal protective equipment (PPEs) that may be required for a step. Examples of safety equipment icons noted below:	
	Denotes cautions to be taken to avoid physical injury or electronic component damage		Denotes specific tools that are necessary to complete a step		
	Denotes cautions to be taken to avoid vehicle and component damage	N O T E	Denotes important information to be reviewed during the step		

Basic Required Tools

Right Angle #2 Phillips Screwdriver	Clip Removal Tool

Part Weight (Gross)

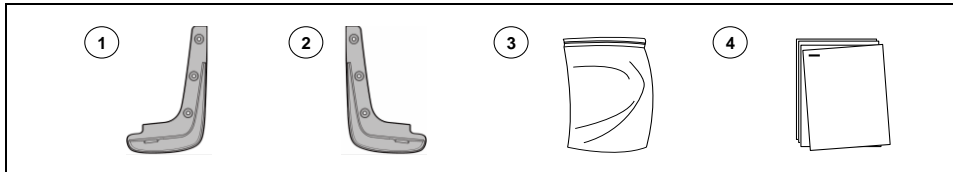
0.63 lbs
0.29 kg

All dealers must determine if the weight they have added in the form of all options or accessories, when added to the weight of all Port/Dealer Installed options or accessories, exceeds the lesser of 1.5% of GVWR or 100 lbs. If the additional weight does exceed the lesser of the indicated thresholds, a "Load Carrying Capacity Reduced" label must be installed. A black, fine-point, indelible marker must be used to write by hand onto the label, the reduced carrying capacity in kilograms or pounds, which is the total weight of all added options and accessories.
 Load Label Part Number: NP070 - 09003

Notes to the installer:

- 1 Read the entire Installation Instructions prior to beginning the installation of the part.
- 2 Make sure the vehicle is completely clean and dry in the area(s) the part is to be installed.
- 3 Ensure the vehicle is properly protected in the area(s) that the accessory is to be installed.
- 4 NEVER place tools on painted surfaces, seating surfaces, dash pad, console or floor carpet/mats.
- 5 Always wear appropriate personal protective equipment, including gloves, safety glasses, etc., when required.

Kit Overview




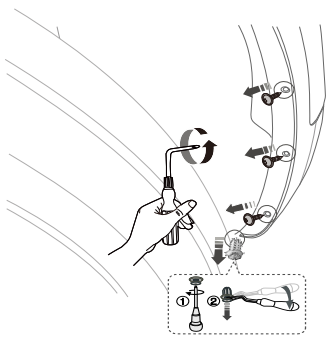


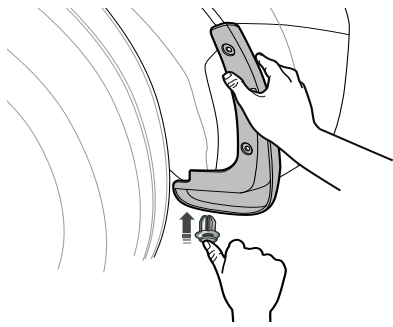


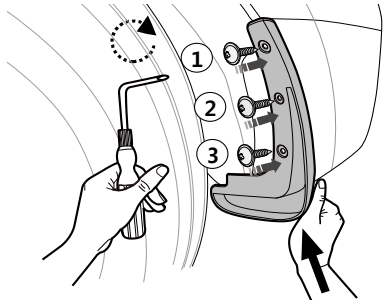

No.	Qty	Description
1	1	Rear Mudguard (LH)
2	1	Rear Mudguard (RH)
3	1	Hardware Bag
4	1	Installation Instructions

Hardware Kit Contents

A		B	
6	Self Tapping Screw M6x25	2	Plastic Retainer

Hardware Total
8

Genuine Accessories

<p>1</p> 	<p>Right Angle #2 Phillips Screwdriver and Clip Removal Tool</p> 	<p>N O T E</p>	<ol style="list-style-type: none"> 1. Unscrew the center screw of the plastic retainer and remove the plastic retainer from underneath the vehicle as shown. 2. Remove the three (3) screws from the highlighted area as shown. 3. Discard the hardware. 				
	<p>Make sure to push the mudguard upward and in during the installation to eliminate any possible gaps.</p>	<p>3</p> 		<p>N O T E</p>	<ol style="list-style-type: none"> 1. Insert one (1) provided retainer into the hole as shown. Make sure to push in the center portion of the retainer to lock the retainer in place. 		
<p>Visual Check</p>	<p>Item to be Checked</p>		<p>Make sure the Rear Mudguard is properly aligned to the vehicle.</p>	<p>4</p> 	<p>Right Angle #2 Phillips Screwdriver</p> 	<p>N O T E</p>	<ol style="list-style-type: none"> 1. While pushing the mudguard upward and in as shown in the drawing, insert and fasten one (1) provided M6x25 screw into the upper hole as shown. 2. Insert and fasten one (1) provided M6x25 screw into the center hole as shown. 3. Insert and fasten one (1) provided M6x25 screw into the lower hole as shown. 4. Repeat steps 1-4 for the opposite side. 5. Installation is complete.
	<p>After the installation, check for any visible gaps. If any gap exceeds 0.5mm, loosen the mounting screws and refit the Rear Mudguard to the body to achieve the correct specification.</p>	<p>Result</p>	<p>Rear Mudguard is properly aligned.</p>				