



HYUNDAI Genuine Accessories

Vehicle Model	Santa Fe	Accessory	Cargo Screen
Model Year	2015 ~	Difficulty	(A)
Part No.	2WH15 AK300RYN		

- Accessory Installation

Note: Difficulty stated above reflects the minimum level of expertise required to install the accessory.

(A) Customer (B) Dealer Technician (C) Master Technician

Instructional Symbols / Definitions

	Denotes warnings that may lead to serious physical injury or vehicle damage.		Denotes quality processes to be checked prior to moving to the next step.	Denotes safety equipment required to be used such as a mask, safety glasses, gloves, and hearing protection.	
	Denotes cautions to be taken to avoid physical injury or electronic component damage.		Denotes specific tools that are necessary to complete the step.		
	Denotes cautions to be taken to avoid vehicle and component damage.		Denotes instructional steps necessary to complete the process.		
				Mask	Safety Glasses
				Gloves	Hearing Protection

Basic Required Hand Tools

None

FMVSS 110 Compliance Information

Part Number:
2WH15 AK300RYN

7.694lbs
3.490kg
(Gross Weight)


All dealers must determine if the weight they have added in the form of all options or accessories, when added to the weight of all Port/Dealer Installed options or accessories, exceeds the lesser of 1.5% of GVWR or 100 lbs. If the additional weight does exceed the lesser of the indicated thresholds, a "Load Carrying Capacity Reduced" label must be installed. A black, fine-point, indelible marker must be used to write by hand onto the label, the reduced carrying capacity in kilograms or pounds, which is the total weight of all added options and accessories.
Load Label Part Number: NP070 - 09003

Notes to the Installer:


- 1) Read the entire installation instructions prior to beginning the installation of this accessory.
- 2) Make sure the vehicle is completely clean before the accessory is installed.
- 3) Ensure the vehicle is properly protected in the area(s) that the accessory is to be installed.
- 4) To prevent vehicle damage, never place tools on top of painted surfaces, seats, dash pad, console or floor carpet/mats.
- 5) Always wear appropriate safety gear to include gloves and safety glasses when required.

HYUNDAI Genuine Accessories


Kit Overview

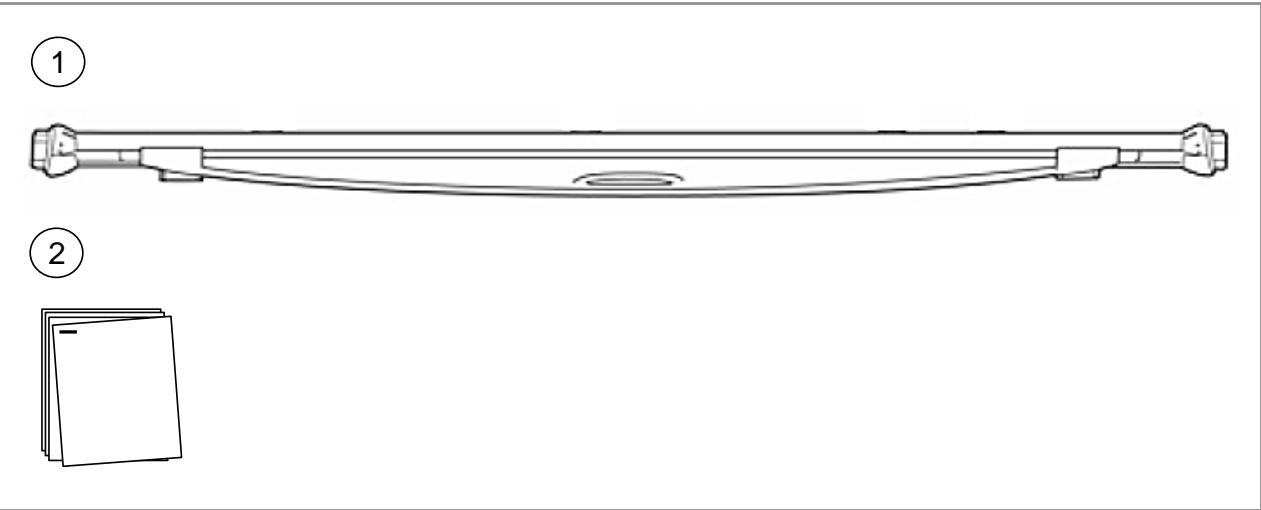


No.	Qty.	Description
1	1	Cargo Screen
2	1	Installation Instructions

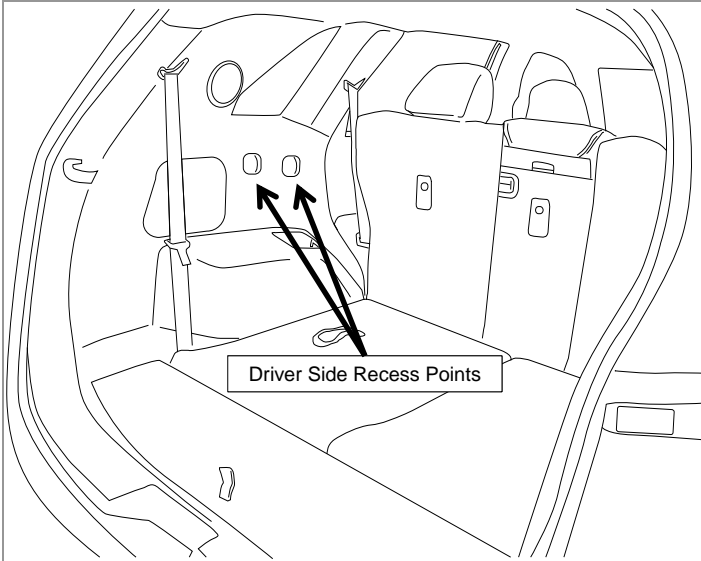


	1
NOTE	1. Identify the four (4) Cargo Screen Recess Points on the Driver Side and Passenger Side Trim Panels.

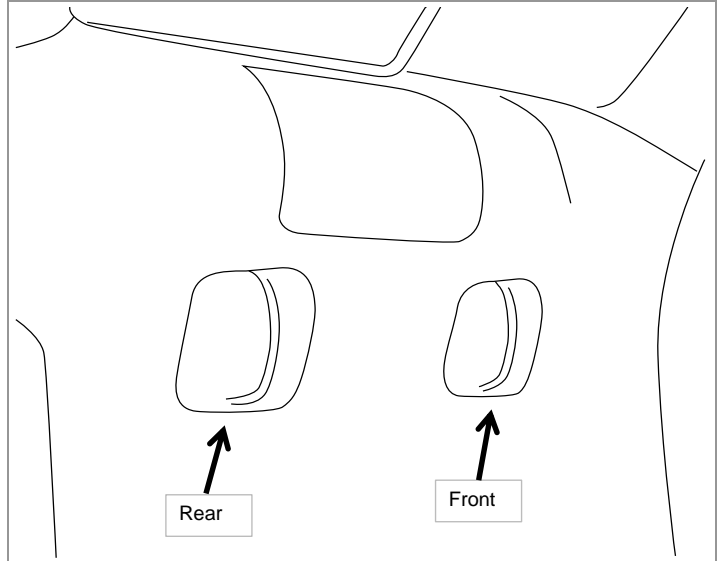

	2
NOTE	1. Select the desired Front or Rear Position for the Cargo Screen Recess Points. 2. Position the Cargo Screen with the Pull Handle facing rearward. 3. Insert the Cargo Screen into the selected Driver Side Recess Point.
	Do not damage the Trim Panels during installation.

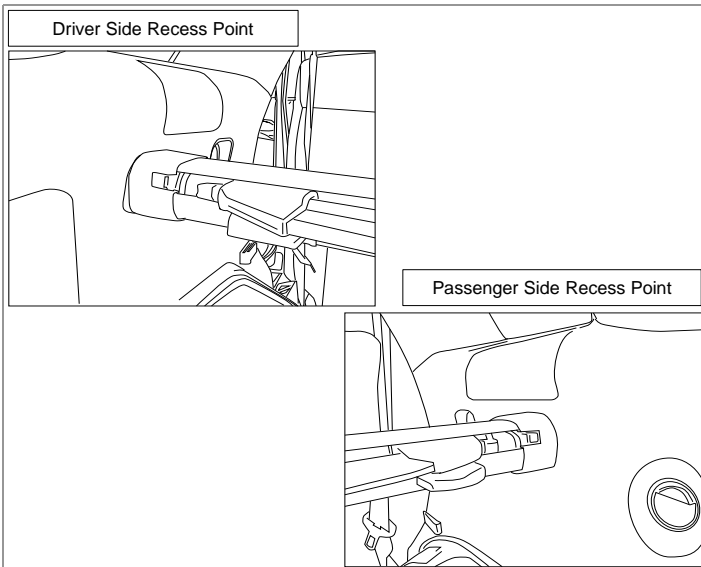


	3
NOTE	1. With the Cargo Screen inserted into the Driver Side Trim Panel, compress the Cargo Screen, then insert the other end into the Passenger Side.
	Make sure both sides are in the same recess point.

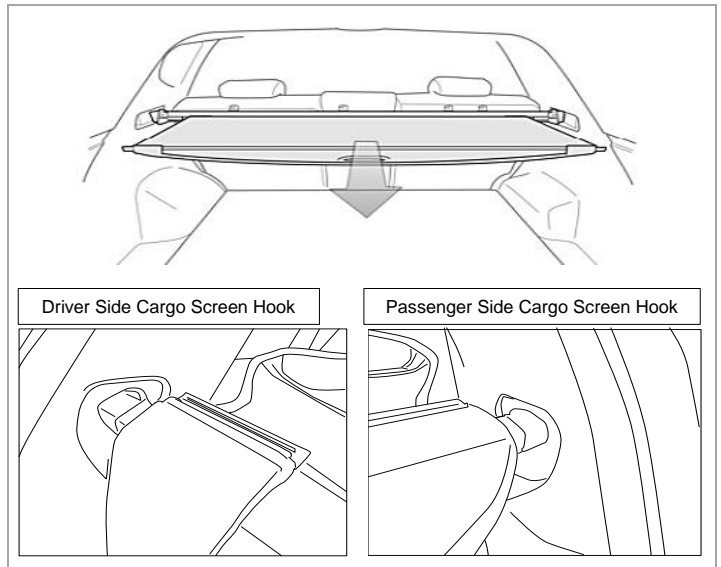

	4
NOTE	1. Pull the Cargo Screen Handle rearward as shown. 2. Insert the two (2) Cargo Screen Hooks into the Trim Panels. 3. Installation is complete.

HYUNDAI Genuine Accessories
Visual Check

Items To Be Checked		Results Of The Check
	Make sure Cargo Screen and Hooks are fully engaged to the Trim Panels.	Cargo Screen is secure.