



## HYUNDAI Genuine Accessories

Vehicle Model  
Model Year  
HMA Part No.

Santa Fe Sport  
2013~  
4Z012 ADU00

Accessory  
Difficulty

Cargo Mat  
(A)

- Accessory Installation  
- Care & Cleaning

Note: Difficulty stated above reflects the minimum level of expertise required to install the accessory  
( A ) Customer ( B ) Dealer Technician ( C ) Master Technician

### Instructional Symbols / Definitions

	Denotes warnings that may lead to serious physical injury or vehicle damage.		Denotes quality processes to be checked prior to moving to the next step.	Denotes safety equipment required to be used such as a mask, goggles, rubber gloves, and hearing protection.	
	Denotes cautions to be taken to avoid physical injury or electronic component damage.		Denotes specific tools that are necessary to complete the step.		
	Denotes cautions to be taken to avoid vehicle and component damage.		Denotes instructional steps necessary to complete the process.		
				Mask	Goggles
				Rubber Gloves	Hearing Protection

### Basic Required Hand Tools

None
------

#### FMVSS 110 Compliance Information

Part Number:  
4Z012 ADU00

5.82 LBS  
(Gross Weight)

All dealers must determine if the weight they have added in the form of all options or accessories, when added to the weight of all Port Installed options or accessories, exceeds the lesser of 1.5% of GVWR or 100 lbs. If the additional weight does exceed the lesser of the indicated thresholds, a "Load Carrying Capacity Reduced" label must be installed. A black, fine-point, indelible marker must be used to write by hand onto the label, the reduced carrying capacity in kilograms or pounds, which is the total weight of all added options and accessories.  
Load Label Part Number:  
NP070 - 09003



**Warning: Static electricity can cause ignition of flammable liquid, vapor or gas in any vehicle or trailer. To reduce the risk of serious injury or death when filling containers:**

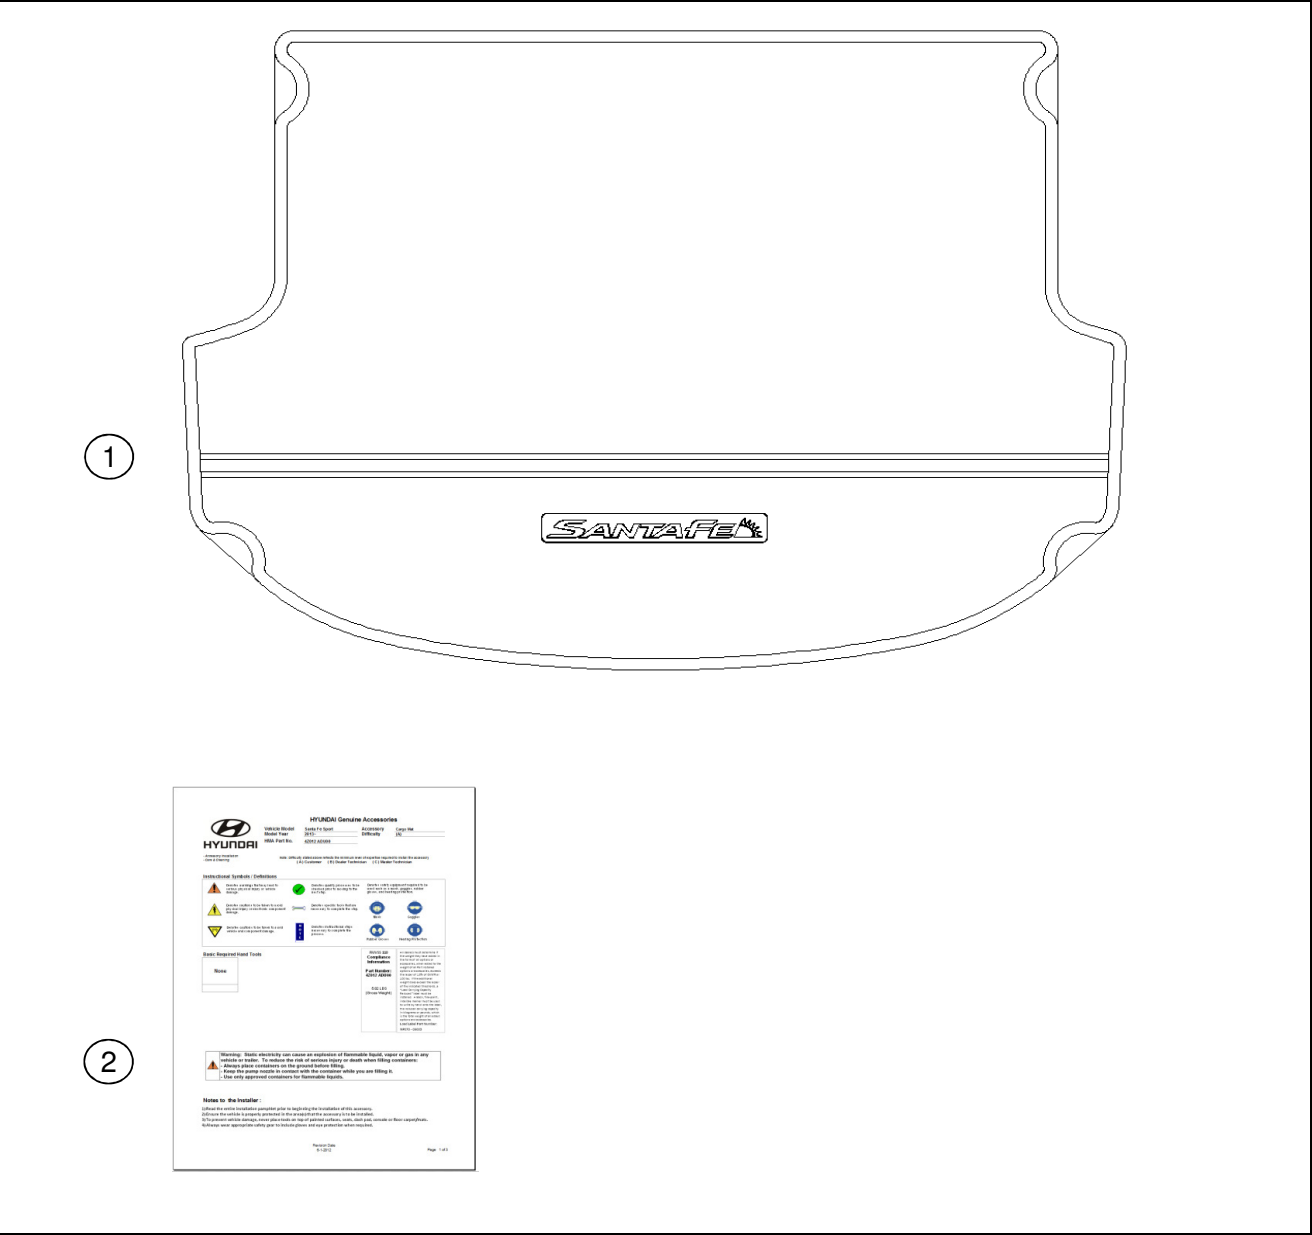
- Always place containers on the ground before filling.
- Keep the pump nozzle in contact with the container while you are filling it.
- Use only approved containers for flammable liquids.

### Notes to the Installer :

- 1) Read the entire installation pamphlet prior to beginning the installation of this accessory.
- 2) Ensure the vehicle is properly protected in the area(s) that the accessory is to be installed.
- 3) To prevent vehicle damage, never place tools on top of painted surfaces, seats, dash pad, console or floor carpet/mats.
- 4) Always wear appropriate safety gear to include gloves and eye protection when required.

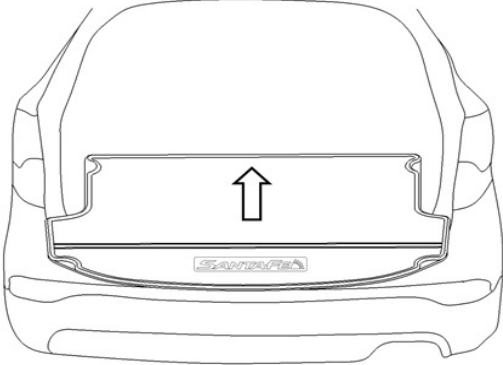
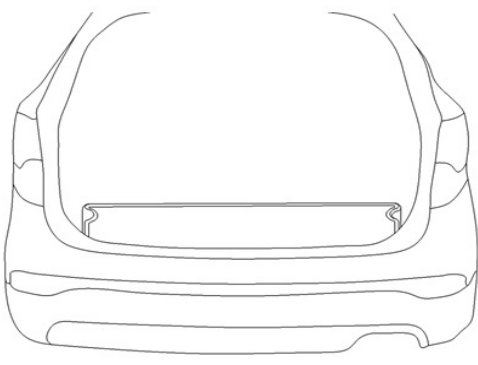
# HYUNDAI Genuine Accessories

## Kit Overview



No.	Qty.	Description
1	1	Cargo Mat
2	1	Instructions

# HYUNDAI Genuine Accessories

			
	1		2
NOTE	Grasp the mat by the rear and fold in the sides sufficiently to slide the mat into the cargo compartment.	NOTE	After installing the mat ensure all of the edges are pushed down against the floor.
✓	The mat may have incurred some distortion during shipment. The mat will return to its molded shape with installation in the cargo area and exposure to warm environmental conditions.	✓	Ensure installation instructions are placed in glove box.

NOTE	The mat can be vacuumed and washed with soap and water. Do not use petroleum-based solvents for cleaning. Please keep these instructions in your glove box for future reference.
------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------