

Vehicle Model Model Year Part No. Santa Fe Accessory 2013~ Difficulty

Door Scuff Plates

- Accessory Installation

Note: Difficulty stated above reflects the minimum level of expertise required to install the accessory

( A ) Customer ( B ) Dealer Technician ( C ) Master Technician

#### Instructional Symbols / Definitions



Denotes warnings that may lead to serious physical injury or vehicle damage.



Denotes quality processes to be checked prior to moving to the next step.

B8F45 AC500

Denotes safety equipment required to be used such as a mask, goggles, rubber gloves, and hearing protection.



Denotes cautions to be taken to avoid physical injury or electronic component damage.



Denotes specific tools that are necessary to complete the step.







Denotes cautions to be taken to avoid vehicle and component damage.



Denotes instructional steps necessary to complete the process.






**Rubber Gloves** 

**Hearing Protection** 

#### **Basic Required Hand Tools**







FMVSS 110 Compliance Information

Part Number: B8F45 AC500

0.544 KG 1.199 LBS (Gross Weight)


All dealers must determine if the weight they have added in the form of all options or accessories, when added to the weight of all Port Installed options or accessories, exceeds the lesser of 1.5% of GVWR or 100 lbs. If the additional weight does exceed the lesser of the indicated thresholds, a "Load Carrying Capacity Reduced" label must be installed. A black, fine-point, indelible marker must be used to write by hand onto the label, the reduced carrying capacity in kilograms or pounds, which is the total weight of all added options and Load Label Part Number:


NP070 - 09003

### Notes to the Installer:


- 1) Read the entire installation pamphlet prior to beginning the installation of this accessory.
- 2) Ensure the vehicle is properly protected in the area(s) that the accessory is to be installed.
- 3) To prevent vehicle damage, never place tools on top of painted surfaces, seats, dash pad, console or floor carpet/mats.
- 4) Always wear appropriate safety gear to include gloves and eye protection when required.


### **HYUNDAI** Kit Overview

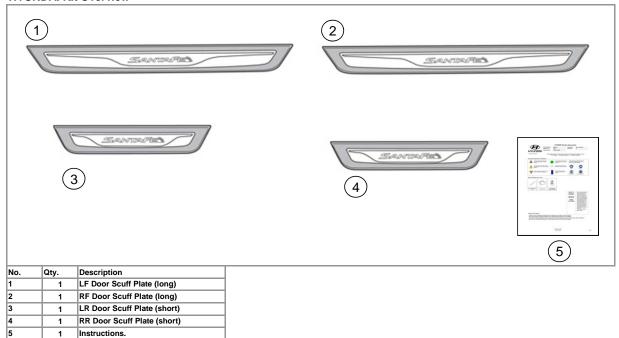


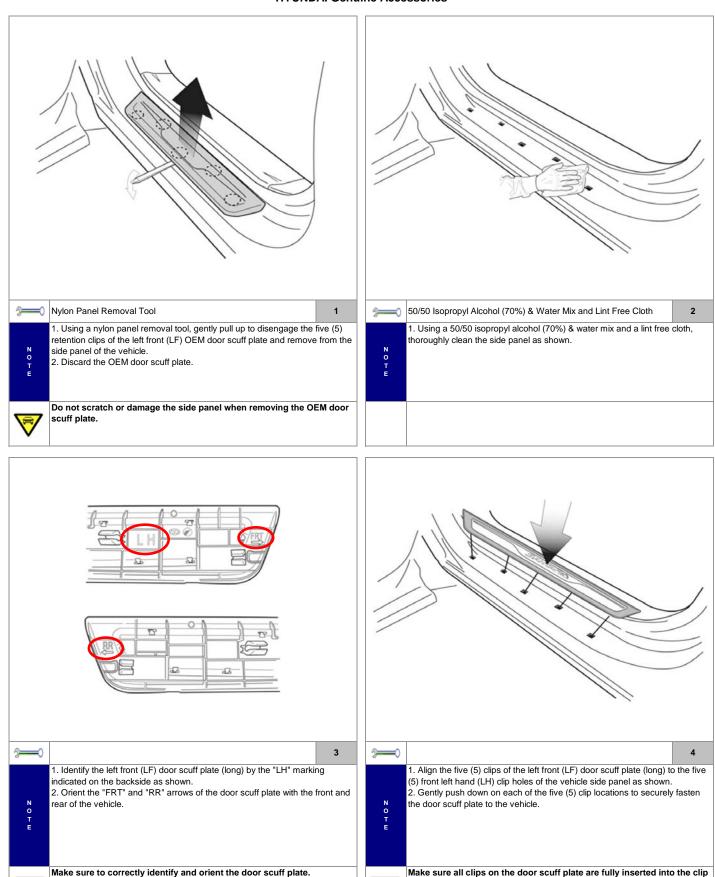


holes of the side panel.

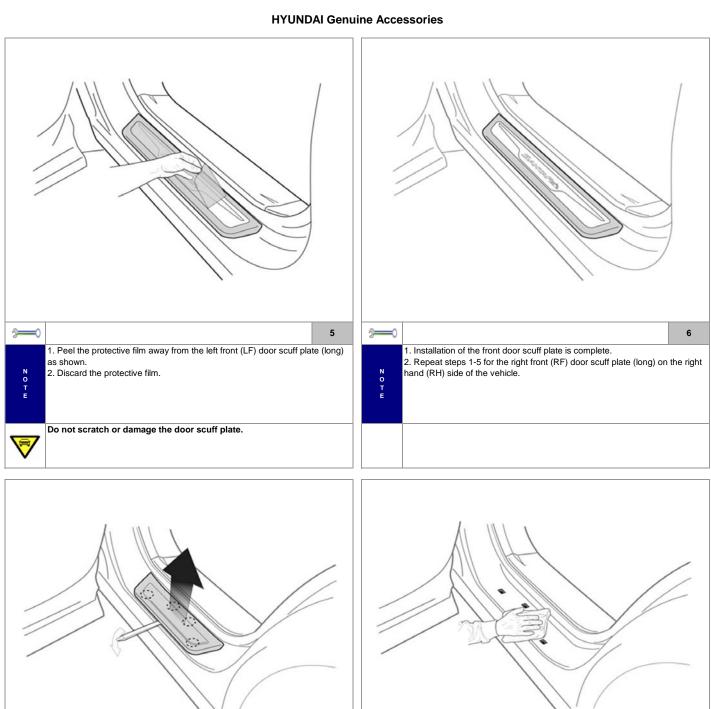

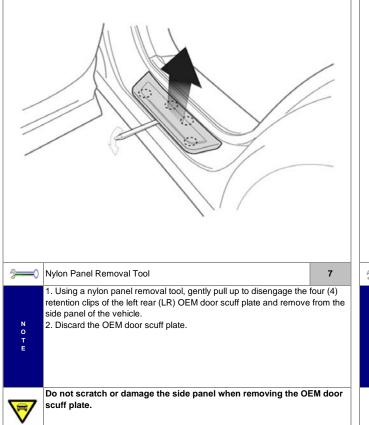

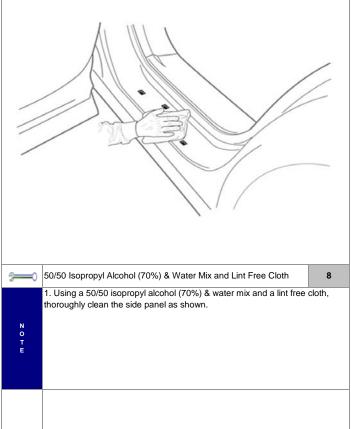

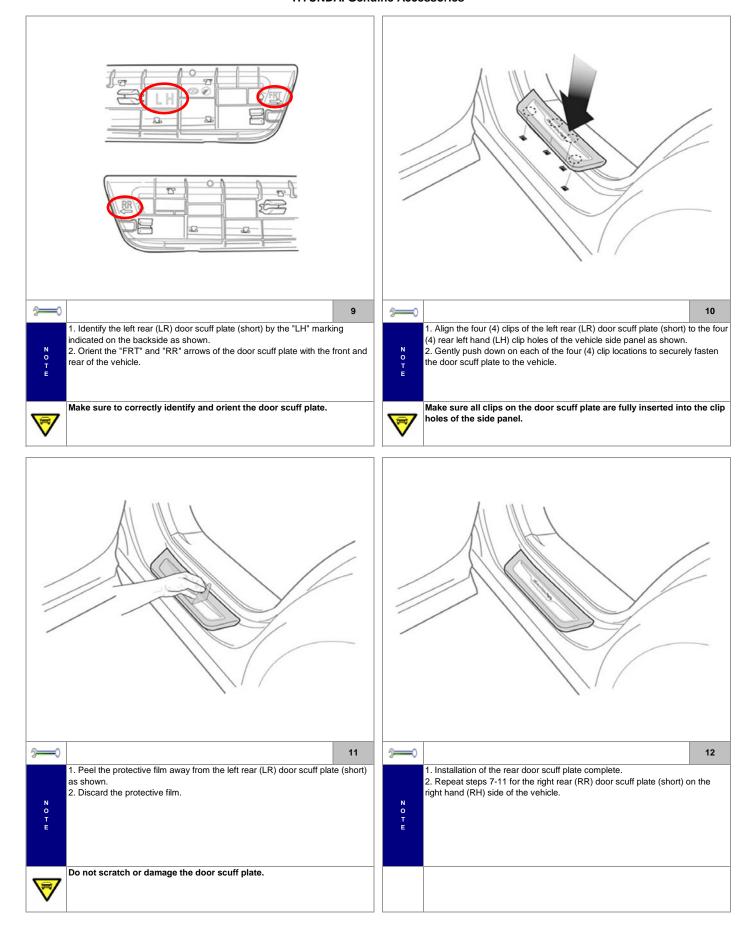

# HYUNDAI Genuine Accessories Visual Check

	Items to be checked	Results of the check
ſ		
	Door Sills are firmly attached to vehicle.	Door sill clips are fully inserted into door sill holes.