



HYUNDAI Genuine Accessories

Vehicle Model

Santa Fe

Model Year

2013~

Part No.

B8H15 AP000RYN

Accessory

Difficulty

Cargo Cover

A

- Accessory Installation

Note: Difficulty stated above reflects the minimum level of expertise required to install the accessory

(A) Customer (B) Dealer Technician (C) Master Technician

Instructional Symbols / Definitions

	Denotes warnings that may lead to serious physical injury or vehicle damage.		Denotes quality processes to be checked prior to moving to the next step.	Denotes safety equipment required to be used such as a mask, goggles, rubber gloves, and hearing protection.	
	Denotes cautions to be taken to avoid physical injury or electronic component damage.		Denotes specific tools that are necessary to complete the step.		
	Denotes cautions to be taken to avoid vehicle and component damage.		Denotes instructional steps necessary to complete the process.		
				Mask	Goggles
				Rubber Gloves	Hearing Protection

Basic Required Hand Tools

None

FMVSS 110 Compliance Information

Part Number:
B8H15 AP000RYN

3.612 KG
7.963 LBS
(Gross Weight)

All dealers must determine if the weight they have added in the form of all options or accessories, when added to the weight of all Port Installed options or accessories, exceeds the lesser of 1.5% of GVWR or 100 lbs. If the additional weight does exceed the lesser of the indicated thresholds, a "Load Carrying Capacity Reduced" label must be installed. A black, fine-point, indelible marker must be used to write by hand onto the label, the reduced carrying capacity in kilograms or pounds, which is the total weight of all added options and accessories.


Load Label Part Number:
NP070 - 09003

Notes to the Installer:


- 1) Read the entire installation pamphlet prior to beginning the installation of this accessory.
- 2) Ensure the vehicle is properly protected in the area(s) that the accessory is to be installed.
- 3) To prevent vehicle damage, never place tools on top of painted surfaces, seats, dash pad, console or floor carpet/mats.
- 4) Always wear appropriate safety gear to include gloves and eye protection when required.

HYUNDAI Genuine Accessories

HYUNDAI Kit Overview

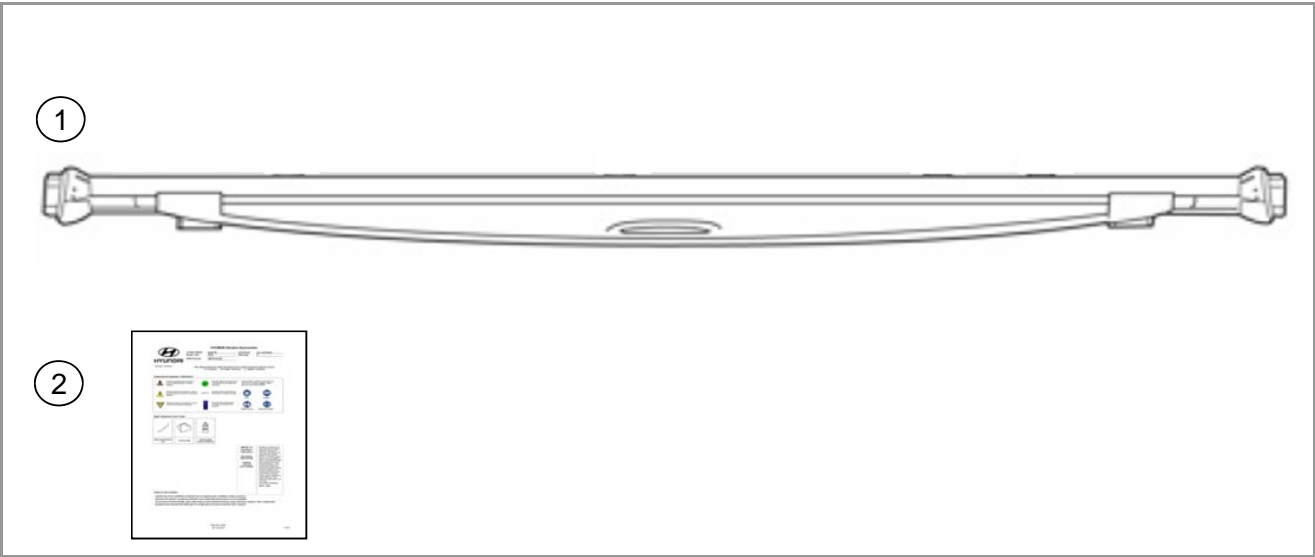


No.	Qty.	Description
1	1	Cargo Cover
2	1	Instructions

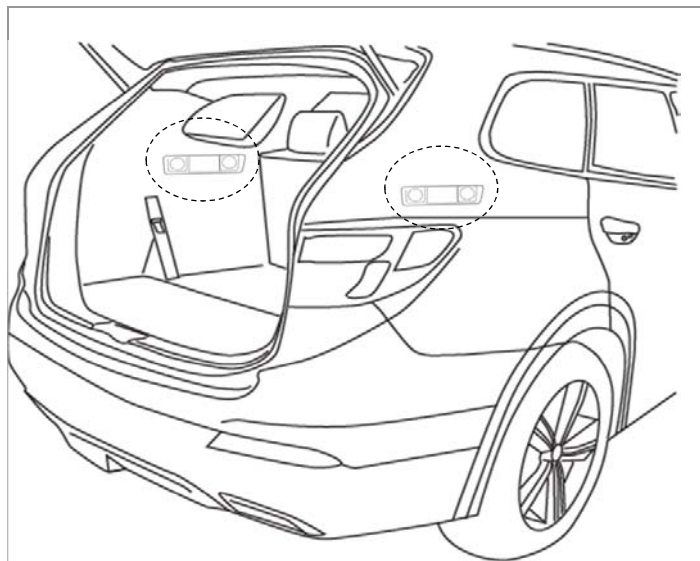

1

NOTE

1. Locate the two mounting recesses on both the left and right sides of the rear cargo area as shown.

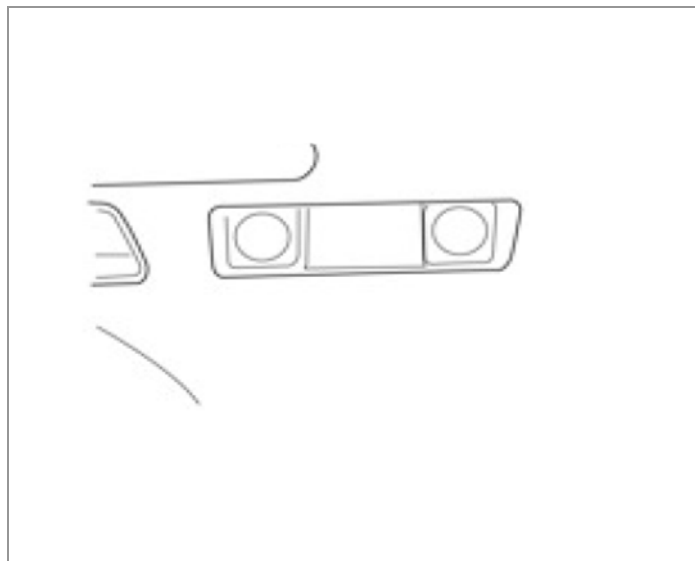


2

NOTE

1. Select the desired recess where the cargo cover will be installed.
2. Insert the cargo cover into the selected left side recess.


Be careful not to scratch the side panel.

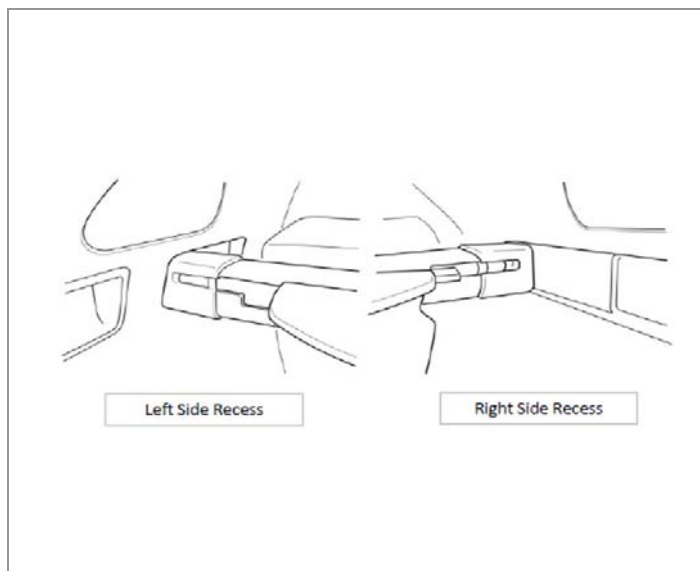

3

NOTE


1. While compressing the cargo cover into the left side recess, install the right end of the cargo cover into the right side recess.

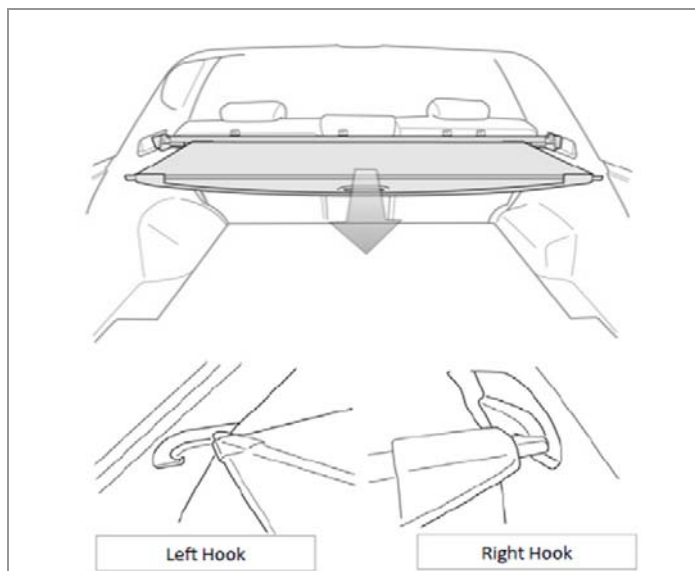


4



NOTE

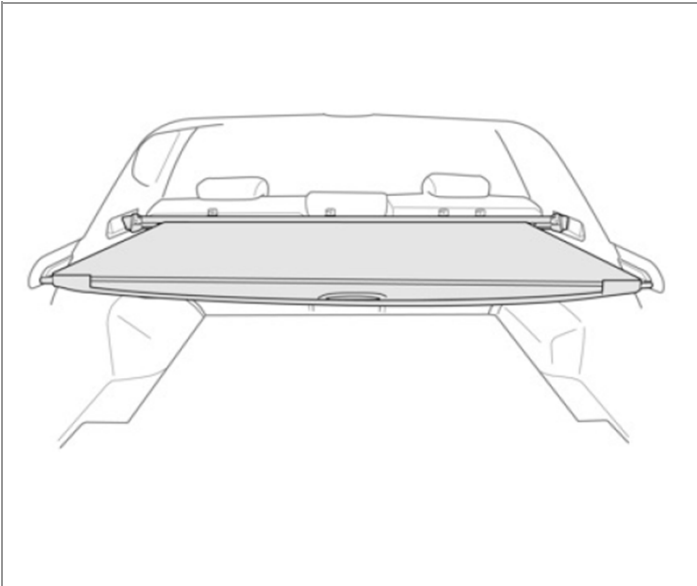1. Pull the screen out from the housing using the handle located at the middle of the cargo cover.
2. Insert the left and right hooks of the cargo cover into the left and right side panels as shown.



		5
NOTE	1. Installation is complete.	
	 Clean the cargo cover with mild soap and water. Do not use acidic or alkaline cleaners.	

HYUNDAI Genuine Accessories Visual Check

Items to be checked		Results of the check
	Cargo Cover is properly located in both left and right side recess locations.	Cargo Cover is secure.
	Both left and right hooks of Cargo Cover are properly engaged into side panels.	Cargo Cover is secure.