

# Genuine Accessories



## Vehicle Model Sonata

Model Year 2018-  
 Part No. C1F46 AK200  
 Language English  
 Rev. Date 4/5/2017

## Accessory: Rear Mudguard Kit

Difficulty: B

**Note:** Difficulty stated above reflects the minimum level of expertise required to install the accessory:  
 (A) Customer  
 (B) Dealer Technician  
 (C) Master Technician or Specialist

### Instructional Symbols / Definitions

	Denotes warnings that may lead to serious physical injury or vehicle damage		Denotes quality processes to be checked prior to moving to the next step	Denotes personal protective equipment (PPEs) that may be required for a step. Examples of safety equipment icons noted below:	
	Denotes cautions to be taken to avoid physical injury or electronic component damage		Denotes specific tools that are necessary to complete a step		
	Denotes cautions to be taken to avoid vehicle and component damage	<b>N O T E</b>	Denotes important information to be reviewed during the step		
				Glasses	Gloves
				Mask	Hearing Protection

### Basic Required Tools

Right Angle #2 Phillips Screwdriver	Clip Removal Tool

All dealers must determine if the weight they have added in the form of all options or accessories, when added to the weight of all Port/Dealer Installed options or accessories, exceeds the lesser of 1.5% of GVWR or 100 lbs. If the additional weight does exceed the lesser of the indicated thresholds, a "Load Carrying Capacity Reduced" label must be installed. A black, fine-point, indelible marker must be used to write by hand onto the label, the reduced carrying capacity in kilograms or pounds, which is the total weight of all added options and accessories.

### Notes to the installer:

- 1 Read the entire Installation Instructions prior to beginning the installation of the part.
- 2 Make sure the vehicle is completely clean and dry in the area(s) the part is to be installed.
- 3 Ensure the vehicle is properly protected in the area(s) that the accessory is to be installed.
- 4 NEVER place tools on painted surfaces, seating surfaces, dash pad, console or floor carpet/mats.
- 5 Always wear appropriate personal protective equipment, including gloves, safety glasses, etc., when required.

### Part Weight (Gross)

<b>0.42</b>	lbs
<b>0.19</b>	kg

### Kit Overview


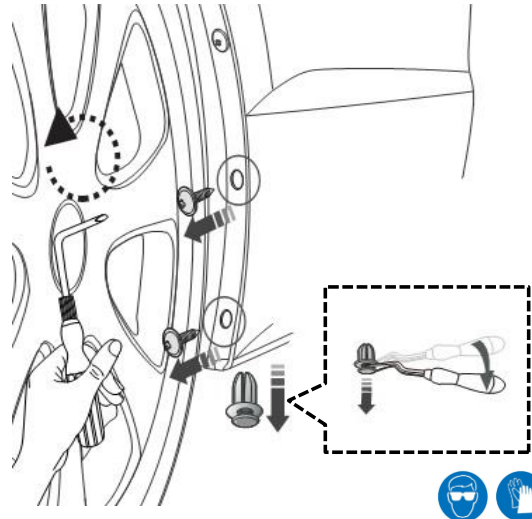
No.	Qty	Description
1	1	Rear Mudguard (LH)
2	1	Rear Mudguard (RH)
3	1	Hardware Bag
4	1	Installation Instructions


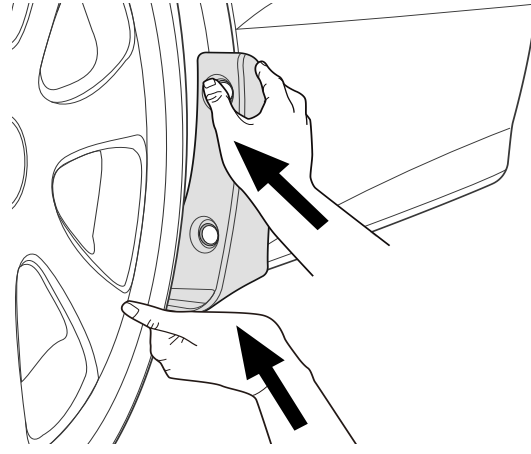

### Hardware Kit Contents


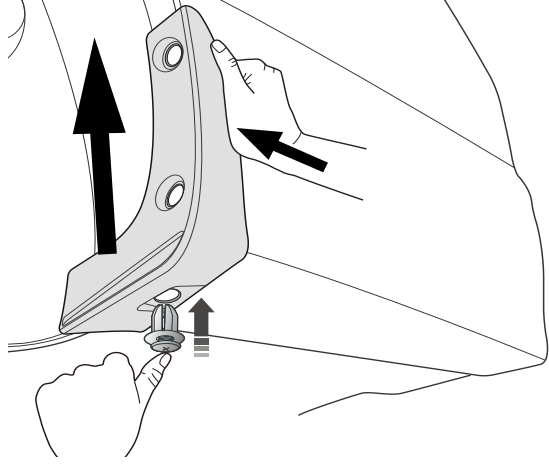

A		B	
4	Self Tapping Screws	2	Plastic Retainer


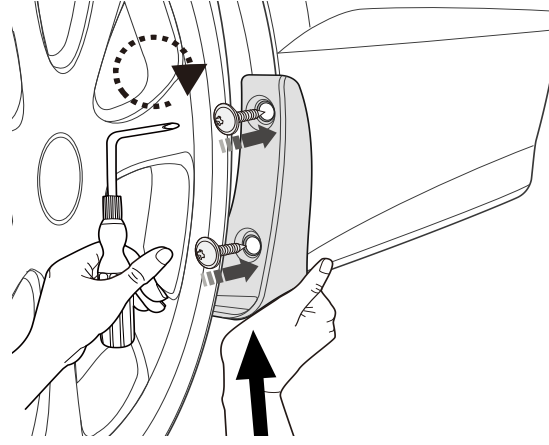

Hardware Total
6



## Genuine Accessories

1		
N O T E	<ol style="list-style-type: none"> <li>1. Release the center portion of the plastic retainer and remove the plastic retainer from underneath the rear of the vehicle as shown.</li> <li>2. Remove the two (2) screws from the highlighted area as shown.</li> <li>3. Discard the removed hardware.</li> </ol>	

2		
N O T E	<ol style="list-style-type: none"> <li>1. Align the Rear Mudguard as shown ensuring a proper fit.</li> </ol>	
	Make sure to push the mudguard upward and in during the installation to eliminate any possible gaps.	

3		
N O T E	<ol style="list-style-type: none"> <li>1. Insert one (1) provided retainer into the hole as shown. Make sure to push in the center portion of the retainer to lock the retainer in place.</li> </ol>	
	Make sure to push the mudguard upward and in during the installation to eliminate any possible gaps.	

4		
N O T E	<ol style="list-style-type: none"> <li>1. While pushing the Rear Mudguard up and in as shown in the drawing, insert and fasten one (1) provided screw into the upper hole as shown.</li> <li>2. Insert and fasten one (1) provided screw into the lower hole as shown.</li> <li>3. Repeat steps 1-4 for the opposite side.</li> <li>4. Installation is complete.</li> </ol>	
	After the installation, check for any visible gaps. If any gap exceeds 0.5mm, loosen the mounting hardware and refit the Rear Mudguard to the body to achieve the correct specification. Be careful not to over-tighten or strip the screw head.	

Visual Check	Item to be Checked
	Make sure to push the Rear Mudguard upward and in during the installation to eliminate any possible gaps.
	After the installation, check for any visible gaps. If any gap exceeds 0.5mm, loosen the mounting hardware and refit the mudguard to the body to achieve the correct specification. Be careful not to over-tighten or strip the head of the screw.

Result	
Any visible gaps should not exceed 0.5mm.	
Any visible gaps should not exceed 0.5mm.	