

Genuine Accessories



Vehicle Model Sonata
Model Year 2015-
Part No. C2F17 AU000 (DIO)
 C2F17 AU600 (PIO)
Language English
Rev. Date 2/12/2018










Accessory: Cargo Net
Difficulty: (B)

Note: Difficulty stated above reflects the minimum level of expertise required to install the accessory:
 (A) Customer
 (B) Dealer Technician
 (C) Master Technician or Specialist






Application Notes

For Non-Hybrid Models Only.

Instructional Symbols / Definitions

 Denotes warnings that may lead to serious physical injury or vehicle damage  Denotes cautions to be taken to avoid physical injury or electronic component damage  Denotes cautions to be taken to avoid vehicle and component damage	 Denotes quality processes to be checked prior to moving to the next step  Denotes specific tools that are necessary to complete a step <div style="border: 1px solid black; padding: 2px; text-align: center; width: 20px; margin: 0 auto;"> N O T E </div> Denotes important information to be reviewed during the step	Denotes personal protective equipment (PPEs) that may be required for a step. Examples of safety equipment icons noted below: <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;">  Glasses </div> <div style="text-align: center;">  Gloves </div> </div> <div style="display: flex; justify-content: space-around; margin-top: 10px;"> <div style="text-align: center;">  Mask </div> <div style="text-align: center;">  Hearing Protection </div> </div>
---	---	---

Basic Required Tools

				
Clip Removal Tool	Drill	3/8" Driver	25mm 6pt Socket	Torque Wrench

Part Weight (Gross)

0.46	lbs
0.21	kg

FMVSS 110 Compliance Information


All dealers must determine if the weight they have added in the form of all options or accessories, when added to the weight of all Port/Dealer Installed options or accessories, exceeds the lesser of 1.5% of GVWR or 100 lbs. If the additional weight does exceed the lesser of the indicated thresholds, a "Load Carrying Capacity Reduced" label must be installed. A black, fine-point, indelible marker must be used to write by hand onto the label, the reduced carrying capacity in kilograms or pounds, which is the total weight of all added options and accessories.
Load Label Part Number: NP070 - 09003

Notes to the installer:

- 1 Read the entire Installation Instructions prior to beginning the installation of the part.
- 2 Make sure the vehicle is completely clean and dry in the area(s) the part is to be installed.
- 3 Ensure the vehicle is properly protected in the area(s) that the accessory is to be installed.
- 4 NEVER place tools on painted surfaces, seating surfaces, dash pad, console or floor carpet/mats.
- 5 Always wear appropriate personal protective equipment, including gloves, safety glasses, etc., when required.


Genuine Accessories


Kit Overview

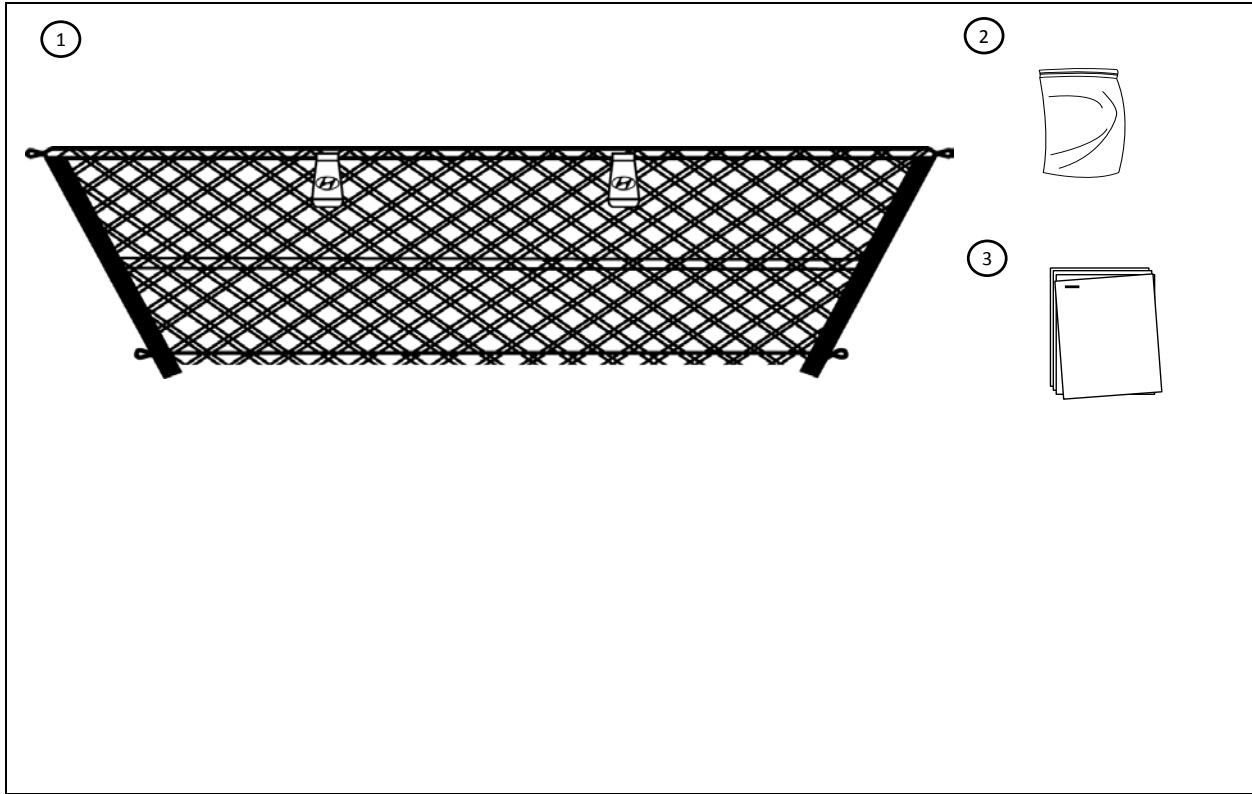

No.	Qty	Description
1	1	Cargo Net
2	1	Hardware Kit
3	1	Installation Instructions


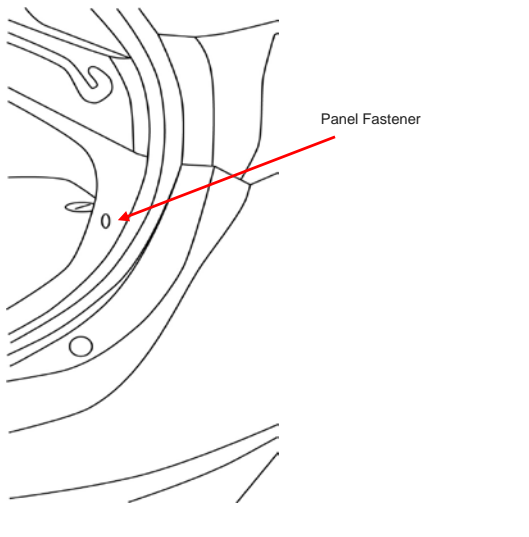
Hardware Kit Contents


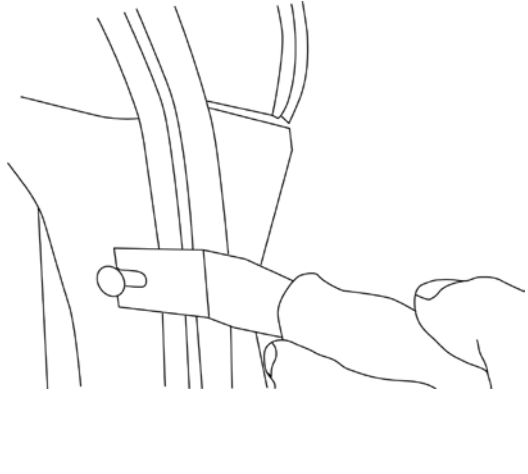

A	
2	Mushroom Anchor


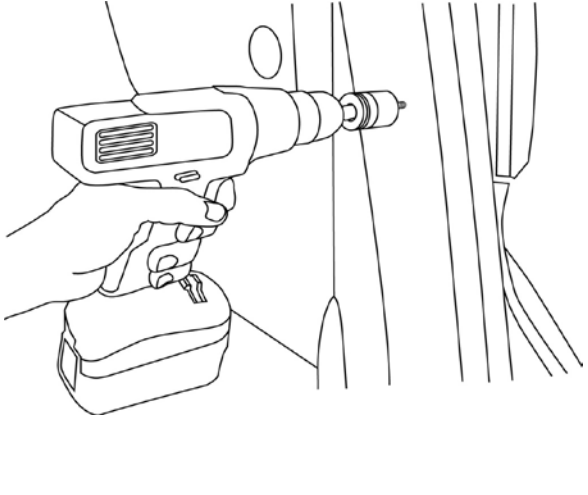

C	
2	T-Anchors with Spigot


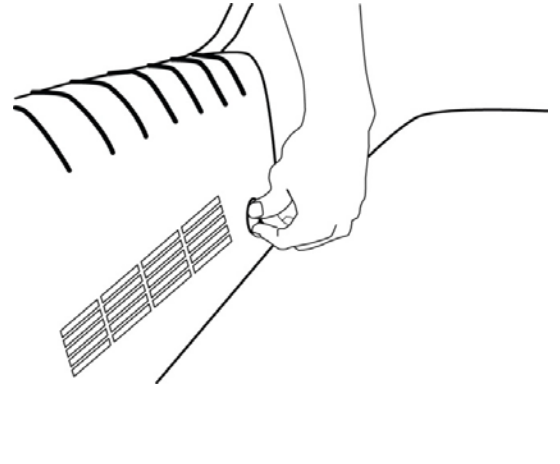

Hardware Total
4

Genuine Accessories


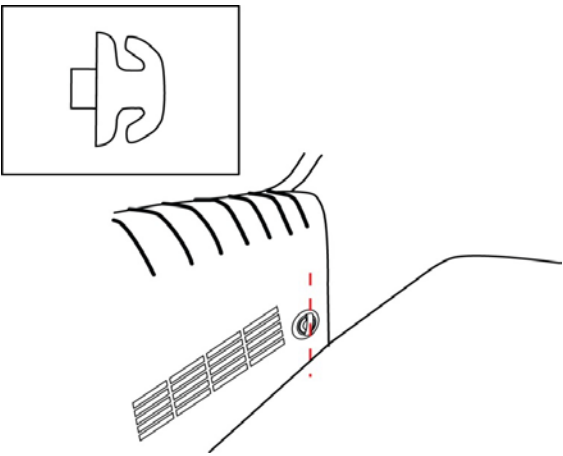
1		
 <p style="text-align: right; margin-right: 100px;">Panel Fastener</p>		
N O T E	<p>A. Open trunk. B. Locate the passenger side panel fastener as shown.</p>	


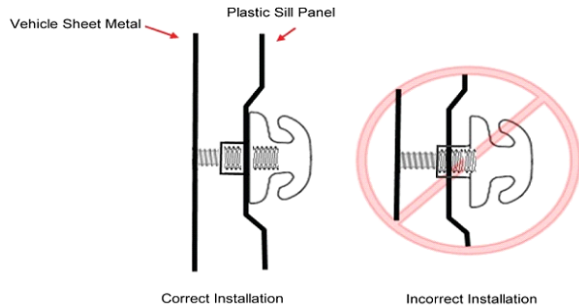

2		Clip Removal Tool
		
N O T E	<p>A. Using a Clip Removal Tool, carefully remove the fastener. B. Discard fastener. C. Repeat on driver's side of vehicle.</p>	
		
DO NOT allow the clip removal tool to press against the rubber seal.		


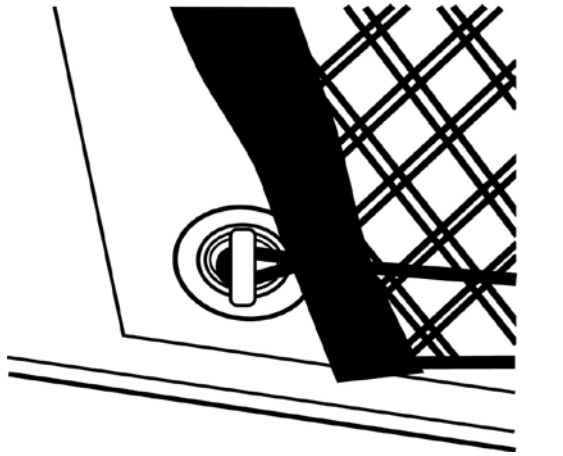
3		Electric Drill, 3/8" Driver, 25mm 6pt Socket, and Torque Wrench
		
N O T E	<p>A. Using the 3/8" Driver equipped with a 25mm 6pt Socket, slowly install the Anchor Assembly through the carpet panel hole, and into the sheet metal, until fully seated. Note: Make sure the Anchor Assembly is installed at a right angle during installation. B. Torque Anchor Assembly to a maximum of: 4 - 5 N.m (0.408 ~ 0.509 Kgf.m, 35.4 - 44.3 lb-in). C. Repeat on driver's side of vehicle.</p>	
		
Do not over-tighten Anchor Assembly. Make sure the assembly is installed at a right angle.		




4		
		
N O T E	<p>A. Locate the lower plastic grommet as shown. By hand, rotate the grommet counter clockwise to remove, then discard the grommet. B. Repeat for the opposite side.</p>	
		

Genuine Accessories


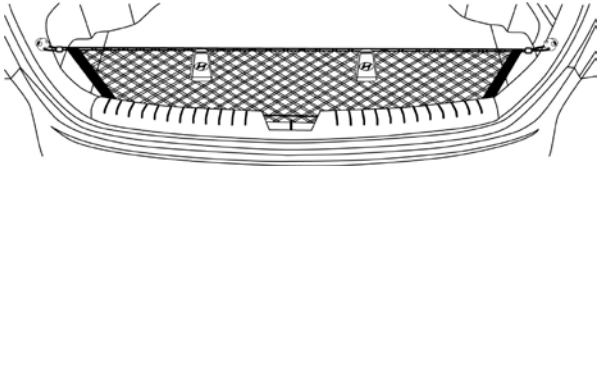

5	
	
N O T E	<p>A. By hand, insert the provided T-anchor with spigot; tighten until snug and no gaps are found.</p> <p>B. Align the T-anchor to a vertical position shown in the drawing.</p> <p>C. Repeat for opposite side.</p>


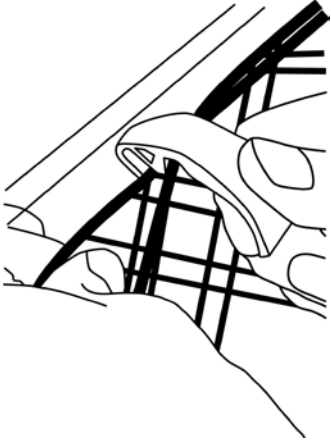

6	
	
N O T E	<p>A. Check for movement or gaps between the T-Anchor and rear plastic sill panel.</p> <p>B. If movement or a gap exceeding 1.0mm is found, further tighten using 1/4 ~ 1/2 increment turns until the T-anchor is seated to a horizontal position.</p> <p>C. Repeat for opposite side.</p>
<p> Ensure that the T-Anchor is fully seated to a vertical position. Use caution when tightening the T-Anchor so you do not damage the plastic panel.</p>	

7	
	
N O T E	<p>A. Attach the bungee loop at the bottom of the net to the T-Anchor as shown on the passenger side.</p> <p>B. Repeat on driver's side of vehicle.</p>

8	
	
N O T E	<p>A. Attach the bungee loop at the top of the net to the upper Mushroom Anchor as shown on the passenger side.</p> <p>B. Repeat on driver's side of vehicle.</p>
<p> Ensure the bungee loops are securely fastened.</p>	






Genuine Accessories

9		
		
N O T E	A. Correctly installed Cargo Net as shown.	
		

10		
		
	A. Grasp the Bungee Cord you will be sliding into the Pull Tab, and wrap two or three fingers around to hold securely. B. With the other hand, grasp the Pull Tab and slide the Bungee Cord into the Clip to fasten, or pull out of the Clip to unfasten.	
	 Ensure the Bungee Cord is fully seated in the Pull Tabs.	

Genuine Accessories

Visual Check

Item to be Checked		Result
	Verify the position of the Cargo Net opening and Pull Tabs.	The Cargo Net opening is at top. Pull Tabs are facing the rear of the vehicle.
	Ensure Mushroom Anchors are secure.	Mushroom Anchors are secure.
	Ensure upper bungee loops are secure to Mushroom Anchors.	Bungee loops are secure to Mushroom Anchors.
	Ensure lower bungee loops are secure to T-Anchors.	Bungee loops are secure to T-Anchors.
	Confirm any customer belongings removed from the trunk are returned.	Customer belongings returned to the trunk.