

Genuine Accessories



Vehicle Model **G90**

Model Year 2017~
 Part No. D2F13 AU100 - RWD
 Language English
 Rev. Date 8/30/2016










Accessory: **All-Season Fitted Liners**

Difficulty: (A)

Note: Difficulty stated above reflects the minimum level of expertise required to install the accessory:

- (A) Customer
- (B) Dealer Technician
- (C) Master Technician or Specialist

Instructional Symbols / Definitions

 Denotes warnings that may lead to serious physical injury or vehicle damage  Denotes cautions to be taken to avoid physical injury or electronic component damage  Denotes cautions to be taken to avoid vehicle and component damage	 Denotes quality processes to be checked prior to moving to the next step  Denotes specific tools that are necessary to complete a step <div style="border: 1px solid black; padding: 2px; text-align: center; width: 20px; margin: 0 auto;">N O T E</div> Denotes important information to be reviewed during the step	Denotes personal protective equipment (PPEs) that may be required for a step. Examples of safety equipment icons noted below: <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;">  Glasses </div> <div style="text-align: center;">  Gloves </div> </div> <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;">  Mask </div> <div style="text-align: center;">  Hearing Protection </div> </div>
---	---	---

Basic Required Tools

None

Part Weight (Gross)

5.07	lbs
2.30	kg

FMVSS 110 Compliance Information

All dealers must determine if the weight they have added in the form of all options or accessories, when added to the weight of all Port/Dealer installed options or accessories, exceeds the lesser of 1.5% of GVWR or 100 lbs. If the additional weight does exceed the lesser of the indicated thresholds, a "Load Carrying Capacity Reduced" label must be installed. A black, fine-point, indelible marker must be used to write by hand onto the label, the reduced carrying capacity in kilograms or pounds, which is the total weight of all added options and accessories.

Load Label Part Number: NP070 - 09003



Warning! Ensure that each All-Season Fitted Liner is securely attached to the vehicle's floor mat anchor(s) before driving the vehicle. This helps keep the All-Season Fitted Liner from sliding forward. If the All-Season Fitted Liner slips and interferes with the movement of the pedals during driving, it may cause an accident.

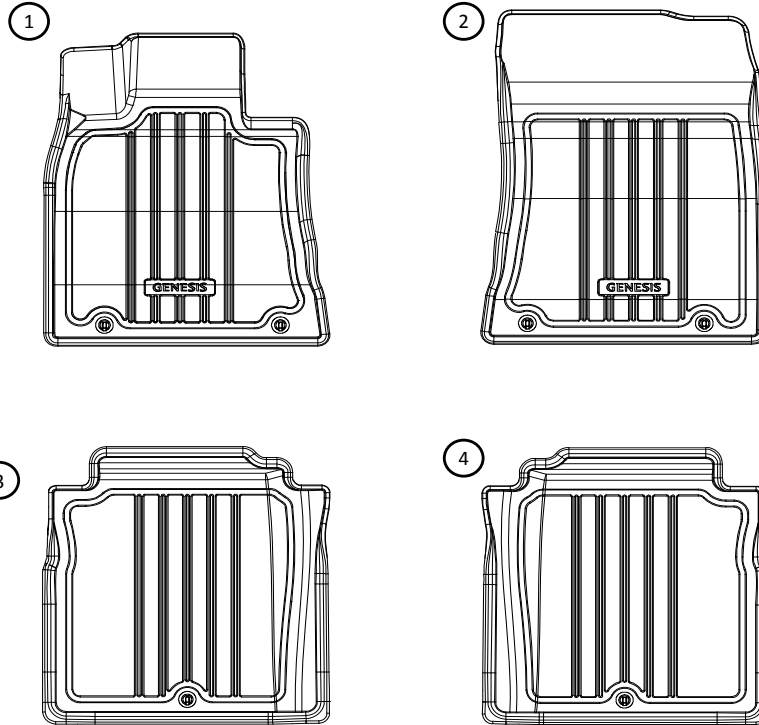
Do not put an additional Floor Mat on top of the anchored All-Season Fitted Liner, otherwise the additional mat may slide forward and interfere with the movement of the pedals.

Notes to the installer:

- 1 Dealer must clearly advise customer of installation method.
- 2 Before installing, verify and identify all parts.
- 3 Remove vinyl factory covering from carpeted areas before installation.
- 4 Sliding driver and passenger seats to furthest rearward position provides better access to install front All-Season Fitted Liners properly.
- 5 When removing mats or liners, be sure to hold grommet and mat/liner at the same time, then pull forward.


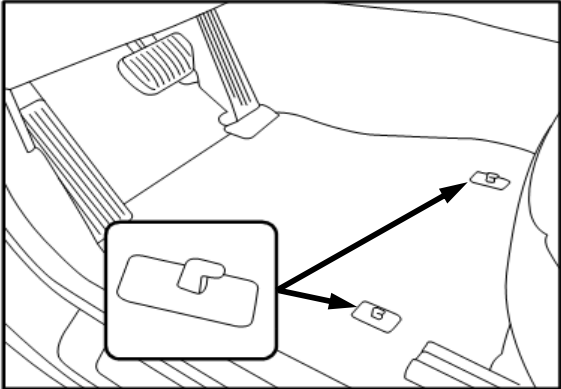
Genuine Accessories


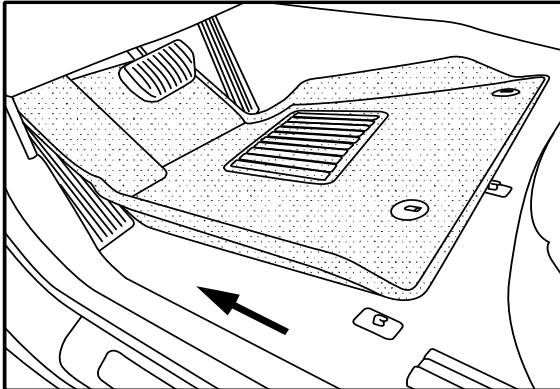
Kit Overview


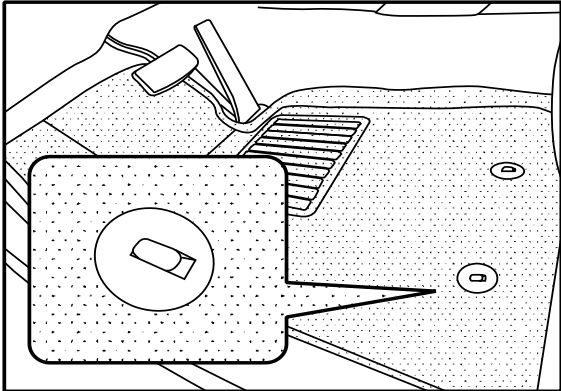



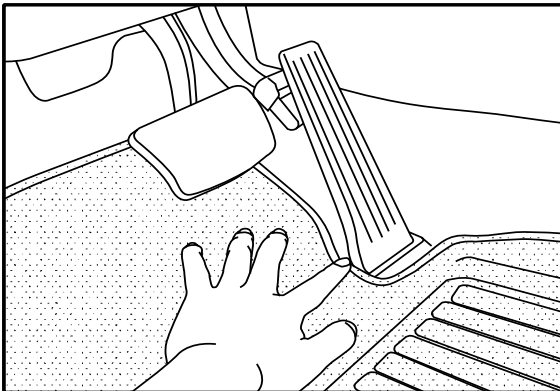
No.	Qty	Description
1	1	Left (Driver) Front All-Season Fitted Liner
2	1	Right (Passenger) Front All-Season Fitted Liner
3	1	Left Rear Liner
4	1	Right Rear Liner

Genuine Accessories


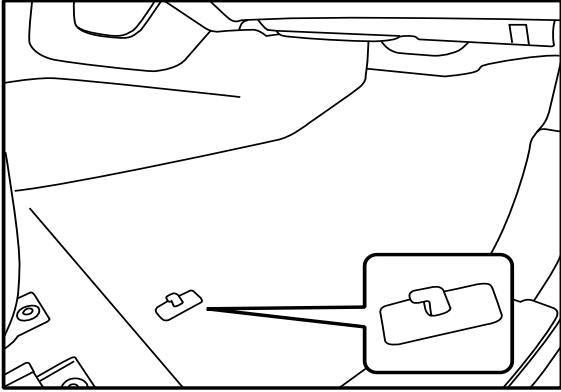
1		
		
N O T E	<p>1. Before installation, remove all floor mats from the front and rear of the vehicle.</p> <p>2. Starting with the left front driver's side floor area, make sure it is clean and that the retention hooks are properly attached to the floor carpet.</p>	


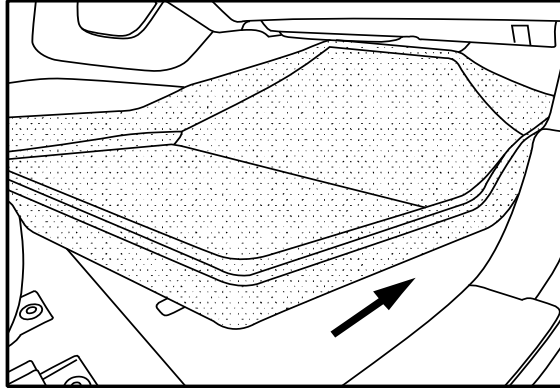
2		
		
N O T E	<p>1. Install the Left (Driver) Front All-Season Fitted Liner by placing the front portion under the brake pedal area and allow the liner to gently fall into place.</p>	


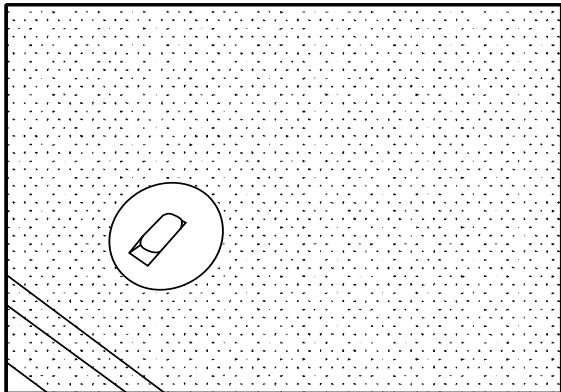
3		
		
N O T E	<p>1. Align the plastic grommets with the retention hooks protruding from the vehicle floor. If necessary, rotate the grommets in the liner to align it with the retention hooks.</p>	


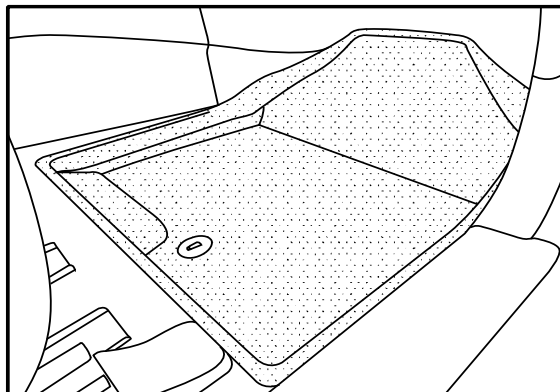
4		
		
N O T E	<p>1. After the drivers side All-Season Fitted Liner is installed, make sure it does not interfere with the accelerator or brake pedals and that the edges are pushed down against the floor.</p>	

Genuine Accessories


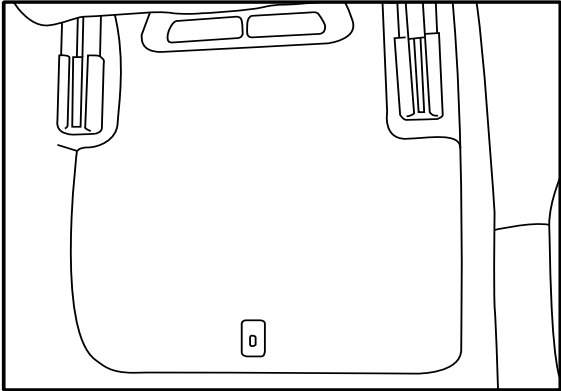
5		
		
N O T E	<p>1. At the right front passenger's side floor area, make sure it is clean and that the retention hook is properly attached to the floor carpet.</p>	


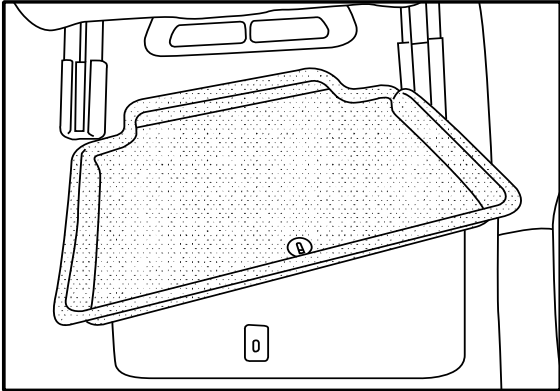
6		
		
N O T E	<p>1. Install the Right (Passenger) Front All-Season Fitted Liner by placing the front portion under the lower dash area and allow the liner to gently fall into place.</p>	


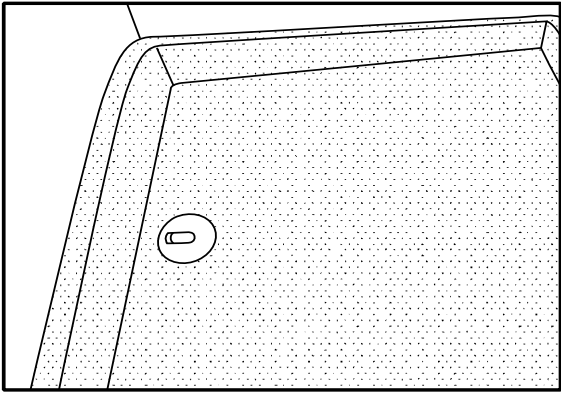
7		
		
N O T E	<p>1. Align the plastic grommet with the retention hook protruding from the vehicle floor. If necessary, rotate the grommet in the liner to align it with the retention hook.</p>	


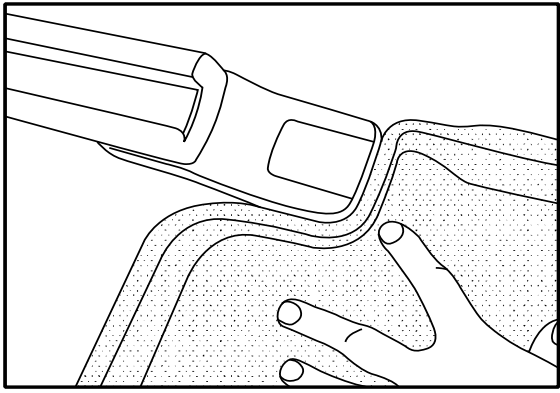
8		
		
N O T E	<p>1. After the Right (Passenger) Front All-Season Fitted Liner is installed, make sure that there is no interference and that the edges are pushed down against the floor.</p>	

Genuine Accessories

9		
		
N O T E	<p>1. At the left rear passenger's side floor area, make sure it is clean and that the retention hook is properly attached to the floor carpet.</p>	



10		
		
N O T E	<p>1. Install the Left Rear All-Season Fitted Liner by placing the front portion between the front seat rails and allow the liner to gently fall into place.</p>	

11		
		
N O T E	<p>1. Align the plastic grommet with the retention hook protruding from the vehicle floor. If necessary, rotate the grommet in the liner to align it with the retention hook.</p>	

12		
		
N O T E	<p>1. After the Left Rear All-Season Fitted Liner is installed, make sure that the liner is flush against the front seat rail covers, there is no interference, and that the edges are pushed down against the floor. 2. Repeat steps 9-12 for the Right Rear All-Season Fitted Liner. 3. Installation is complete.</p>	

Genuine Accessories

Visual Check

Item to be Checked		Result	
	Make sure the accelerator and brake pedals are not interfering with floor liner.	No interference with accelerator and brake pedals.	
	Make sure each floor liner plastic grommet is securely fastened to the vehicle floor with each retention hook.	Each liner properly attached to each retention hook.	

Genuine Accessories

Care & Cleaning

Put this page in the customer's glovebox, for future reference.

Cleaning Instructions for:

G90

All-Season Fitted Liners

Each All-Season Fitted Liner can easily be cleaned using a vacuum, soft cloth, or soft brush.

To remove excess dirt, use water with a mild detergent to clean the liner. Do not use bleach or alcohol to clean the liner or the liner may become damaged or discolored.

Dry the liner with a soft cloth or place the liner in a well ventilated area to dry before reinstalling. If the liner is installed before it is completely dry, it could become moldy or emit an abnormal smell.

Do not place the liner on the ground where it is in direct contact with the sun, or the liner could deform from high temperatures.

Do not use a washing machine or automatic mat cleaner to clean the liner. The liner could become damaged and/or deformed.