

Genuine Accessories



Vehicle Model Elantra

Model Year 2017-
 Part No. F3017 ADUP1
 F3017 ADU01
 Language English
 Rev. Date 3/2/2018

Accessory: Cargo Net

Difficulty: (B)

Note: Difficulty stated above reflects the minimum level of expertise required to install the accessory:
 (A) Customer
 (B) Dealer Technician
 (C) Master Technician or Specialist

Instructional Symbols / Definitions

	Denotes warnings that may lead to serious physical injury or vehicle damage		Denotes quality processes to be checked prior to moving to the next step	Denotes personal protective equipment (PPEs) that may be required for a step. Examples of safety equipment icons noted below:	
	Denotes cautions to be taken to avoid physical injury or electronic component damage		Denotes specific tools that are necessary to complete a step		
	Denotes cautions to be taken to avoid vehicle and component damage	N O T E	Denotes important information to be reviewed during the step		
				Glasses	Gloves
				Mask	Hearing Protection

Basic Required Tools

Clip Removal Tool	Drill	3/8" Driver	25mm 6pt Socket	Torque Wrench

Part Weight (Gross)

0.43	lbs
0.20	kg

FMVSS 110 Compliance Information

All dealers must determine if the weight they have added in the form of all options or accessories, when added to the weight of all Port/Dealer Installed options or accessories, exceeds the lesser of 1.5% of GVWR or 100 lbs. If the additional weight does exceed the lesser of the indicated thresholds, a "Load Carrying Capacity Reduced" label must be installed. A black, fine-point, indelible marker must be used to write by hand onto the label, the reduced carrying capacity in kilograms or pounds, which is the total weight of all added options and accessories.

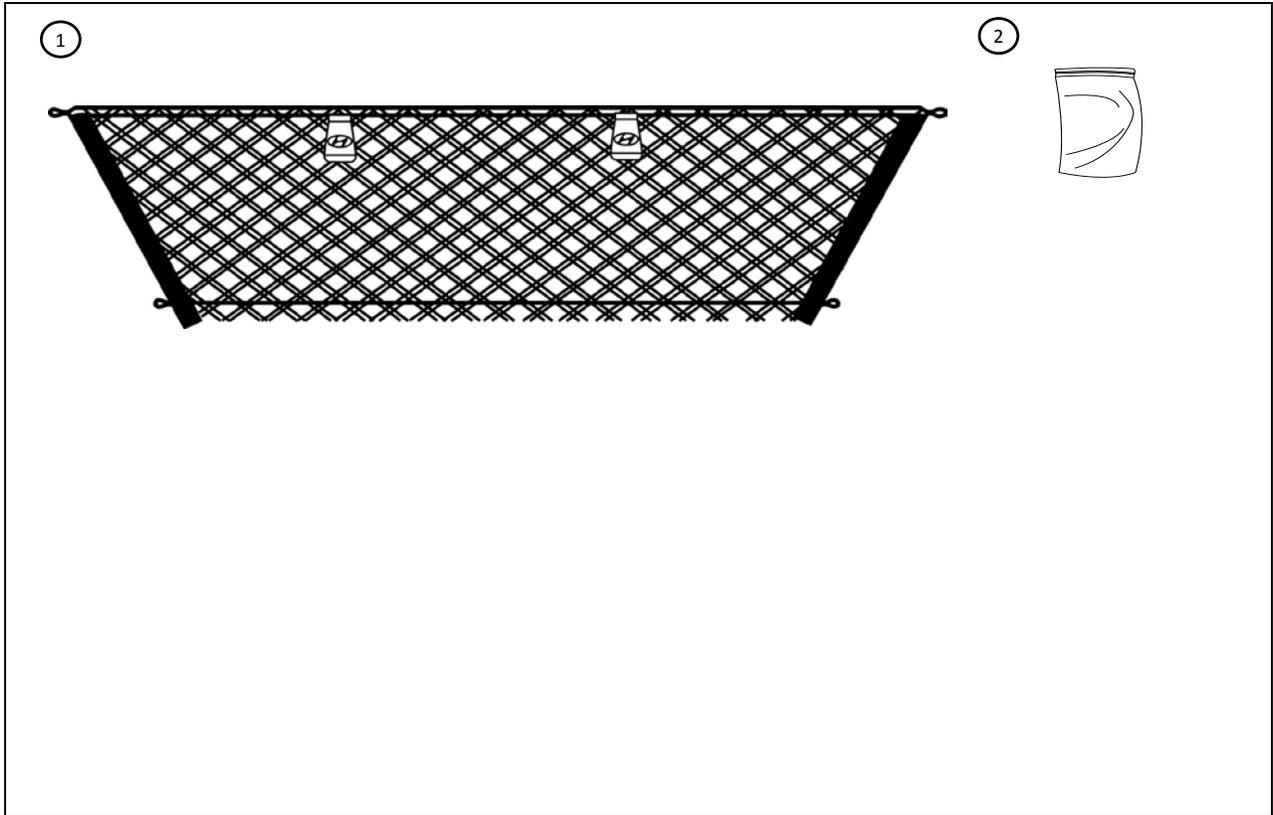
Load Label Part Number: NP070 - 09003

Notes to the installer:

- 1 Read the entire Installation Instructions prior to beginning the installation of the part.
- 2 Make sure the vehicle is completely clean and dry in the area(s) the part is to be installed.
- 3 Ensure the vehicle is properly protected in the area(s) that the accessory is to be installed.
- 4 NEVER place tools on painted surfaces, seating surfaces, dash pad, console or floor carpet/mats.
- 5 Always wear appropriate personal protective equipment, including gloves, safety glasses, etc., when required.

Genuine Accessories

Kit Overview



No.	Qty	Description
1	1	Cargo Net
2	1	Hardware Kit

Hardware Kit Contents

A	
2	Mushroom Anchor

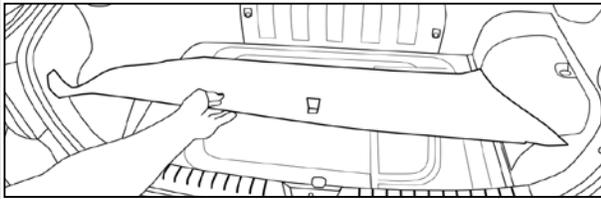
B	
2	Mushroom Anchor

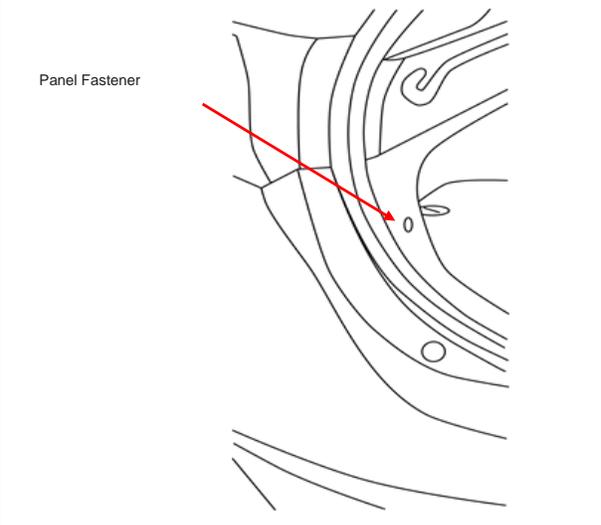
C	
2	Panel Nut

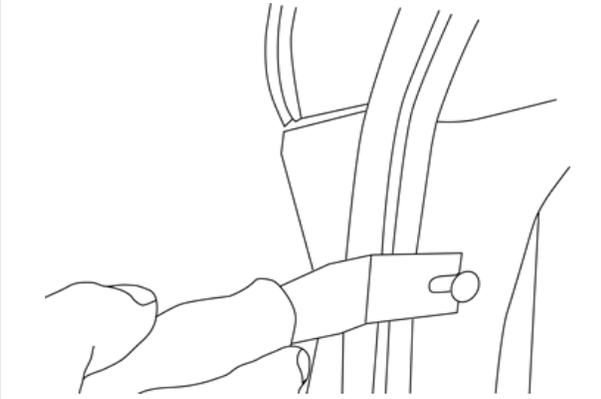
D	
2	Collar Stud

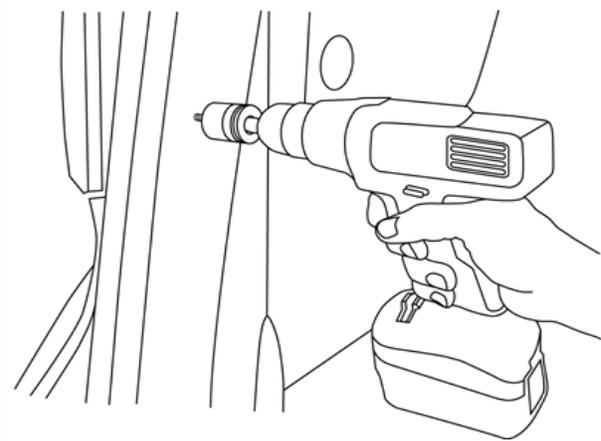
Hardware Total
8

Genuine Accessories

1		
		
N O T E	<p>A. Open the trunk lid. B. Remove the trunk floor tray from the trunk area. Place on a clean dry surface.</p>	

2		
		
N O T E	<p>A. Locate the driver's side panel fastener as shown.</p>	

3		Clip Removal Tool
		
N O T E	<p>A. Using a Clip Removal Tool, carefully remove the fastener. B. Discard fastener. C. Repeat for the opposite side (passenger side).</p>	
	<p>DO NOT allow the clip removal tool to press against the rubber seal.</p>	

4		Electric Drill, 3/8" Driver, 25mm 6pt Socket, and Torque Wrench
		
N O T E	<p>A. Using the 3/8" Driver equipped with a 25mm 6pt Socket, slowly install the Anchor Assembly through the carpet panel hole, and into the sheet metal, until fully seated. Note: Make sure the Anchor Assembly is installed at a right angle during installation. B. Torque Anchor Assembly to a maximum of: 4 - 5 N.m (0.408 ~ 0.509 Kgf.m, 35.4 - 44.3 lb-in). C. Repeat for the opposite side (passenger side).</p>	
	<p>Do not over-tighten Anchor Assembly. Make sure the assembly is installed at a right angle.</p>	

Genuine Accessories

5		Clip Removal Tool
N O T E	<p>A. Identify the panel fastener clip as shown on the driver side.</p> <p>B. Remove the panel fastener clip.</p> <p>- The clip can be removed by placing the clip removal tool behind the rear sill panel and pulling it forward.</p> <p>C. Repeat for the Center and Passenger Side.</p> <p>D. Discard two (2) of the panel fastener clips.</p>	
	<p>DO NOT allow the Clip Removal Tool to press against the rear plastic sill panel.</p>	

6		Clip Removal Tool
N O T E	<p>A. Disengage the four (4) plastic mounting clips by gently prying between the rubber seal and rear plastic sill panel.</p> <p>B. Do not damage the trunk rubber strip.</p>	

7		
N O T E	<p>A. By hand, gently lift the plastic sill panel off of the vehicle.</p> <p>B. Rear plastic sill panel has four mounting clips. After removal of rear plastic sill panel, make sure the clips remain on the rear sill panel.</p>	
	<p>Place the rear plastic sill panel onto a clean, dry surface to prevent scratching.</p>	

8		
N O T E	<p>A. Secure one (1) Panel Nut to the lower Driver Side hole where the panel clip was removed in Step 5, as shown.</p> <p>B. Repeat for the opposite side (passenger side).</p>	

Genuine Accessories

9		
N O T E	<p>A. Fully insert and thread one (1) Collar Stud into the Panel Nut as shown. B. Repeat for the opposite side (passenger side).</p>	

10		
N O T E	<p>A. Carefully place the plastic sill over the Collar Studs and into the original position. B. Prior to locking the rear plastic sill panel into position, ensure the plastic sill panel clips and Collar Studs are aligned properly. After confirming, push down to snap all four (4) clips into place. C. Replace Center panel fastener clip retained in step 5.</p>	

11		
N O T E	<p>A. By hand, insert one (1) Mushroom Anchor onto the Collar Stud and tighten until snug and no gaps are found. B. Repeat for the opposite side (passenger side).</p>	

12		
N O T E	<p>A. Check for movement or gaps between the Mushroom Anchor and plastic sill panel. B. If movement or a gap exceeding 1.0mm is found, further tightening using 1/4 ~ 1/2 turn increments. C. Repeat for the opposite side (passenger side).</p>	

Genuine Accessories

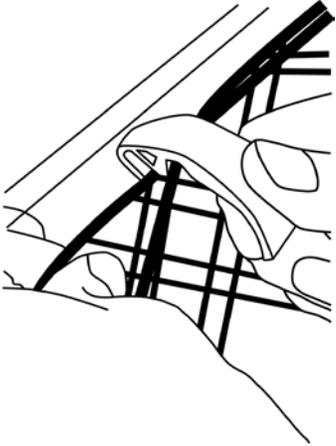
13	
N O T E	<p>A. Reinstall the trunk floor tray.</p>

14	
N O T E	<p>A. Attach the bungee loop at the top of the net to the upper Mushroom Anchor as shown on the passenger side. B. Repeat on driver's side of vehicle.</p>
	<p>Ensure the bungee loops are securely fastened.</p>

15	
N O T E	<p>A. Attach the bungee loop at the bottom of the net to the Mushroom Anchor as shown on the passenger side. B. Repeat on driver's side of vehicle.</p>

16	
N O T E	<p>A. Correctly installed Cargo Net as shown.</p>

Genuine Accessories

17		
		
<p>A. Grasp the Bungee Cord you will be sliding into the Pull Tab, and wrap two or three fingers around to hold securely.</p> <p>B. With the other hand, grasp the Pull Tab and slide the Bungee Cord into the Clip to fasten, or pull out of the Clip to unfasten.</p>		
 Ensure the Bungee Cord is fully seated in the Pull Tabs.		

Visual Check

Item to be Checked	Result
 Verify the position of the Cargo Net opening and Pull Tabs.	The Cargo Net opening is at top. Pull Tabs are facing the rear of the vehicle.
 Ensure Mushroom Anchors are secure.	Mushroom Anchors are secure.
 Ensure bungee loops are secure to Mushroom Anchors.	Bungee loops are secure to Mushroom Anchors.
 Confirm any customer belongings removed from the trunk are returned.	Customer belongings returned to the trunk.