

Genuine Accessories



Vehicle Model Elantra

Model Year 2017~

Part No. F3022 ADU00

Language English

Rev. Date 11/23/2015

Accessory: Door Visor

Difficulty: (B)

Note: Difficulty stated above reflects the minimum level of expertise required to install the accessory:

- (A) Customer
- (B) Dealer Technician
- (C) Master Technician or Specialist

Instructional Symbols / Definitions

	Denotes warnings that may lead to serious physical injury or vehicle damage		Denotes quality processes to be checked prior to moving to the next step	Denotes personal protective equipment (PPEs) that may be required for a step. Examples of safety equipment icons noted below:	
	Denotes cautions to be taken to avoid physical injury or electronic component damage		Denotes specific tools that are necessary to complete a step		
	Denotes cautions to be taken to avoid vehicle and component damage	N O T E	Denotes important information to be reviewed during the step		
				Glasses	Gloves
				Mask	Hearing Protection

Basic Required Tools

Soap & Water	50/50 Isopropyl Alcohol (70%) & Water	Ruler	Non-Permanent Marker or Pencil	Lint Free Cloth

Part Weight (Gross)

1.57	lbs
0.71	kg

FMVSS 110 Compliance Information

All dealers must determine if the weight they have added in the form of all options or accessories, when added to the weight of all Port/Dealer Installed options or accessories, exceeds the lesser of 1.5% of GVWR or 100 lbs. If the additional weight does exceed the lesser of the indicated thresholds, a "Load Carrying Capacity Reduced" label must be installed. A black, fine-point, indelible marker must be used to write by hand onto the label, the reduced carrying capacity in kilograms or pounds, which is the total weight of all added options and accessories.


Load Label Part Number: NP070 - 09003

Notes to the installer:

- 1 Read the entire Installation Instructions prior to beginning the installation of the part.
- 2 Combine a mixture of 50/50 Isopropyl Alcohol (70%) & Water into a spray bottle.
- 3 Make sure the vehicle is completely clean and dry in the area(s) the part is to be installed.
- 4 Ensure the vehicle is properly protected in the area(s) that the accessory is to be installed.
- 5 NEVER place tools on painted surfaces, seating surfaces, dash pad, console or floor carpet/mats.
- 6 Always wear appropriate personal protective equipment, including gloves, safety glasses, etc., when required.
- 7 Adhesives used in this product are sensitive to temperature during installation, only install this product to the vehicle if the temperature is between 60°-80°F / 15°-27°C. Installing the parts to the vehicle outside of this temperature may lead to reduced level of performance.
- 8 Installation of all parts should not occur in direct sunlight or if the vehicle has been parked in direct sunlight and is hot as a result. Both the parts and vehicle should be at the same temperature 60°-80°F / 15°-27°C during the installation to ensure maximum adhesion.
- 9 Use of Door Visor may result in some wind noise heard.
- 10 Do not wash the vehicle for 48 hours after installation.
- 11 Do not drive the vehicle for 1 hour after installation.


Genuine Accessories


Kit Overview

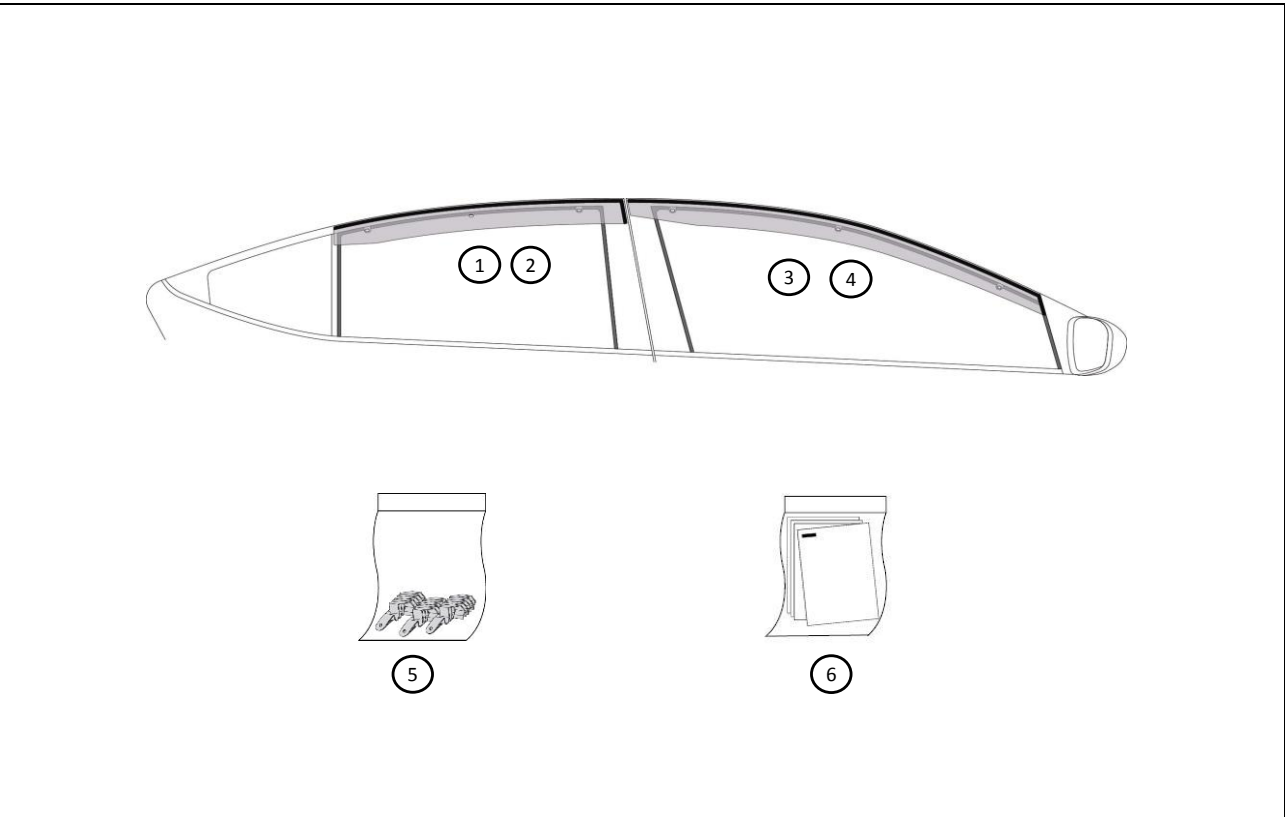

No.	Qty	Description
1	1	Rear RH Door Visor
2	1	Rear LH Door Visor
3	1	Front RH Door Visor
4	1	Front LH Door Visor
5	1	Hardware Kit
6	1	Installation Instructions


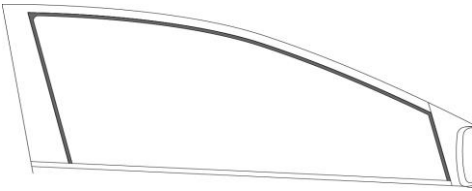


Hardware Kit Contents




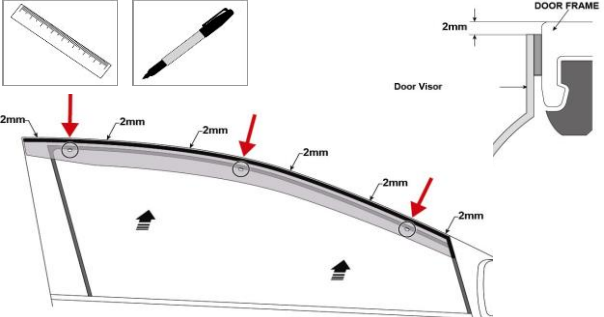
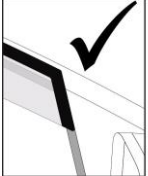
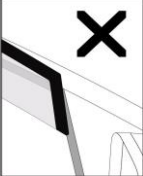

A	
12	Metal Clip


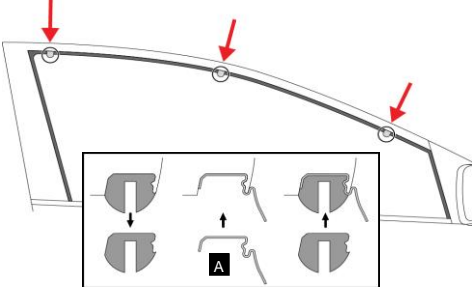

B	
12	Push Rivets


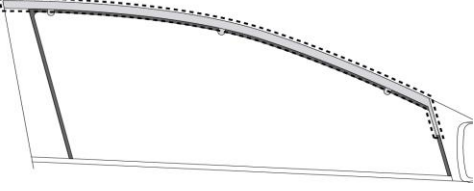


Hardware Total
24

Genuine Accessories

1		Soap & Water and Lint Free Cloth
 <div style="text-align: center; margin-top: 20px;">  </div>		
N O T E	<ol style="list-style-type: none"> 1. Thoroughly clean the front RH upper door frame and surrounding areas. 2. Wipe away any residue and allow to completely dry. 3. Lower the window. 	
	<p>Make sure all surfaces are completely dry before trial fitting the Front RH Door Visor.</p>	

2		Non-Permanent Marker or Pencil and Ruler
<div style="display: flex; justify-content: space-between; align-items: flex-start;"> <div style="text-align: center;">   </div> <div style="text-align: right;">  </div> </div> <div style="display: flex; justify-content: center; margin-top: 20px;"> <div style="text-align: center; margin-right: 20px;">  </div> <div style="text-align: center;">  </div> </div>		
N O T E	<ol style="list-style-type: none"> 1. Remove the protective film from the Front RH Door Visor. 2. Trial fit the Front RH Door Visor onto the door frame. Align the front edge of the Door Visor to rest against the door mirror sill, while aligning the top edge of the Door Visor 2mm below the top of the door edge. <p>- Ensure when aligning the Door Visor to the top of the door, the front edge of the Door Visor does not pull away from door mirror sill, creating a gap.</p> <ol style="list-style-type: none"> 3. Mark the location of the three (3) holes in the Door Visor and where they correspond to the door frame, as shown. 	
	<p>Make sure all surfaces are completely dry before proceeding to the next step.</p>	

3		50/50 Isopropyl Alcohol (70%) & Water and Lint Free Cloth
		
N O T E	<ol style="list-style-type: none"> 1. Starting at the center, dislodge the rubber window seal from the door frame. Do not remove the rubber window seal from the front or rear corners of the door frame. 2. Install one (1) Metal Clip "A" between the door frame and the rubber window seal at the front marked position. 3. Install one (1) Metal Clip "A" at the rear marked position. 4. Install one (1) Metal Clip "A" at the center marked position. 5. Reinstall the rubber window seal into the door frame. Ensure that the seal is fully seated. 	
	<p>Ensure the rubber window seal is correctly seated. Be careful not to damage the rubber window seal.</p>	

4		50/50 Isopropyl Alcohol (70%) & Water and Lint Free Cloth
 <div style="text-align: center; margin-top: 20px;">  </div>		
N O T E	<ol style="list-style-type: none"> 1. Using 50/50 Isopropyl Alcohol (70%) & Water and a lint free cloth, thoroughly clean the entire tape attachment area as shown. - Make sure to remove any marks from the Non-Permanent Marker or Pencil. 2. Wipe away any residue. 	
	<p>Do not touch the areas that have been cleaned. Do not install if the door frame is wet or outside the temperature range indicated on page 1.</p>	

Genuine Accessories

5		
NOTE	<p>1. Peel back approximately 50mm (2") of the tape liner at each end, then fold at 45° to the outside of the Door Visor as shown.</p>	
	<p>Do not touch the exposed tape with hands, allow to get dirty or leave exposed for an extended period of time.</p>	

6		Ruler
NOTE	<p>1. Align the front edge of the Door Visor to rest against the door mirror sill, while aligning the top edge of the Door Visor 2mm below the top of the door edge.</p> <p>- Ensure when aligning the Door Visor to the top of the door, the front edge of the Door Visor does not pull away from door mirror sill, creating a gap.</p> <p>2. Ensure the tape liners are exposed (refer to step 5).</p> <p>3. Install three (3) Push Rivets "B" through the Door Visor into the three (3) Metal Clips "A". Press down on the center of each Push Rivet to engage.</p> <p>4. Ensure the front edge of the Door Visor is rested against the mirror sill after the Push Rivets are installed.</p>	
	<p>Apply only light pressure to the front and rear corners of the Door Visor when installing the Push Rivets.</p>	

7		
NOTE	<p>1. Fully remove and discard the tape liner by pulling from both ends as shown.</p>	
	<p>Be careful not to tear the tape liner during removal.</p>	

8		Lint Free Cloth
NOTE	<p>1. Using a Lint Free Cloth, apply firm downward pressure to the entire tape flange six (6) times to promote maximum adhesion of the Door Visor to the door frame.</p> <p>2. Repeat steps 1 - 8 for the Front LH Door Visor.</p>	
	<p>It is critical that the part is correctly pressed down and the Metal Clips are properly fitted to ensure the function of the part.</p>	

Genuine Accessories

9		Soap & Water and Lint Free Cloth
N O T E	1. Thoroughly clean the rear RH upper door frame and surrounding areas. 2. Wipe away any residue and allow to completely dry. 3. Lower the window.	
	Make sure all surfaces are completely dry before trial fitting the Rear RH Door Visor.	

10		Non-Permanent Marker or Pencil and Ruler
<div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> </div> <div style="text-align: center;"> </div> <div style="text-align: center;"> </div> </div>		
N O T E	1. Remove the protective film from the Rear RH Door Visor. 2. Trial fit the Rear RH Door Visor onto the door frame. Align the top edge of the Door Visor 2mm below the top of the door edge, while locating the front edge of the Door Visor 2mm back from the front edge of the door frame. 3. Mark the location of the three (3) holes in the Door Visor and where they correspond to the door frame, as shown.	
	Make sure all surfaces are completely dry before proceeding to the next step.	

11		
N O T E	1. Starting at the center, dislodge the rubber window seal from the door frame. Do not remove the rubber window seal from the front or rear corners of the door frame. 2. Install one (1) Metal Clip "A" between the door frame and the rubber window seal at the front marked position. 3. Install one (1) Metal Clip "A" at the rear marked position. 4. Install one (1) Metal Clip "A" at the center marked position. 5. Reinstall the rubber window seal into the door frame. Ensure that the seal is fully seated.	
	Ensure the rubber window seal is correctly seated. Be careful not to damage the rubber window seal.	



12		50/50 Isopropyl Alcohol (70%) & Water and Lint Free Cloth
N O T E	1. Using 50/50 Isopropyl Alcohol (70%) & Water and a lint free cloth, thoroughly clean the entire tape attachment area as shown. - Make sure to remove any marks from the Non-Permanent Marker or Pencil. 2. Wipe away any residue.	
	Do not touch the areas that have been cleaned. Do not install if the door frame is wet or outside the temperature range indicated on page 1.	

Genuine Accessories

13		
NOTE		<ol style="list-style-type: none"> 1. Peel back approximately 50mm (2") of the tape liner at each end, then fold at 45° to the outside of the Door Visor as shown. 2. Fully remove the vertical tape liner.
		<p>Do not touch the exposed tape with hands, allow to get dirty or leave exposed for an extended period of time.</p>
15		
NOTE		<ol style="list-style-type: none"> 1. Fully remove and discard the tape liner by pulling from both ends as shown.
		<p>Be careful not to tear the tape liner during removal.</p>
14		Ruler
NOTE		<ol style="list-style-type: none"> 1. Align the top edge of the Door Visor 2mm below the top of the door edge while locating the front edge of the Door Visor 2mm from the front of the door edge. 2. Ensure the tape liners are exposed (refer to step 13). 3. Install three (3) Push Rivets "B" through the Door Visor into the three (3) Metal Clips "A". Press down on the center of each Push Rivet to engage.
		<p>Apply only light pressure to the front and rear corners of the Door Visor when installing the Push Rivets.</p>
16		Lint Free Cloth
NOTE		<ol style="list-style-type: none"> 1. Using a Lint Free Cloth, apply firm downward pressure to the entire tape flange six (6) times to promote maximum adhesion of the Door Visor to the door frame. 2. Repeat steps 9 - 16 for the Rear LH Door Visor.
		<p>It is critical that the part is correctly pressed down and the Metal Clips are properly fitted to ensure the function of the part.</p>

Genuine Accessories

Visual Check

Item to be Checked		Result	
	Check position of the Door Visor to make sure that it is positioned correctly (Step 6 & 14).	Door Visor has correct fitment.	
	Conduct a final inspection, ensuring that all Metal Clips and Push Rivets are correctly installed and fully engaged. Close all door and windows, then check clearances at all edges for interference.	Door Visor has correct fitment.	

Genuine Accessories

Care & Cleaning

<p>Put this page in the customer's glovebox, for future reference.</p>
--

Cleaning Instructions for:

F3022 ADU00

Spray with a firm water spray to remove any loose dirt, then wash with water, detergent and a soft cloth or sponge.
DO NOT use petroleum based solvents or abrasives.

Retain these instructions in your glovebox for future reference.