

Genuine Accessories



Vehicle Model **Elantra**

Model Year 2017~

Part No. F3F46 AC000

Language English

Rev. Date 9/1/2016

Accessory: **Front Mudguard Kit**

Difficulty: B


Note: Difficulty stated above reflects the minimum level of expertise required to install the accessory:

- (A) Customer
- (B) Dealer Technician
- (C) Master Technician or Specialist

Instructional Symbols / Definitions

	Denotes warnings that may lead to serious physical injury or vehicle damage		Denotes quality processes to be checked prior to moving to the next step	Denotes personal protective equipment (PPEs) that may be required for a step. Examples of safety equipment icons noted below:	
	Denotes cautions to be taken to avoid physical injury or electronic component damage		Denotes specific tools that are necessary to complete a step		
	Denotes cautions to be taken to avoid vehicle and component damage	N O T E	Denotes important information to be reviewed during the step		
				Glasses	Gloves
				Mask	Hearing Protection

Basic Required Tools

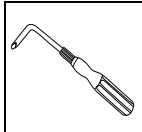

Right Angle #2 Phillips Screwdriver

Part Weight (Gross)


0.55	lbs
0.25	kg

All dealers must determine if the weight they have added in the form of all options or accessories, when added to the weight of all Port/Dealer Installed options or accessories, exceeds the lesser of 1.5% of GVWR or 100 lbs. If the additional weight does exceed the lesser of the indicated thresholds, a "Load Carrying Capacity Reduced" label must be installed. A black, fine-point, indelible marker must be used to write by hand onto the label, the reduced carrying capacity in kilograms or pounds, which is the total weight of all added options and accessories.

Notes to the installer:

- 1 Read the entire Installation Instructions prior to beginning the installation of the part.
- 2 Make sure the vehicle is completely clean and dry in the area(s) the part is to be installed.
- 3 Ensure the vehicle is properly protected in the area(s) that the accessory is to be installed.
- 4 NEVER place tools on painted surfaces, seating surfaces, dash pad, console or floor carpet/mats.
- 5 Always wear appropriate personal protective equipment, including gloves, safety glasses, etc., when required.

Kit Overview

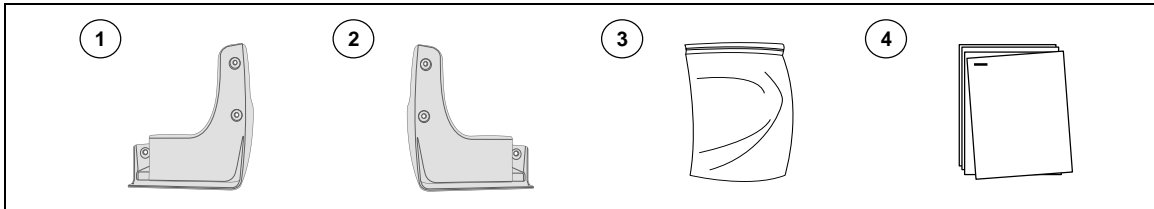


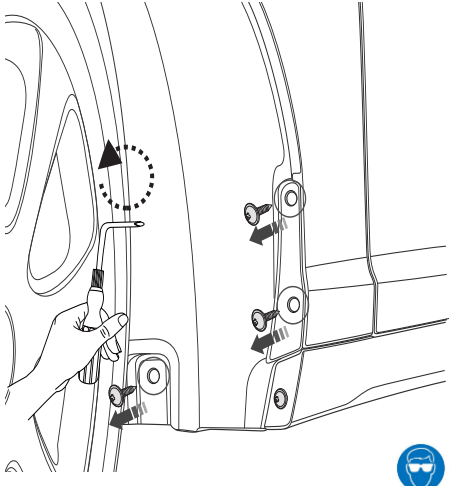
No.	Qty	Description
1	1	Front Mudguard (LH)
2	1	Front Mudguard (RH)
3	1	Hardware Bag
4	1	Installation Instructions


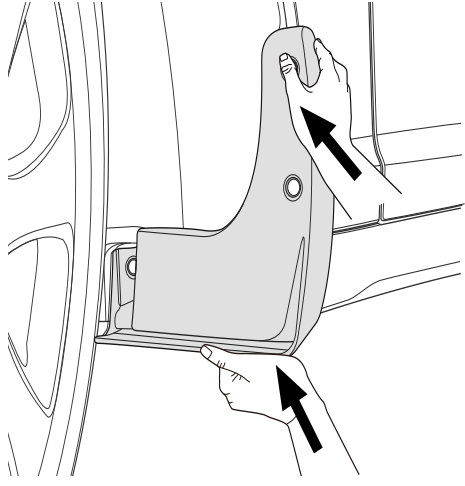

Hardware Kit Contents


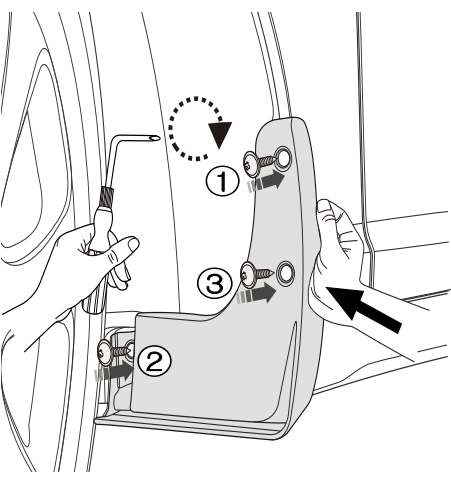

A	
6	Self Tapping Screw M6x25



Hardware Total
6

Genuine Accessories

1	 Right Angle #2 Phillips Screwdriver
	
N O T E	1. Turn the wheels to make more room while installing and removing the screws. 2. Remove the three (3) screws from the highlighted area as shown. 3. Discard the screws.

2	
	
N O T E	1. Align the Front Mudguard as shown ensuring a proper fit.
	Make sure to push the Front Mudguard upward and in during the installation to eliminate any possible gaps.

3	 Right Angle #2 Phillips Screwdriver
	
N O T E	1. Align the protruding tip of the Front Mudguard between the rocker panel and side sill to eliminate any possible gaps. While pushing the Front Mudguard toward the center of the vehicle as shown in the drawing, insert and fasten one (1) provided screw into the upper hole. 2. Insert and fasten one (1) provided screw into the inboard hole. 3. Insert and fasten one (1) provided screw into the lower hole. 4. Repeat steps 1-3 for the opposite side. 5. Installation is complete.
	After the installation, check for any visible gaps. If any gap exceeds 0.5mm, loosen the mounting screws and refit the Front Mudguard to the body to achieve the correct specification. Be careful not to over-tighten or strip the screw head.

Visual Check	Item to be Checked
	Make sure to push the Front Mudguard upward and in during the installation to eliminate any possible gaps.
	After the installation, check for any visible gaps. If any gap exceeds 0.5mm, loosen the mounting screws and refit the Front Mudguard to the body to achieve the correct specification. Be careful not to over-tighten or strip the head of the screw.

Result	
Any visible gaps should not exceed 0.5mm.	
Any visible gaps should not exceed 0.5mm.	