

# Genuine Accessories



Vehicle Model **Ioniq**

Model Year 2017-

Part No. G2F15 AU000

Language English

Rev. Date 8/31/2016

Accessory: **Cargo Cover**

Difficulty: A


**Note:** Difficulty stated above reflects the minimum level of expertise required to install the accessory:

- (A) Customer
- (B) Dealer Technician
- (C) Master Technician or Specialist

## Instructional Symbols / Definitions

	Denotes warnings that may lead to serious physical injury or vehicle damage		Denotes quality processes to be checked prior to moving to the next step	Denotes personal protective equipment (PPEs) that may be required for a step. Examples of safety equipment icons noted below:	
	Denotes cautions to be taken to avoid physical injury or electronic component damage		Denotes specific tools that are necessary to complete a step		
	Denotes cautions to be taken to avoid vehicle and component damage	<b>N O T E</b>	Denotes important information to be reviewed during the step		
				Glasses	Gloves
				Mask	Hearing Protection

## Basic Required Tools

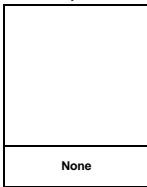

## Part Weight (Gross)

<b>5.25</b>	lbs
<b>2.38</b>	kg


## FMVSS 110 Compliance Information

All dealers must determine if the weight they have added in the form of all options or accessories, when added to the weight of all Port/Dealer Installed options or accessories, exceeds the lesser of 1.5% of GVWR or 100 lbs. If the additional weight does exceed the lesser of the indicated thresholds, a "Load Carrying Capacity Reduced" label must be installed. A black, fine-point, indelible marker must be used to write by hand onto the label, the reduced carrying capacity in kilograms or pounds, which is the total weight of all added options and accessories.  
**Load Label Part Number: NP070 - 09003**

## Notes to the installer:


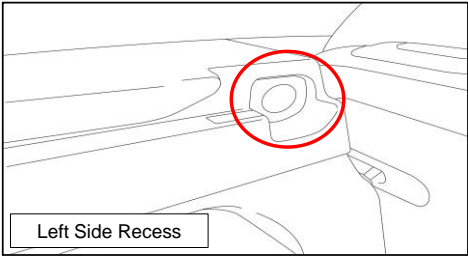
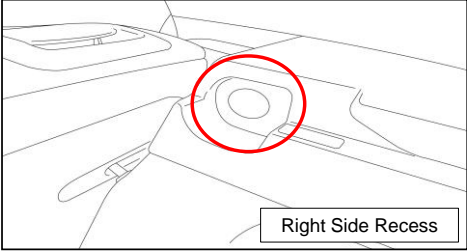
- 1 Read the entire Installation Instructions prior to beginning the installation of the part.
- 2 Make sure the vehicle is completely clean and dry in the area(s) the part is to be installed.
- 3 Ensure the vehicle is properly protected in the area(s) that the accessory is to be installed.
- 4 NEVER place tools on painted surfaces, seating surfaces, dash pad, console or floor carpet/mats.
- 5 Always wear appropriate personal protective equipment, including gloves, safety glasses, etc., when required.


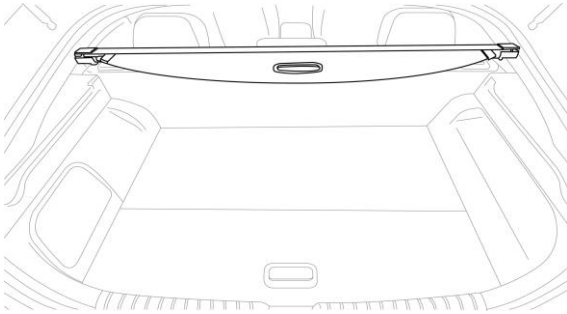

## Kit Overview

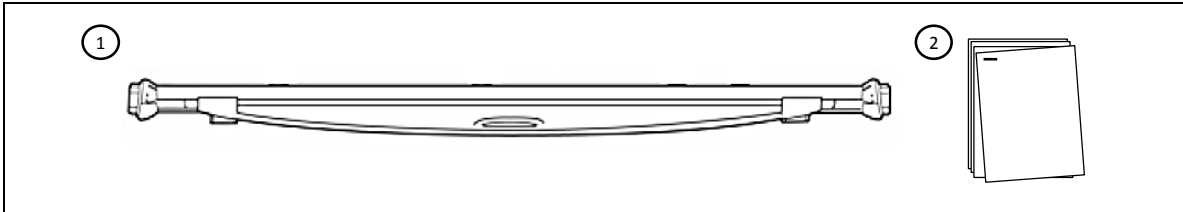
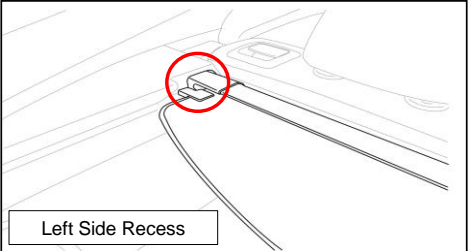
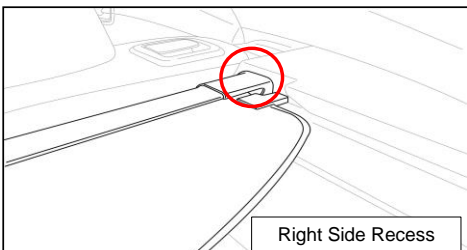



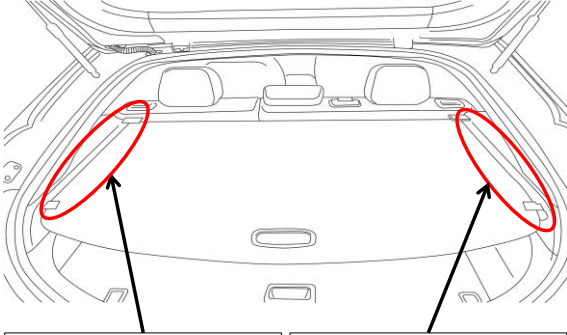
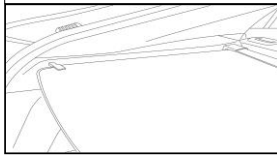
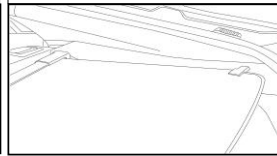
No.	Qty	Description
1	1	Cargo Cover
2	1	Installation Instructions


# Genuine Accessories

1	
 <p style="text-align: center;">Left Side Recess</p>	
 <p style="text-align: center;">Right Side Recess</p>	
N O T E	<p>1. Locate the two (2) Cargo Cover mounting recess points on both the Driver and Passenger Side Trim Panels of the rear cargo area as shown.</p>

2	
	
N O T E	<p>1. Before installing, position the Cargo Cover with the pull handle facing towards the rear of the vehicle.</p>
	<p>Be careful not to scratch the side panels.</p>

3	
 <p style="text-align: center;">Left Side Recess</p>	
 <p style="text-align: center;">Right Side Recess</p>	
N O T E	<p>1. Insert the Cargo Cover into the Driver Side Trim Panel recess point. 2. Next, compress the Cargo Cover and insert the other end into the Passenger Side Trim Panel recess point.</p>

4	
	
 <p style="text-align: center;">Left Hook &amp; Guide Track</p>	 <p style="text-align: center;">Right Hook &amp; Guide Track</p>
N O T E	<p>1. With the Cargo Cover installed into the trim panels, make sure the left and right side hooks of the Cargo Cover are aligned with the guide track built into each side of the trim panels. 2. Using the pull handle, pull the Cargo Cover rearward as shown. Make sure the hooks follow the guide track when pulling. 3. Pull the left and right hooks of the Cargo Cover up into the left and right sides of the trim panels as shown, to lock the Cargo Cover in place. 4. Installation is complete.</p>

Visual Check	
	Item to be Checked
	Ensure the Cargo Cover is fully engaged into both the Driver and Passenger Side Trim Panels.

	Result
	Cargo Cover is secure.