

Genuine Accessories



Vehicle Model **IONIQ**

Accessory: **Cargo Net, Hideaway**

Model Year 2017-
 Part No. G2F17 AU100 (DIO)
G2F17 AU700 (PIO)
 Language English
 Rev. Date 12/14/2016

Difficulty: (B)

Note: Difficulty stated above reflects the minimum level of expertise required to install the accessory:
 (A) Customer
 (B) Dealer Technician
 (C) Master Technician or Specialist

Application Notes

Only Applicable to IONIQ HEV Model Only

Instructional Symbols / Definitions

	Denotes warnings that may lead to serious physical injury or vehicle damage		Denotes quality processes to be checked prior to moving to the next step	Denotes personal protective equipment (PPEs) that may be required for a step. Examples of safety equipment icons noted below:	
	Denotes cautions to be taken to avoid physical injury or electronic component damage		Denotes specific tools that are necessary to complete a step		
	Denotes cautions to be taken to avoid vehicle and component damage	N O T E	Denotes important information to be reviewed during the step		

Basic Required Tools

Clip Removal Tool	Drill	3/8" Driver	10mm Deep Socket	Torque Wrench

Part Weight (Gross)

0.66	lbs
0.31	kg

FMVSS 110 Compliance Information


All dealers must determine if the weight they have added in the form of all options or accessories, when added to the weight of all Port/Dealer installed options or accessories, exceeds the lesser of 1.5% of GVWR or 100 lbs. If the additional weight does exceed the lesser of the indicated thresholds, a "Load Carrying Capacity Reduced" label must be installed. A black, fine-point, indelible marker must be used to write by hand onto the label, the reduced carrying capacity in kilograms or pounds, which is the total weight of all added options and accessories.
Load Label Part Number: NP070 - 09003

Notes to the installer:

- 1 Read the entire Installation Instructions prior to beginning the installation of the part.
- 2 Make sure the vehicle is completely clean and dry in the area(s) the part is to be installed.
- 3 Ensure the vehicle is properly protected in the area(s) that the accessory is to be installed.
- 4 NEVER place tools on painted surfaces, seating surfaces, dash pad, console or floor carpet/mats.
- 5 Always wear appropriate personal protective equipment, including gloves, safety glasses, etc., when required.


Genuine Accessories


Kit Overview

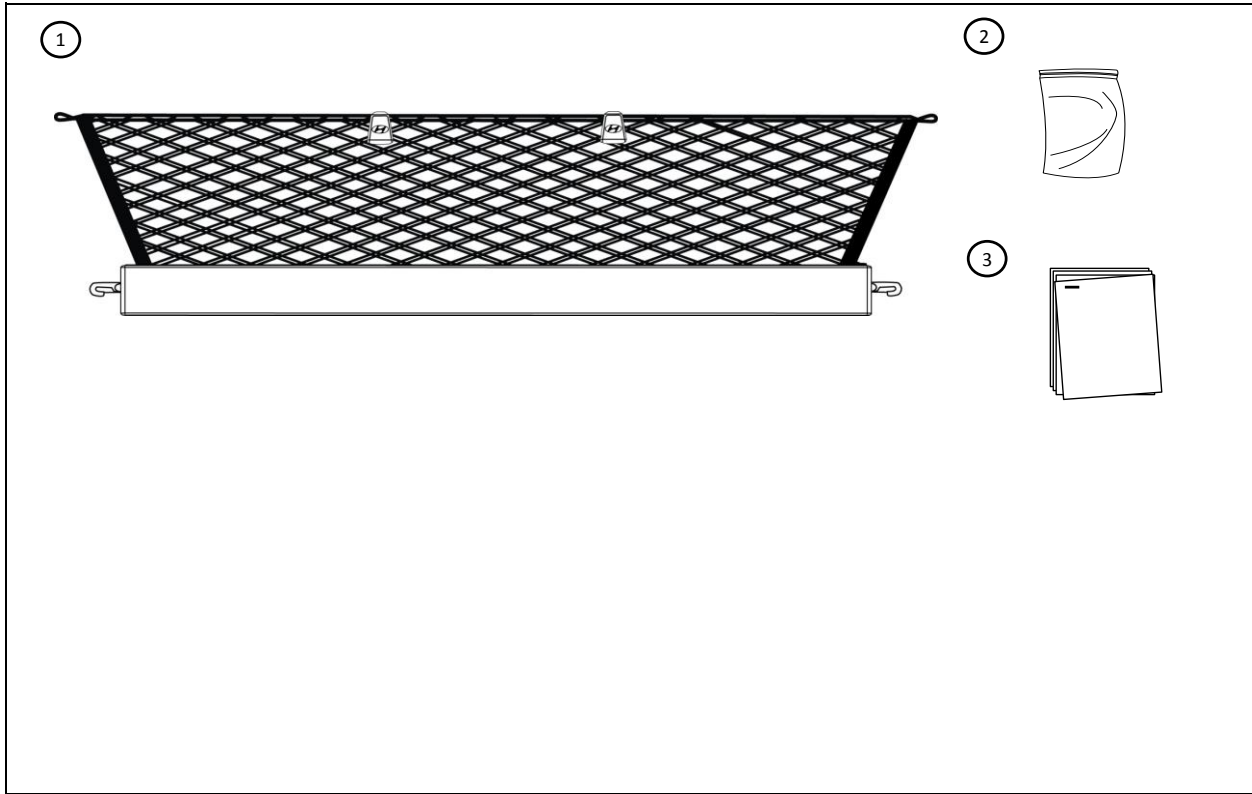

No.	Qty	Description
1	1	Cargo Net
2	1	Hardware Kit
3	1	Installation Instructions


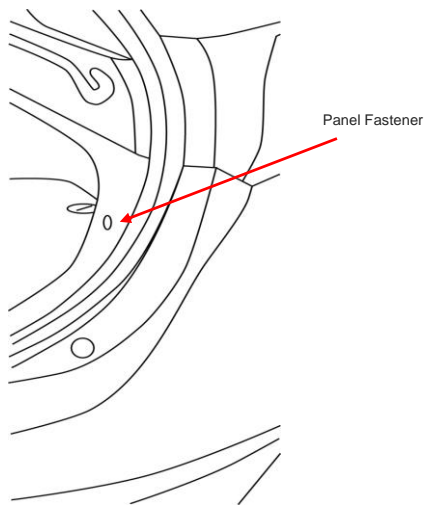
Hardware Kit Contents


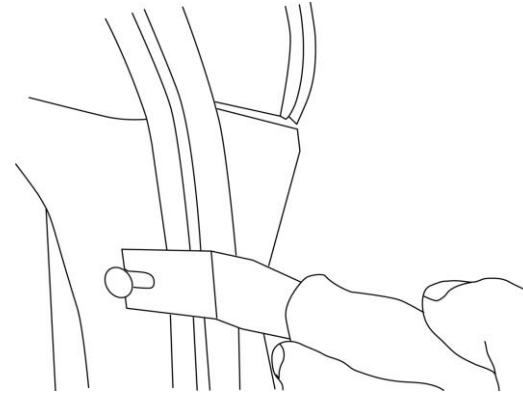

A	
2	Stud Assembly


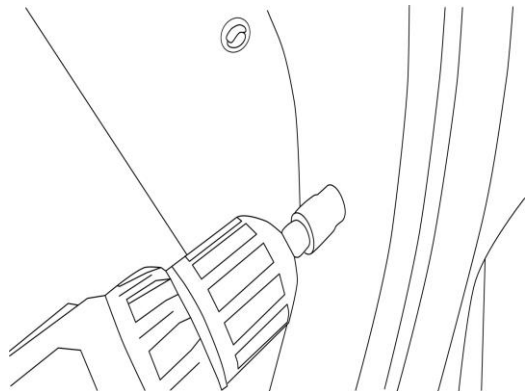

B	
2	Mushroom Anchor


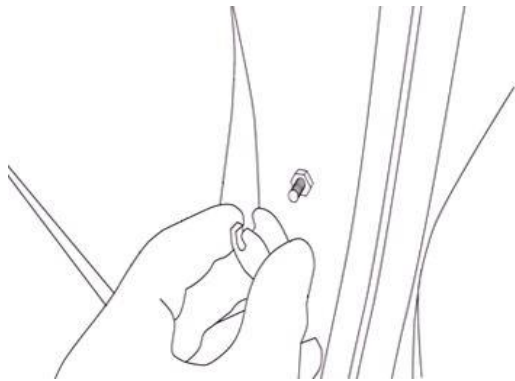
Hardware Total
4

Genuine Accessories

1		
 <p style="text-align: right; margin-right: 50px;">Panel Fastener</p>		
N O T E	<ol style="list-style-type: none"> 1. Open hatch. 2. Locate the passenger side panel fastener as shown. 3. Repeat on driver's side of vehicle. 	

2		Clip Removal Tool
		
N O T E	<ol style="list-style-type: none"> 1. Using a Clip Removal Tool, carefully remove the fastener. 2. Discard fastener. 3. Repeat on driver's side of vehicle. 	
		DO NOT allow the clip removal tool to press against the rubber seal.

3		Electric Drill, 3/8" Driver, 10mm Deep Socket, and Torque Wrench
		
N O T E	<ol style="list-style-type: none"> 1. Using the 3/8" Driver equipped with a 10mm Socket, slowly install the Stud Assembly through the carpet panel hole, and into the sheet metal, until fully seated. Note: Make sure the Stud Assembly is installed at a right angle during installation. 2. Torque Stud Assembly to a maximum of: 4 - 6.78 N.m (0.408 - 0.691 Kgf.m, 35.4 - 60 lb-in). 3. Repeat on driver's side of vehicle. 	
		Do not over-tighten Stud Assembly.

4		
		
N O T E	<ol style="list-style-type: none"> 1. Screw one (1) Mushroom Anchor onto the Stud. 2. Repeat on driver's side of vehicle. 	

Genuine Accessories




5		
<div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> <p>Trunk Liner</p> <p>Vehicle Sheet Metal</p> <p>Correct Installation</p> </div> <div style="text-align: center;"> <p>Incorrect Installation</p> </div> </div>		
N O T E	<ol style="list-style-type: none"> 1. Check for movement or gaps between the Mushroom Anchor and trunk liner. 2. If movement or a gap exceeding 1.0mm is found, further tighten using 1/4 - 1/2 turn increments until the Mushroom Anchor is seated. 3. Repeat on driver's side of vehicle. 	
	<p>Ensure that the Mushroom Anchor assembly is fully seated.</p>	


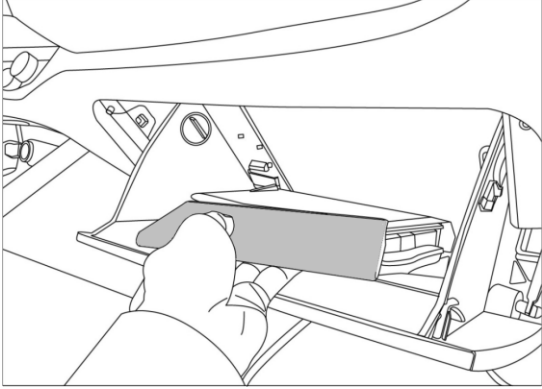

6		
N O T E	<ol style="list-style-type: none"> 1. Orient the net so the opening is in the up position and the pull tabs are facing rearward. 2. Attach the Clip Hook at the bottom of the net to the lower D-Ring as shown on the passenger side. 3. Repeat on driver's side of vehicle. 	
	<p>Ensure the opening is at the top. Ensure the clips are securely fastened.</p>	

7		
N O T E	<ol style="list-style-type: none"> 1. Attach the bungee loop at the top of the net to the upper Mushroom Anchor as shown on the passenger side. 2. Repeat on driver's side of vehicle. 	
	<p>Ensure the bungee loops are securely fastened.</p>	







8		
N O T E	<ol style="list-style-type: none"> 1. Correctly installed Cargo Net as shown. 	

Genuine Accessories

9		
		
N O T E	<ol style="list-style-type: none"> 1. Grasp the Bungee Cord you will be sliding into the Pull Tab, and wrap two or three fingers around to hold securely. 2. With the other hand, grasp the Pull Tab and slide the Bungee Cord into the Clip to fasten, or pull out of the Clip to unfasten. 	
	Ensure the Bungee Cord is fully seated in the Pull Tabs.	

10		
		
N O T E	<ol style="list-style-type: none"> 1. Place the Installation Instructions inside the vehicle glove box. 2. Perform Visual Check. 	
		

Visual Check

	Item to be Checked
	Verify the position of the Cargo Net opening and Pull Tabs.
	Ensure Mushroom Anchors are secure.
	Ensure upper bungee loops are secure to Mushroom Anchors.
	Ensure lower Clip Hooks are secure to D-Rings.
	Confirm any customer belongings removed from the trunk are returned.
	Installation Instructions placed inside the vehicle glove box.

	Result
	The Cargo Net opening is at top. Pull Tabs are facing the rear of the vehicle.
	Mushroom Anchors are secure.
	Bungee loops are secure to Mushroom Anchors.
	Lower Clip Hooks are secure to D-Rings.
	Customer belongings returned to the trunk.
	Installation Instructions placed inside the vehicle glove box.