

Genuine Accessories



Vehicle Model **Elantra GT**
Kona
 Model Year **2018~**
 Part No. **G3H17 AK021**
 Language **English**
 Rev. Date **11/13/2017**










Accessory: **Cargo Net**

Difficulty: **A**


Note: Difficulty stated above reflects the minimum level of expertise required to install the accessory:

- (A) Customer
- (B) Dealer Technician
- (C) Master Technician or Specialist

Instructional Symbols / Definitions

	Denotes warnings that may lead to serious physical injury or vehicle damage		Denotes quality processes to be checked prior to moving to the next step	Denotes personal protective equipment (PPEs) that may be required for a step. Examples of safety equipment icons noted below:	
	Denotes cautions to be taken to avoid physical injury or electronic component damage		Denotes specific tools that are necessary to complete a step		
	Denotes cautions to be taken to avoid vehicle and component damage	N O T E	Denotes important information to be reviewed during the step		
				Glasses	Gloves
				Mask	Hearing Protection

Basic Required Tools

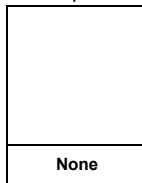

Part Weight (Gross)


0.31	lbs
0.14	kg

All dealers must determine if the weight they have added in the form of all options or accessories, when added to the weight of all Port/Dealer Installed options or accessories, exceeds the lesser of 1.5% of GVWR or 100 lbs. If the additional weight does exceed the lesser of the indicated thresholds, a "Load Carrying Capacity Reduced" label must be installed. A black, fine-point, indelible marker must be used to write by hand onto the label, the reduced carrying capacity in kilograms or pounds, which is the total weight of all added options and accessories.

Notes to the installer:


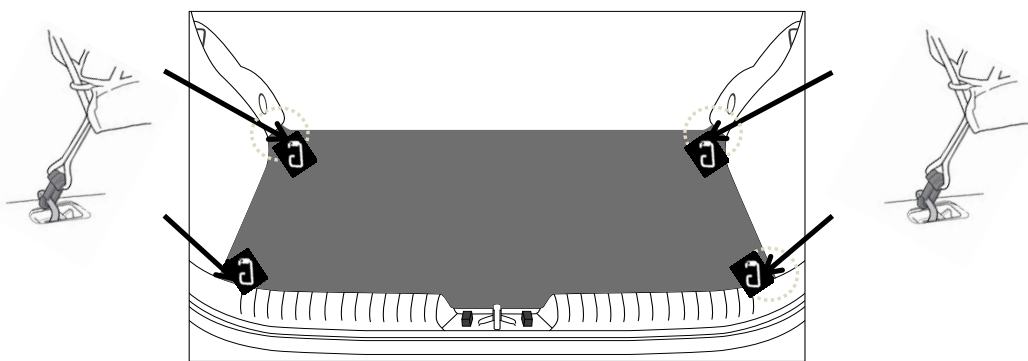

- 1 Read the entire Installation Instructions prior to beginning the installation of the part.
- 2 Make sure the vehicle is completely clean and dry in the area(s) the part is to be installed.
- 3 Ensure the vehicle is properly protected in the area(s) that the accessory is to be installed.
- 4 NEVER place tools on painted surfaces, seating surfaces, dash pad, console or floor carpet/mats.
- 5 Always wear appropriate personal protective equipment, including gloves, safety glasses, etc., when required.

Kit Overview

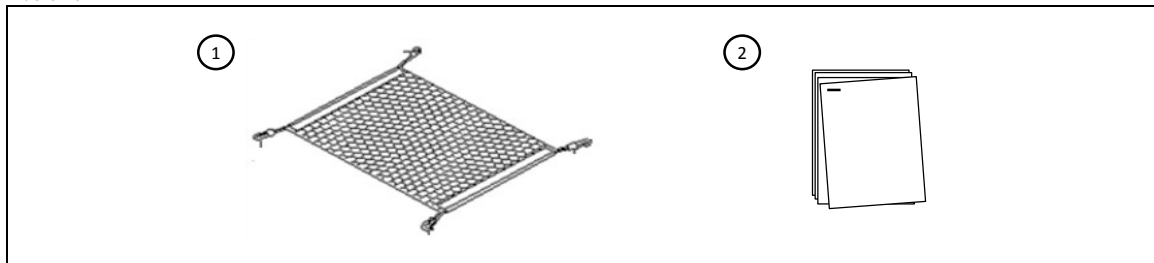


No.	Qty	Description
1	1	Cargo Net
2	1	Installation Instructions

Genuine Accessories

1		
N O T E	<p>1. Lay the Cargo Net flat on the cargo floor as shown.</p> <p>2. Attach the clip at the front of the Cargo Net to the forward D-Ring of the cargo area on the driver side. Repeat for the passenger side.</p> <p>3. Attach the clip at the rear of the Cargo Net to the rearward D-Ring of the cargo area on the driver side. Repeat for the passenger side.</p> <p>4. Installation is complete.</p>	
	<p>Ensure the clips are securely fastened.</p>	

Visual Check

Item to be Checked	Result
<div style="display: flex; align-items: center;">  <div>Ensure all clips are fully attached to the D-Rings.</div> </div>	<div style="display: flex; align-items: center;"> <div style="flex-grow: 1;">Clips fully attached to all D-Rings.</div> <div style="width: 100px; height: 30px; border: 1px solid black;"></div> </div>