

# Genuine Accessories



**Vehicle Model** Accent  
**Model Year** 2018-  
**Part No.** J0F17 AU000 (DIO)  
                   J0F17 AU600 (PIO)  
**Language** English  
**Rev. Date** 6/13/2017


**Accessory:** Cargo Net  
**Difficulty:** ( B )

**Note:** Difficulty stated above reflects the minimum level of expertise required to install the accessory:  
 (A) Customer  
 (B) Dealer Technician  
 (C) Master Technician or Specialist

## Instructional Symbols / Definitions

<p>Denotes warnings that may lead to serious physical injury or vehicle damage</p>	<p>Denotes quality processes to be checked prior to moving to the next step</p>	<p>Denotes personal protective equipment (PPEs) that may be required for a step. Examples of safety equipment icons noted below:</p>	
<p>Denotes cautions to be taken to avoid physical injury or electronic component damage</p>	<p>Denotes specific tools that are necessary to complete a step</p>	<p>Glasses</p>	<p>Gloves</p>
<p>Denotes cautions to be taken to avoid vehicle and component damage</p>	<p style="text-align: center;">N O T E</p> <p>Denotes important information to be reviewed during the step</p>	<p>Mask</p>	<p>Hearing Protection</p>

## Basic Required Tools

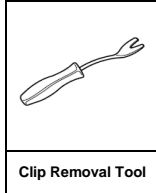

## Part Weight (Gross)

<b>0.40</b>	lbs
<b>0.18</b>	kg

## FMVSS 110 Compliance Information


All dealers must determine if the weight they have added in the form of all options or accessories, when added to the weight of all Port/Dealer installed options or accessories, exceeds the lesser of 1.5% of GVWR or 100 lbs. If the additional weight does exceed the lesser of the indicated thresholds, a "Load Carrying Capacity Reduced" label must be installed. A black, fine-point, indelible marker must be used to write by hand onto the label, the reduced carrying capacity in kilograms or pounds, which is the total weight of all added options and accessories.  
**Load Label Part Number: NP070 - 09003**

## Notes to the installer:

- 1 Read the entire Installation Instructions prior to beginning the installation of the part.
- 2 Make sure the vehicle is completely clean and dry in the area(s) the part is to be installed.
- 3 Ensure the vehicle is properly protected in the area(s) that the accessory is to be installed.
- 4 NEVER place tools on painted surfaces, seating surfaces, dash pad, console or floor carpet/mats.
- 5 Always wear appropriate personal protective equipment, including gloves, safety glasses, etc., when required.


# Genuine Accessories


## Kit Overview

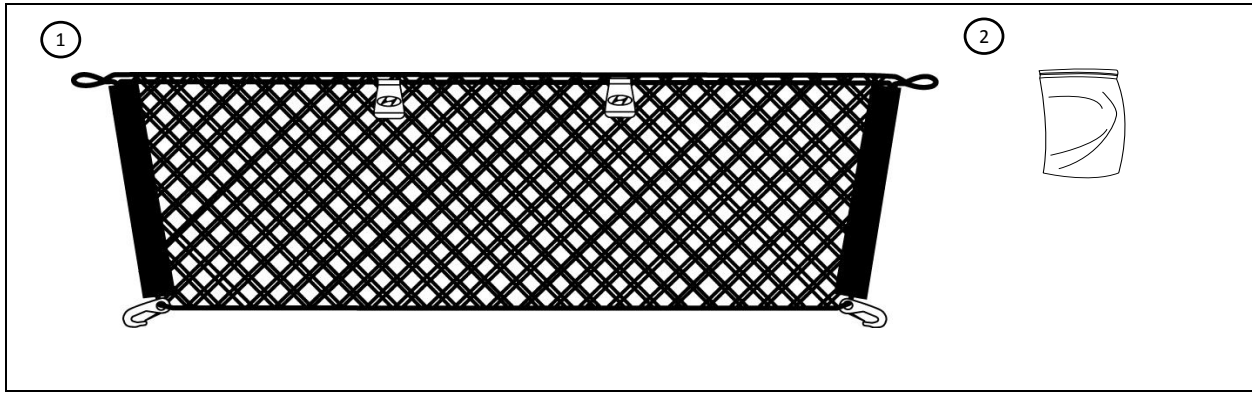


No.	Qty	Description
1	1	Cargo Net
2	1	Hardware Kit

### Hardware Kit Contents

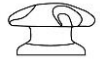
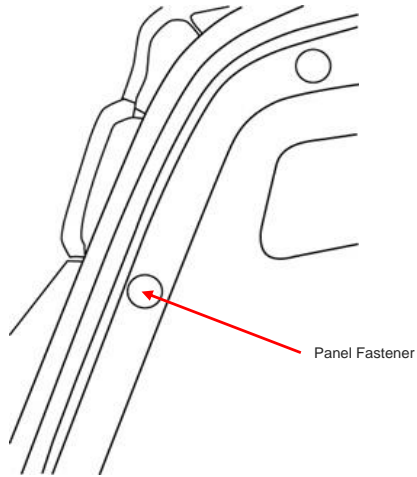
A	
2	Mushroom Anchor

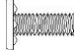
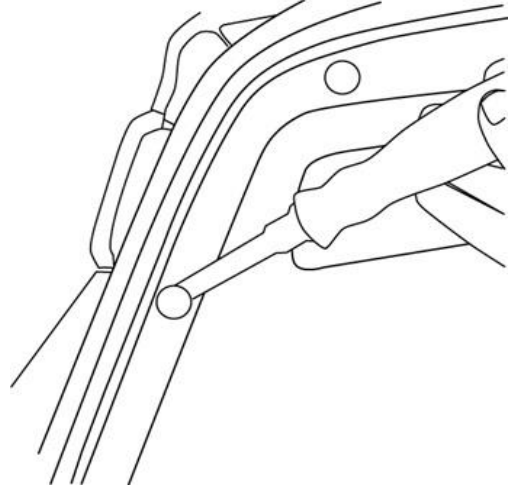

B	
2	Weld Stud


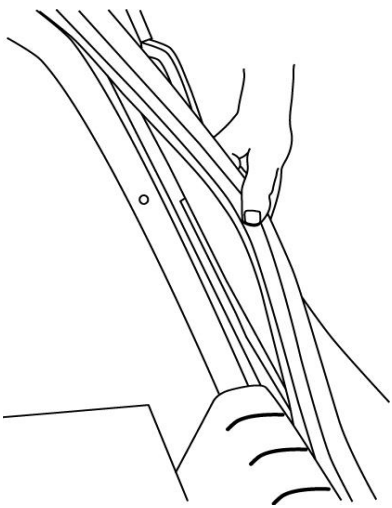

C	
2	Plastic Washer


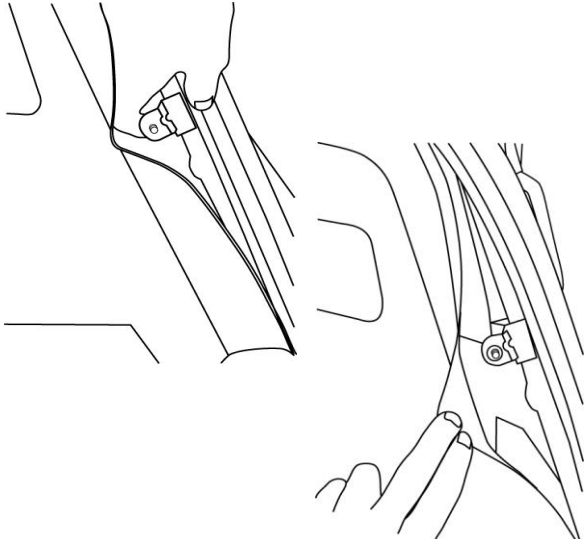


Hardware Total
6

## Genuine Accessories


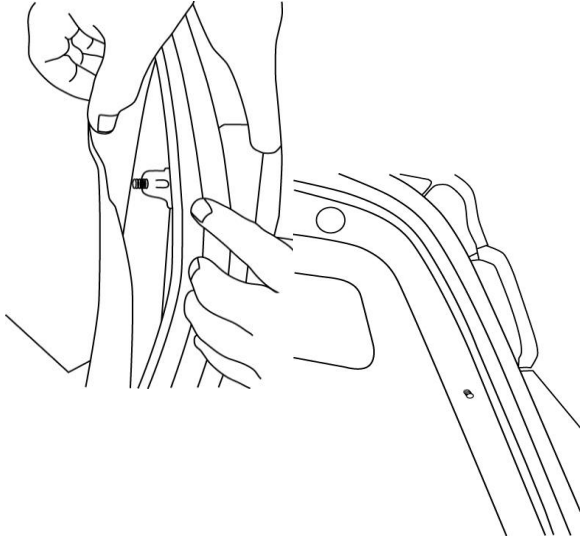
1		
		
N O T E	<ol style="list-style-type: none"> <li>1. Open trunk lid.</li> <li>2. Locate the driver side panel fastener as shown.</li> </ol>	


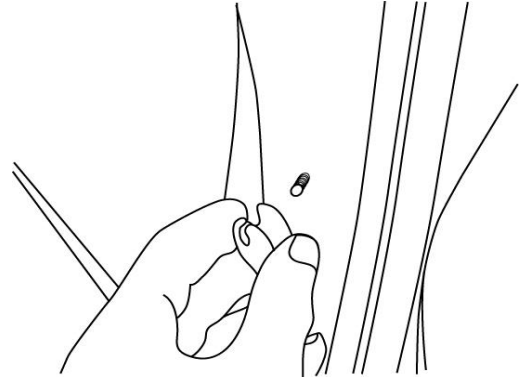
2		Clip Removal Tool
		
N O T E	<ol style="list-style-type: none"> <li>1. Using a Clip Removal Tool, carefully remove the fastener.</li> <li>2. Discard fastener.</li> <li>3. Repeat on passenger side of vehicle.</li> </ol>	
		
<b>DO NOT allow the clip removal tool to press against the rubber seal.</b>		


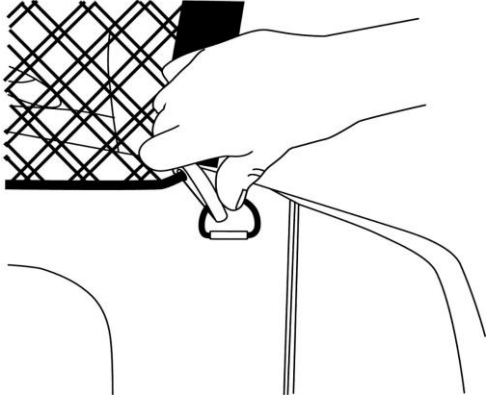

3		
		
N O T E	<ol style="list-style-type: none"> <li>1. Continuing on the passenger side of the vehicle, locate the rubber seal found alongside the vehicle body / trunk lid opening.</li> <li>2. Carefully dislodge the rubber seal around the removed panel fastener.</li> </ol>	
		
<b>Be careful not to damage the rubber seal when dislodging. Do not allow the rubber seal gasket material to transfer to the vehicle body.</b>		


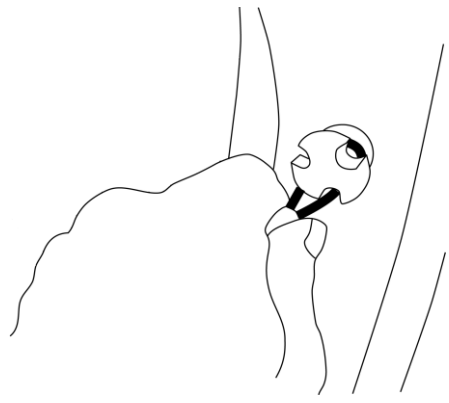

4		
		
N O T E	<ol style="list-style-type: none"> <li>1. Insert one (1) Weld Stud from behind, into the metal mounting tab, and hold in place.</li> <li>2. While holding the Weld Stud firmly from behind, push one (1) Plastic Washer over the threaded end.</li> </ol>	
		
<b>Use caution when installing the Weld Stud so it does not fall out or drop while securing the Plastic Washer.</b>		
		
<b>Ensure you have fully seated the Plastic Washer tightly against the metal tab.</b>		

## Genuine Accessories


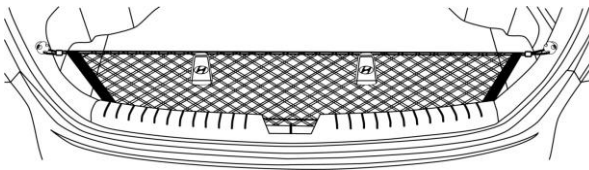
5		
		
N O T E	<ol style="list-style-type: none"> <li>1. Carefully line up the upper hole in the trunk liner and pull it over the installed Weld Stud.</li> <li>2. Reposition the trunk liner and weather stripping back to their original configuration.</li> </ol>	




6		
		
N O T E	<ol style="list-style-type: none"> <li>1. Screw one (1) Mushroom Anchor onto the Stud.</li> <li>2. Check for movement or gaps between the Mushroom Anchor and trunk liner.</li> <li>3. If movement or a gap exceeding 1.0mm is found, further tighten using 1/4 ~ 1/2 turn increments until the Mushroom Anchor is seated.</li> <li>4. Repeat steps 3-6 on driver side of vehicle.</li> </ol>	

7		
		
N O T E	<ol style="list-style-type: none"> <li>1. Orient the net so the opening is in the up position and the pull tabs are facing rearward.</li> <li>2. Attach the Clip Hook at the bottom of the net to the lower D-Ring as shown on the driver side.</li> <li>3. Repeat on the passenger side of vehicle.</li> </ol>	
	<p><b>Ensure the opening is at the top.</b> <b>Ensure the clips are securely fastened.</b></p>	

8		
		
N O T E	<ol style="list-style-type: none"> <li>1. Attach the bungee loop at the top of the net to the upper Mushroom Anchor as shown on the passenger side.</li> <li>2. Repeat on the driver side of vehicle.</li> </ol>	
	<p><b>Ensure the bungee loops are securely fastened.</b></p>	







## Genuine Accessories

9		
		
N O T E	<p>1. Correctly installed Cargo Net as shown.</p>	

10		
		
N O T E	<p>1. Grasp the Bungee Cord you will be sliding into the Pull Tab, and wrap two or three fingers around to hold securely.                  2. With the other hand, grasp the Pull Tab and slide the Bungee Cord into the Clip to fasten, or pull out of the Clip to unfasten.</p>	
	<p>Ensure the Bungee Cord is fully seated in the Pull Tabs.</p>	

## Genuine Accessories

Visual Check

Item to be Checked	Result
 Verify the position of the Cargo Net opening and Pull Tabs.	The Cargo Net opening is at top. Pull Tabs are facing the rear of the vehicle.
 Ensure Mushroom Anchors are secure.	Mushroom Anchors are secure.
 Ensure upper bungee loops are secure to Mushroom Anchors.	Bungee loops are secure to Mushroom Anchors.
 Ensure lower Clip Hooks are secure to D-Rings.	Lower Clip Hooks are secure to D-Rings.
 Confirm any customer belongings removed from the trunk are returned.	Customer belongings returned to the trunk.
 Installation Instructions placed inside the vehicle glove box.	Installation Instructions placed inside the vehicle glove box.