## **Genuine Accessories**

1		ehicle Model:	Multiple	Accessory	Roadside As	sistance Kit
		Model Year	Multiple	Difficulty	: (A)	
		Part No.	J0F72 AU000			
		Language	Language English		<ul> <li>Difficulty stated above reflects the minimum level of expertise required to install the accessory:</li> <li>(A) Customer</li> </ul>	
		4/2/2020	_			
				_	(B) Dealer Techni	ician
					(C) Master Techn	nician or Specialist
	Denotes warnings that may lead to serious physical injury or vehicle damage		Denotes quality processes to be checke prior to moving to the next step		may be required for a	ctive equipment (PPEs) that step. Examples of safety ons noted below:
4	Denotes cautions to be taken to avoid physical injury or electronic component damage		• Denotes specific tools that are necessar to complete a step		Glasses	Gloves
	Denotes cautions to be taken to avoid vehicle and component damage	N O T E	Denotes important information to be reviewed during the step	(	Mask	Hearing Protection

**Basic Required Tools** 



Part Weight (Gross)				
4.90	lbs			
2.22	kg			


# FMVSS 110 Compliance Information

All dealers must determine if the Net weight they have added in the form of all options or accessories, when added to the weight of all Port/Dealer Installed options or accessories, exceeds the lesser of 1.5% of GVWR or 100 lbs. If the additional weight does exceed the lesser of the indicated thresholds, a "Load Carrying Capacity Reduced" label must be installed. A black, fine-point, indelible marker must be used to write by hand onto the label, the reduced carrying capacity in kilograms or pounds, which is the total weight of all added options and accessories. Load Label Part Number: NP070 - 09003


### Notes to the installer:

- 1) Read the entire Installation Instructions prior to beginning the installation of the part.
- 2) If applicable, scan the barcode label located on the accessory part or packaging prior to installing, to register the part. If this accessory is installed as a replacement, register the removal of the old part before registering the new part. Old and new parts will have different barcode data, and the old registration cannot be reused.
- 3) Make sure the vehicle is completely clean and dry in the area(s) the part is to be installed.
- 4) Ensure the vehicle is properly protected in the area(s) that the accessory is to be installed.
- 5) NEVER place tools on painted surfaces, seating surfaces, dash pad, console or floor carpet/mats.
- 6) Always wear appropriate personal protective equipment, including gloves, safety glasses, etc., when required.

#### Kit Overview

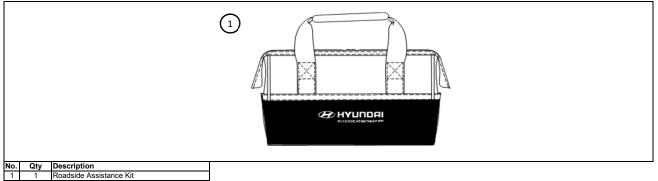

## **Genuine Accessories**

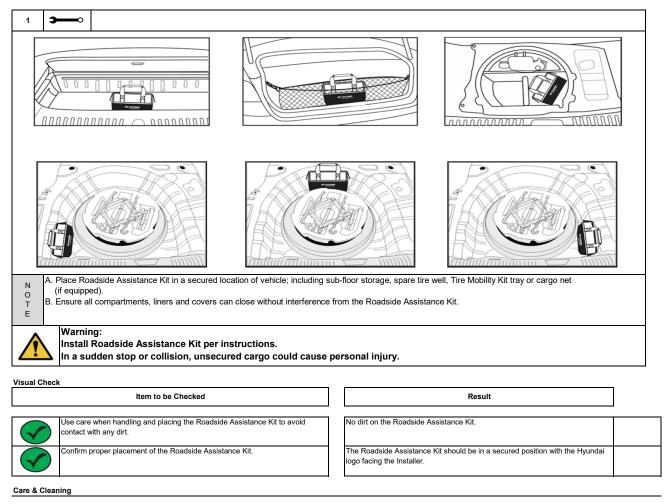

Cleaning Instructions for:

MULTIPLE

**Roadside Assistance Kit** 

Spot clean with a damp cloth as needed (do not use chemical based cleaners).