

Genuine Accessories



Vehicle Model: **Veloster**

Model Year 2019-
 Part No. J3F40 AK900
 Language English
 Rev. Date 5/23/2018

Accessory: **Spare Tire Kit**

Difficulty: (B)

Note: Difficulty stated above reflects the minimum level of expertise required to install the accessory:
 (A) Customer
 (B) Dealer Technician
 (C) Master Technician or Specialist

Application Notes

This Spare Tire Kit Only Applies to Base Models.

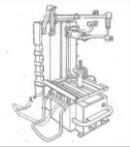
Instructional Symbols / Definitions

 Denotes warnings that may lead to serious physical injury or vehicle damage  Denotes cautions to be taken to avoid physical injury or electronic component damage  Denotes cautions to be taken to avoid vehicle and component damage	 Denotes quality processes to be checked prior to moving to the next step  Denotes specific tools that are necessary to complete a step <div style="border: 1px solid black; padding: 2px; text-align: center; width: 20px; margin: 0 auto;">N O T E</div> Denotes important information to be reviewed during the step	Denotes personal protective equipment (PPEs) that may be required for a step. Examples of safety equipment icons noted below: <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;">  Glasses </div> <div style="text-align: center;">  Gloves </div> </div> <div style="display: flex; justify-content: space-around; margin-top: 10px;"> <div style="text-align: center;">  Mask </div> <div style="text-align: center;">  Hearing Protection </div> </div>
---	---	---

Basic Required Tools

	
Clean Cloth	50/50 Isopropyl Alcohol (70%) & Water

Specialty Required Tools

	
Tire Mounting Machine	Valve Stem Tool

Part Weight (Gross)

23.22	lbs
10.53	kg

FMVSS 110 Compliance Information

All dealers must determine if the weight they have added in the form of all options or accessories, when added to the weight of all Port/Dealer Installed options or accessories, exceeds the lesser of 1.5% of GVWR or 100 lbs. If the additional weight does exceed the lesser of the indicated thresholds, a "Load Carrying Capacity Reduced" label must be installed. A black, fine-point, indelible marker must be used to write by hand onto the label, the reduced carrying capacity in kilograms or pounds, which is the total weight of all added options and accessories.
Load Label Part Number: NP070 - 09003

Record Tire Weight

	lbs/kg
--	--------

Add for Total Spare Tire Kit Weight

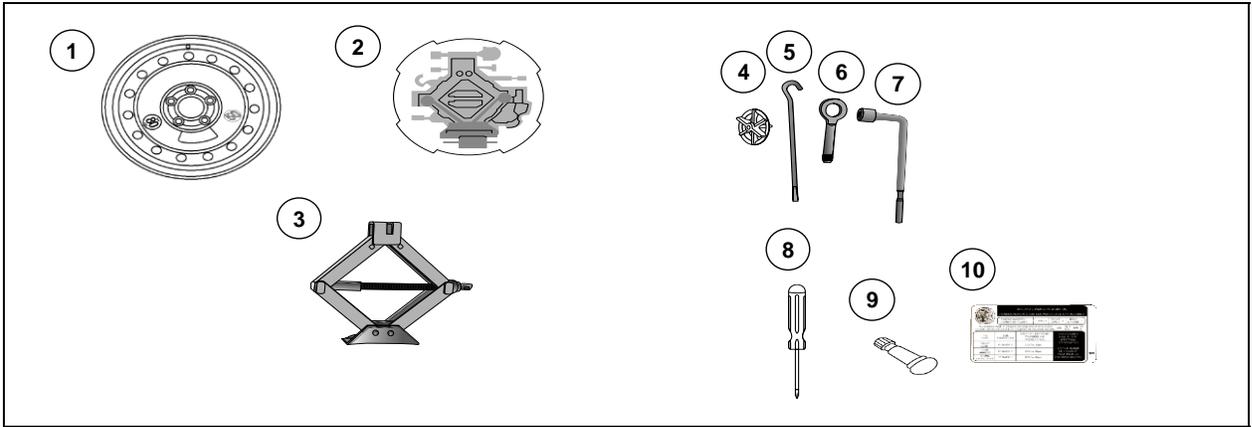
	lbs/kg
--	--------

Notes to the installer:

- 1) Read the entire installation instructions prior to beginning the installation of this accessory.
- 2) Make sure the vehicle is completely clean before the accessory is installed.
- 3) Ensure the vehicle is properly protected in the area(s) that the accessory is to be installed.
- 4) To prevent vehicle damage, never place tools on top of painted surfaces, seats, dash pad, console or floor carpet/mats.
- 5) Always wear appropriate safety gear to include gloves and safety glasses when required.
- 6) Install a T125/80D16 Temporary Spare Tire sourced through the Hyundai Authorized Tire Center Program with Dealer Tire.
- 7) Inflate Spare Tire to 60 PSI.

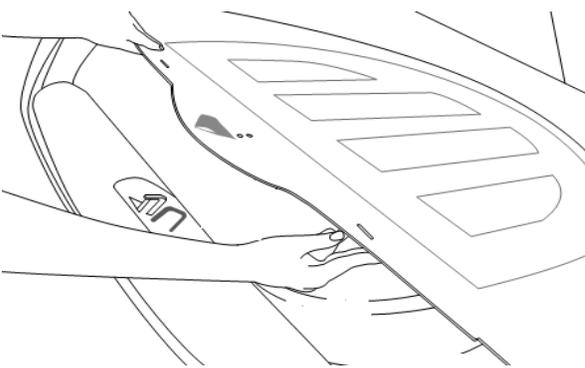
Genuine Accessories

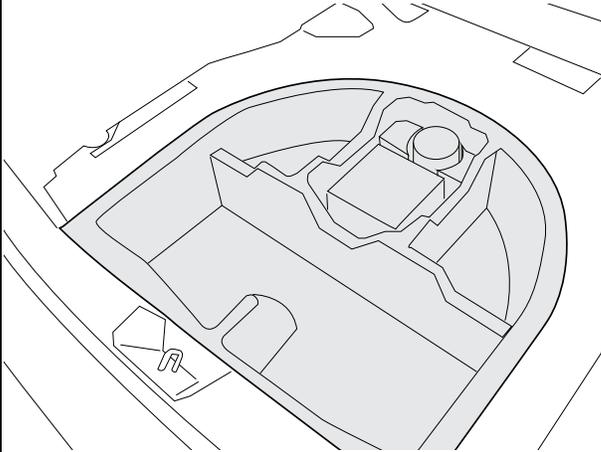
Kit Overview

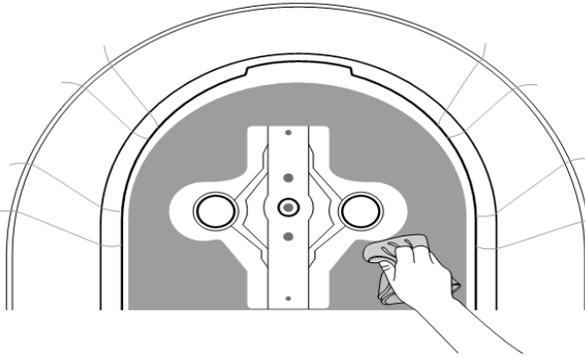


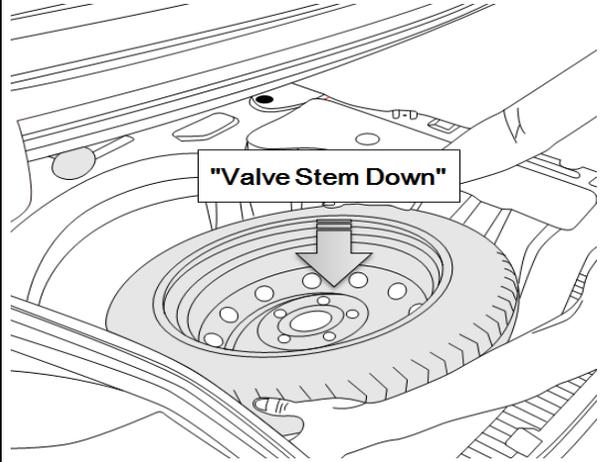
No.	Qty	Description	No.	Qty	Description
1	1	Steel Wheel	6	1	Tow Hook
2	1	Tool Case	7	1	Lug Nut Wrench
3	1	Jack	8	1	Screwdriver
4	1	Hold-Down Clamp	9	1	Valve-Tire
5	1	Bar	10	3	Tire Pressure Label

Genuine Accessories

1		Tire Mounting Machine and Valve Stem Tool
		
N O T E	<p>A. Open the Spare Tire Kit and install the Valve Stem onto the Steel Wheel.</p> <p>B. Install a T125/80D16 Temporary Spare Tire sourced through the Hyundai Authorized Tire Program onto the Steel Wheel. Inflate the Temporary Spare Tire to 60 PSI.</p> <p>C. Access the Trunk and remove the Trunk Floor Cover.</p>	
	<p>Ensure the Temporary Spare Tire is inflated to 60 PSI.</p>	

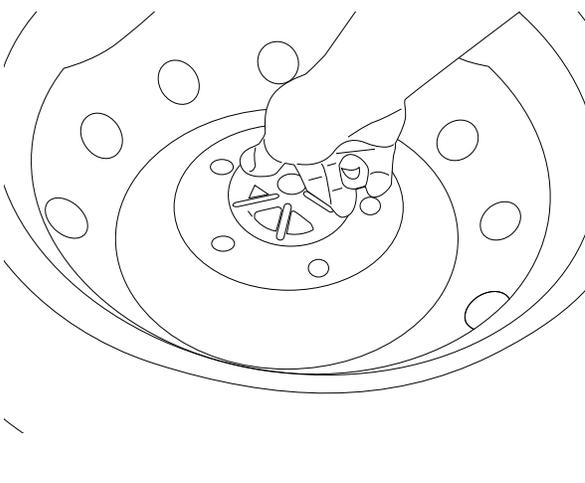
2		
		
N O T E	<p>A. Remove the factory equipped Tire Mobility Kit and Foam Organizer from the Spare Tire Well.</p>	
	<p>Dealer must directly hand the vehicle's Tire Mobility Kit and Foam Organizer to the vehicle owner. Do not leave the Tire Mobility Kit and Foam Organizer inside the trunk.</p>	

3		Clean Cloth
		
N O T E	<p>A. Remove any dirt or debris from the Spare Tire Well area.</p>	

4		
		
N O T E	<p>A. Insert the Temporary Spare Tire / Wheel into the Spare Tire Well.</p> <p>- Make sure the Valve Stem is facing down.</p>	

Genuine Accessories

5

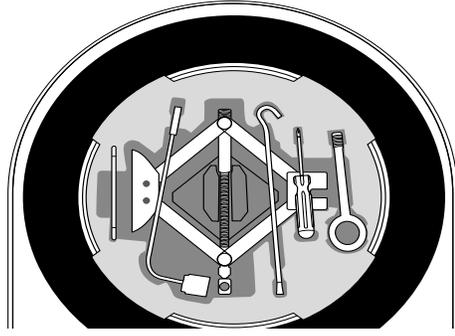


N O T E

A. Secure the Temporary Spare Tire / Wheel assembly to the vehicle using the provided Hold-Down Clamp. Turn the Clamp clockwise until tightened.

Hand tighten the Hold-Down Clamp until the Temporary Spare Tire / Wheel is secure.

6

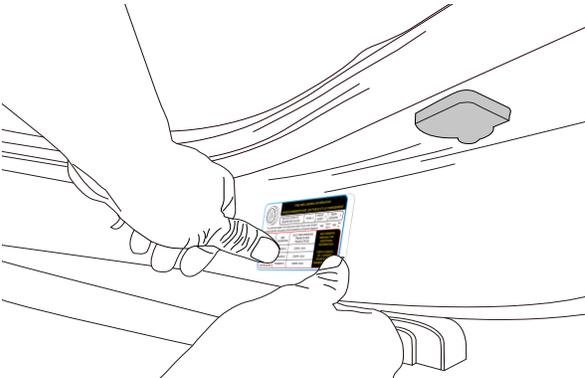


N O T E

A. Place the provided Tool Case on top of the Temporary Spare Tire / Wheel assembly.
 B. Install the provided Jack, Bar, Lug Nut Wrench, Screwdriver and Tow Hook into the Tool Case.

Make sure all tools are firmly in place to prevent any rattles.

7
Clean Cloth and 50/50 Isopropyl Alcohol (70%) & Water



Wheel size	Color	Details
17	BLUE	General tire
18	RED	General tire
18	BLACK	For high speed driving tire

N O T E

A. Reinstall the Trunk Floor Cover.
 B. Remove the factory installed Tire Information Label located on the inside of the Driver's Door B-Pillar as shown.
 C. Remove any remaining adhesive using a Clean Cloth and 50/50 Isopropyl Alcohol (70%) & Water, then allow the surface to thoroughly dry.
 D. As shown above, install one of the new Tire Pressure Labels by comparing the tire size on the label being replaced with one of the new labels provided. The new label includes spare tire pressure information.
 E. Discard the other two (2) labels.

Make sure to use the correct Tire Pressure Label for the tire size installed on vehicle. In case there is a flat tire, please follow the directions listed in the vehicle owner's manual for your safety.

Genuine Accessories

Visual Check

Item to be Checked		Result
	Dealer must directly hand the vehicle's Tire Mobility Kit and Foam Organizer to the vehicle owner. Do not leave the Tire Mobility Kit and Foam Organizer in the trunk.	Vehicle owner received Tire Mobility Kit and Foam Organizer.
	Hand tighten the Hold-Down Clamp until the Temporary Spare Tire / Wheel is firm and secure.	Hold-Down Clamp is tight.
	Make sure all provided Tools are firmly in place to prevent any rattles.	Tools are not loose.
	Make sure to use the correct tire pressure label to match the factory tire size on the vehicle.	Correct tire pressure label installed, matching the factory tire size on the vehicle.