



Vehicle Model: Kona


Model Year 2018-
 Part No. J9F28 AU100 (DIO)
 J9F28 AU700 (PIO)
 Language English
 Rev. Date 11/6/2018

Accessory: Applique, Rear Bumper

Difficulty: (B)

Note: Difficulty stated above reflects the minimum level of expertise required to install the accessory:
 (A) Customer
 (B) Dealer Technician
 (C) Master Technician or Specialist

Electronic Installation Instructions










 If this is a printed copy of the installation instructions, ensure you have the latest revision by scanning the QR code or by entering the website address listed below before beginning installation. Use the latest revision date as noted by "Rev. Date" above.

www.hyundaiaccessories.com/admin_media_uploads/installationSheets/j9f28_au100.pdf




Application Notes

Applies to Kona and Kona EV Models

Instructional Symbols / Definitions

 Denotes warnings that may lead to serious physical injury or vehicle damage	 Denotes quality processes to be checked prior to moving to the next step	Denotes personal protective equipment (PPEs) that may be required for a step. Examples of safety equipment icons noted below:
 Denotes cautions to be taken to avoid physical injury or electronic component damage	 Denotes specific tools that are necessary to complete a step	 Glasses
 Denotes cautions to be taken to avoid vehicle and component damage	N O T E Denotes important information to be reviewed during the step	 Gloves
		 Mask
		 Hearing Protection

Basic Required Tools

		
50/50 Isopropyl Alcohol (70%) & Water	Alcohol, Soap & Water (SLIP Mixture)	Microfiber Cloth

Part Weight (Gross)

0.79	oz
22.40	g

FMVSS 110 Compliance Information

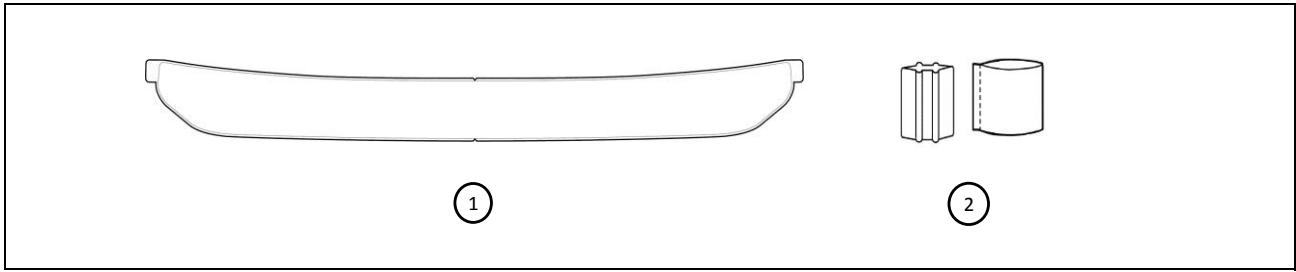
All dealers must determine if the Net weight they have added in the form of all options or accessories, when added to the weight of all Port/Dealer Installed options or accessories, exceeds the lesser of 1.5% of GVWR or 100 lbs. If the additional weight does exceed the lesser of the indicated thresholds, a "Load Carrying Capacity Reduced" label must be installed. A black, fine-point, indelible marker must be used to write by hand onto the label, the reduced carrying capacity in kilograms or pounds, which is the total weight of all added options and accessories.
Load Label Part Number: NP070 - 09003

Notes to the installer:


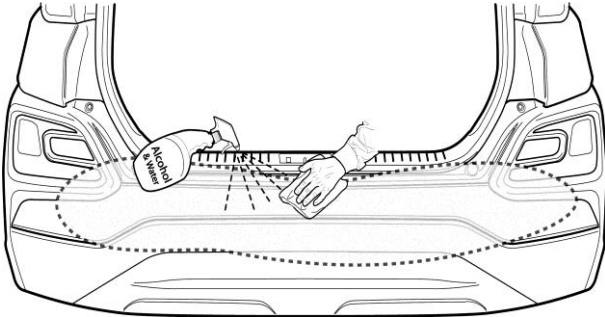

- 1) Read the entire installation instructions prior to beginning the installation of this accessory.
- 2) Make sure the vehicle is completely clean before the accessory is installed.
- 3) Ensure the vehicle is properly protected in the area(s) that the accessory is to be installed.
- 4) To prevent vehicle damage, never place tools on top of painted surfaces, seats, dash pad, console or floor carpet/mats.
- 5) Always wear appropriate safety gear to include gloves and safety glasses when required.
- 6) Alcohol, Soap & Water Mixture: Mix 8 oz. of water, 8 oz. alcohol (70% isopropyl) & 1 ml of baby shampoo in a trigger type spray bottle marked "SLIP". Note: The above listed solution has been formulated for use where ambient & vehicle surface temperatures are within a range of 65°F to 90°F. If temperatures exceed this range, add additional shampoo in increments of 1 ml to aid in alignment.
- 7) Install this product while observing all warnings and precautions stated in these installation instructions.
- 8) VERY IMPORTANT: Thoroughly clean rear bumper area with soap and water. If contaminants are found, refer to Hyundai Technical Service Bulletin 99-99-001 to determine the correct repair procedure.
- 9) VERY IMPORTANT: Ambient temperature of the rear bumper area and vehicle must be 65°F to 90°F at the time of installation and for two hours after.
- 10) Parts storage should be at room temperature and in a clean dry place. Care should be taken to avoid a dusty environment.
- 11) Place a large towel or pad on the ground to catch wetting mixture and avoid slippery floor.


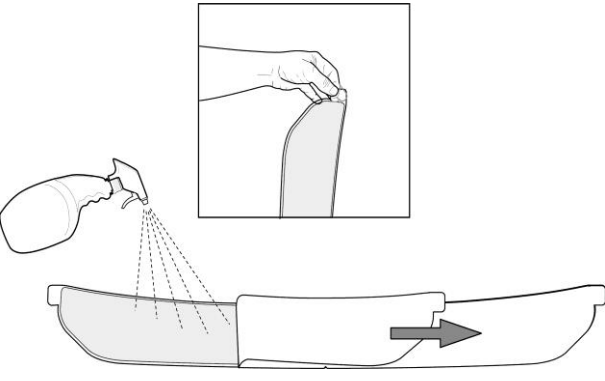
Genuine Accessories


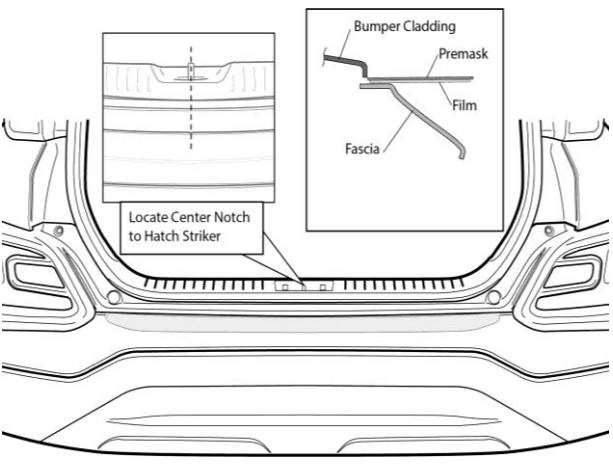

Kit Overview


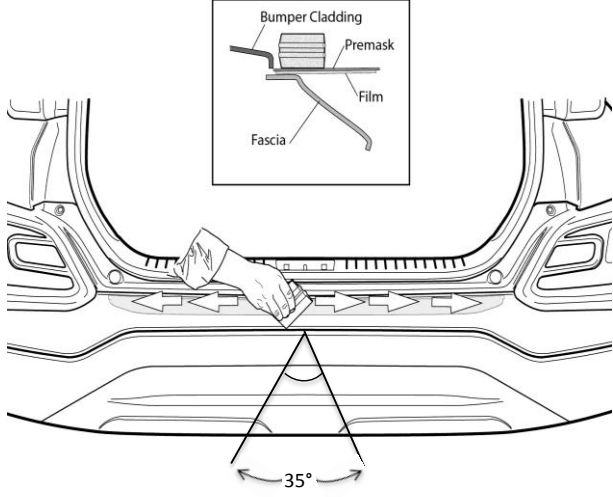




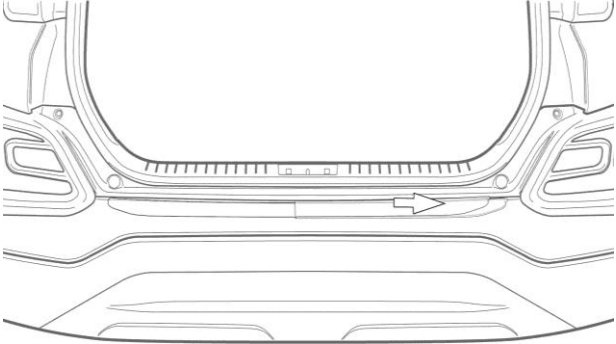

No.	Qty	Description
1	1	Rear Bumper Applique
2	1	Squeegee with Sleeve


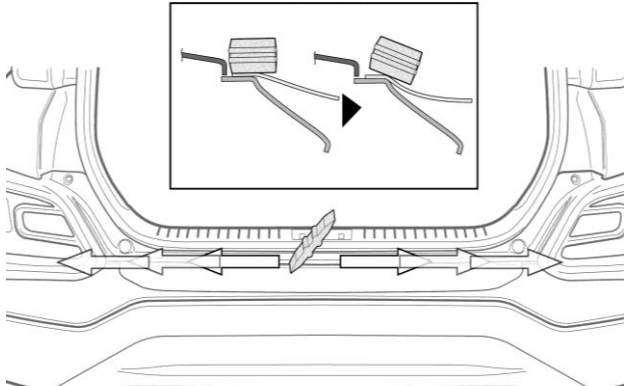

1		50/50 Isopropyl Alcohol (70%) & Water and a Microfiber Cloth
		
NOTE	<p>A. Thoroughly clean the bumper area using the 50/50 Isopropyl Alcohol (70%) & Water and Microfiber Cloth.</p> <p>B. Inspect the paint for any paint conditions that would be visible through the Rear Bumper Applique (when viewed at arm's length). Repair if necessary before proceeding.</p>	
	Make sure the bumper area is completely clean and dried.	


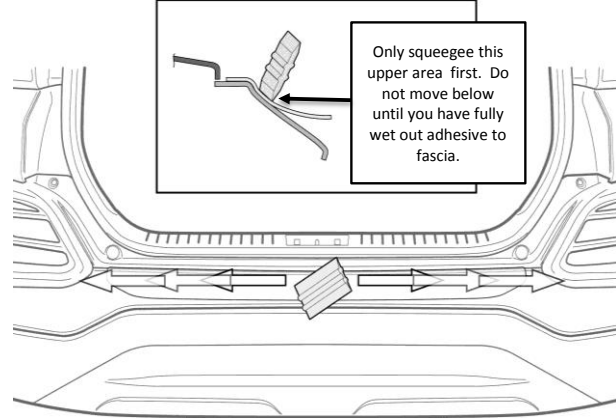

2		Alcohol, Soap & Water (SLIP Mixture)
		
NOTE	<p>A. Remove the liner from the Rear Bumper Applique, then spray the Rear Bumper Applique with SLIP mixture.</p>	


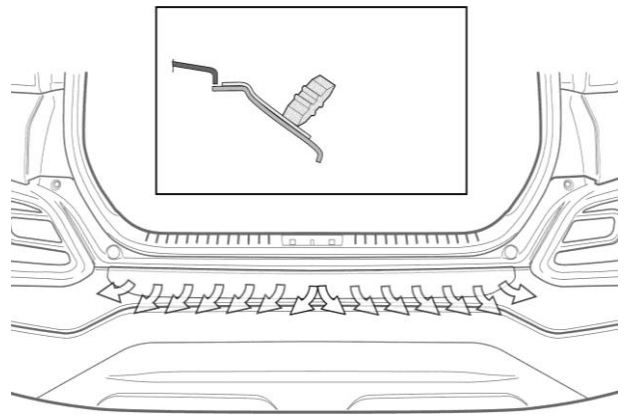

3		Alcohol, Soap & Water (SLIP Mixture)
		
NOTE	<p>A. Wet the vehicle with the SLIP mixture, position the Rear Bumper Applique onto the bumper by visually aligning the center notch in premask to the hatch striker, as shown.</p> <p>B. Do not let the premask slide under the Bumper Cladding as shown above.</p> <p>C. If necessary, spray additional SLIP mixture to aid in installation.</p>	
	Bumper must be wet to aid in installation.	



4		Alcohol, Soap & Water (SLIP Mixture) and Squeegee with Sleeve
		
NOTE	<p>A. Starting in the center, squeegee the Rear Bumper Applique firmly onto the top, horizontal surface of the bumper using overlapping strokes in a side to side motion.</p> <p>B. Do not roll the applied part over the edge at this point. The flat surface must be adhered as much as possible before proceeding to the next step.</p>	
	<p>Make sure Sleeve is installed on Squeegee.</p> <p>Bumper must be wet to aid in installation.</p>	

5		
		
N O T E	<p>A. Remove pre-mask by pulling back at 180° against itself.</p>	
	<p>Do not pull straight up on pre-mask during removal. Peel pre-mask at a constant 180° to ensure the placement of the Rear Bumper Applique does not move. Inspect for bubbles and correct following the procedure on page 4.</p>	







6		Alcohol, Soap & Water (SLIP Mixture) and Squeegee with Sleeve
		
N O T E	<p>A. Re-wet the Bumper Applique with the SLIP mixture and re-squeegee the top edge of the bumper fascia as shown above. B. Next, squeegee along the outer edge above the lower concave surface as shown. NOTE: The outer edge must be fully squeegeed. There cannot be any trapped water or air bubbles on this edge prior to moving onto the upper portion of the concave surface in Step 7.</p>	
	<p>Make sure Sleeve is installed on Squeegee. Bumper must be wet to aid in installation.</p>	

7		
 <div style="border: 1px solid black; padding: 5px; width: fit-content; margin: 10px auto;"> <p>Only squeegee this upper area first. Do not move below until you have fully wet out adhesive to fascia.</p> </div>		
N O T E	<p>A. Starting in the center, proceed to squeegee the upper area of the concave surface using firm, overlapping horizontal strokes as shown above.</p>	
	<p>Caution: Do not move below the upper area of the concave surface until you have a fully adhered upper portion first. This is critical to avoid trapping water or air bubbles in this step.</p>	

8		
		
N O T E	<p>A. Finish squeegeeing the Bumper Applique by using overlapping strokes that curve downward and outward to remove all water or trapped air. B. Dry installation area.</p>	
	<p>Inspect for bubbles and correct following the procedure on page 4.</p>	

A		Alcohol, Soap & Water (SLIP Mixture)
<h1 style="margin: 0;">Inspection Procedure</h1>		
N O T E	<p>Inspect for proper fit, bubbles and debris trapped underneath the Rear Bumper Applique from more than an arm's length. NOTE: Experienced installers may attempt to locally lift up the Rear Bumper Applique and reinstall.</p> <p>* Appropriate tools used for Applique removals are available to customers from specialty retailers.</p>	
	<p>Hands or any tools used to lift the Rear Bumper Applique, must be saturated with SLIP mixture. Dry hands or tools may mar the applique.</p>	

Visual Check

Item to be Checked	Result
	No dirt or fingerprints on Rear Bumper Applique.
	Rear Bumper Applique is not lifting and is fully adhered. Take special care to make sure all edges are fully adhered.
	Rear Bumper Applique is installed correctly.
	No bubbles present.
	No adhesive remaining on Rear Bumper Applique.
	Rear Bumper Applique is installed correctly.