

Genuine Accessories



Vehicle Model **Kona**

Model Year 2018-
 Part No. J9F46 AK000
 Language English
 Rev. Date 10/24/2017

Accessory: **Mudguards, Front**

Difficulty: B

Note: Difficulty stated above reflects the minimum level of expertise required to install the accessory:
 (A) Customer
 (B) Dealer Technician
 (C) Master Technician or Specialist

Instructional Symbols / Definitions

| | | | | | |
|--|--|----------------------------|--|---|--|
| | Denotes warnings that may lead to serious physical injury or vehicle damage | | Denotes quality processes to be checked prior to moving to the next step | Denotes personal protective equipment (PPEs) that may be required for a step. Examples of safety equipment icons noted below: | |
| | Denotes cautions to be taken to avoid physical injury or electronic component damage | | Denotes specific tools that are necessary to complete a step | | |
| | Denotes cautions to be taken to avoid vehicle and component damage | N O T E | Denotes important information to be reviewed during the step | | |

Basic Required Tools

| | |
|-------------------------|-------------------|
| | |
| #2 Phillips Screwdriver | Clip Removal Tool |

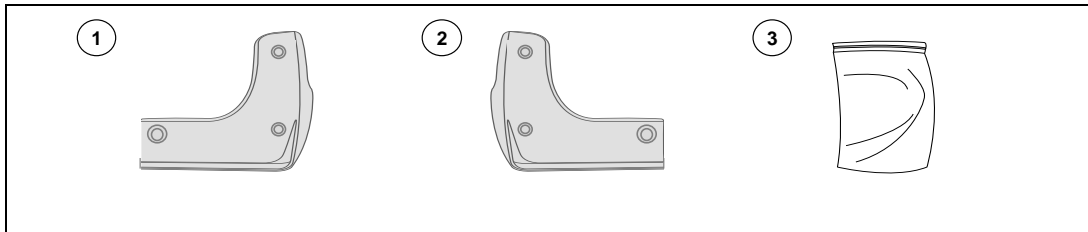
| | |
|----------------------------|-----|
| Part Weight (Gross) | |
| 0.53 | lbs |
| 0.24 | kg |

All dealers must determine if the weight they have added in the form of all options or accessories, when added to the weight of all Port/Dealer Installed options or accessories, exceeds the lesser of 1.5% of GVWR or 100 lbs. If the additional weight does exceed the lesser of the indicated thresholds, a "Load Carrying Capacity Reduced" label must be installed. A black, fine-point, indelible marker must be used to write by hand onto the label, the reduced carrying capacity in kilograms or pounds, which is the total weight of all added options and accessories. Load Label Part Number: NP070 - 09003

Notes to the installer:

- 1 Read the entire Installation Instructions prior to beginning the installation of the part.
- 2 Make sure the vehicle is completely clean and dry in the area(s) the part is to be installed.
- 3 Ensure the vehicle is properly protected in the area(s) that the accessory is to be installed.
- 4 NEVER place tools on painted surfaces, seating surfaces, dash pad, console or floor carpet/mats.
- 5 Always wear appropriate personal protective equipment, including gloves, safety glasses, etc., when required.

Kit Overview





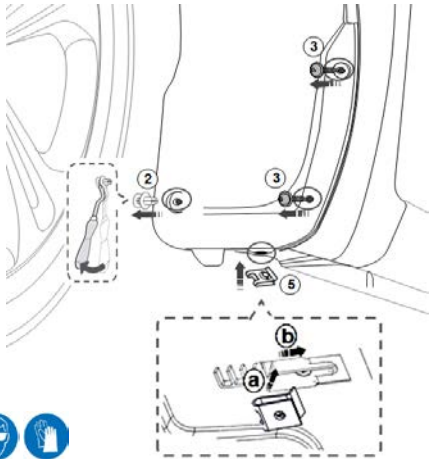
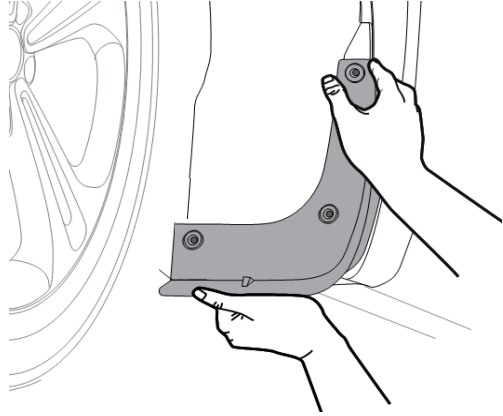

| No. | Qty | Description |
|-----|-----|---------------------|
| 1 | 1 | Front Mudguard (LH) |
| 2 | 1 | Front Mudguard (RH) |
| 3 | 1 | Hardware Bag |


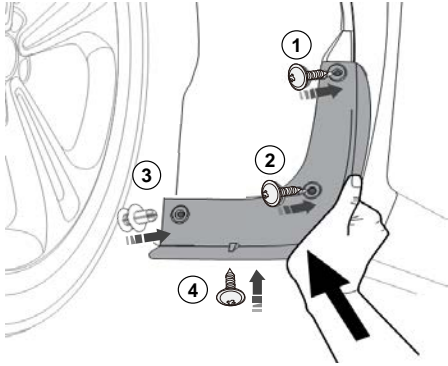

Hardware Kit Contents

| | | | | | | | |
|----------|-------------------------|----------|-------------------------|----------|------------|----------|------------------|
| A | | B | | C | | D | |
| 2 | Self-Tapping Screw (M4) | 4 | Self-Tapping Screw (M6) | 2 | Nut-Spring | 2 | Plastic Retainer |



| |
|-----------------------|
| Hardware Total |
| 10 |

Genuine Accessories

| | | | | | |
|---|--|---|--|---|--|
| 1 |  | #2 Phillips Screwdriver and Clip Removal Tool | 2 |  | |
|  | | |  | | |
| N O T E | <p>A. Turn the front wheels to make more room while removing and installing the screws/retainer.</p> <p>B. If applicable, unscrew the center screw of the plastic retainer and then remove the plastic retainer from the inboard side of the vehicle using a clip removal tool.</p> <p>C. Remove the two (2) screws from the highlighted area as shown.</p> <p>D. Discard the hardware.</p> <p>E. Insert the one (1) provided nut-spring to the highlighted area as shown.</p> | | N O T E | <p>A. Align the Front Mudguard as shown ensuring a proper fit.</p> | |
| | | |  | <p>Make sure to push the mudguard upward and in during the installation to eliminate any possible gaps.</p> | |

| | | |
|---|---|-------------------------|
| 3 |  | #2 Phillips Screwdriver |
|  | | |
| N O T E | <p>A. While pushing the Front Mudguard toward the center of the vehicle as shown, insert and fasten one (1) provided M6 screw into the upper hole.</p> <p>B. Insert and fasten one (1) provided M6 screw into the lower hole.</p> <p>C. Insert one (1) plastic retainer into the inboard hole as shown. Make sure to push in the center portion of the plastic retainer to lock the retainer in place.</p> <p>D. Insert and fasten one (1) provided M4 screw into the underside hole.</p> <p>E. Repeat above steps for the opposite side.</p> <p>F. Installation is complete.</p> | |
|  | <p>After the installation, check for any visible gaps. If any gap exceeds 0.5mm, loosen the mounting screws and refit the Front Mudguard to the body to achieve the correct specification. Be careful not to over-tighten or strip the screw head.</p> | |

Visual Check

| | Item to be Checked | Result |
|---|---|---|
|  | Make sure to push the Front Mudguards upward and in during the installation to eliminate any possible gaps. | Front Mudguards are properly aligned. |
|  | After the installation, check for any visible gaps. If any gap exceeds 0.5mm, loosen the mounting screws and refit the Front Mudguards to the body to achieve the correct specification. Be careful not to over-tighten or strip the head of the screw. | Any visible gaps should not exceed 0.5mm. |