

Genuine Accessories



Vehicle Model: Kona EV

Model Year 2019~

Part No. K4F46 AK000

Language English

Rev. Date 7/18/2018

Accessory: Mudguards, Front

Difficulty: (B)

Note: Difficulty stated above reflects the minimum level of expertise required to install the accessory:

- (A) Customer
- (B) Dealer Technician
- (C) Master Technician or Specialist

Instructional Symbols / Definitions

	Denotes warnings that may lead to serious physical injury or vehicle damage		Denotes quality processes to be checked prior to moving to the next step	Denotes personal protective equipment (PPEs) that may be required for a step. Examples of safety equipment icons noted below:	
	Denotes cautions to be taken to avoid physical injury or electronic component damage		Denotes specific tools that are necessary to complete a step		
	Denotes cautions to be taken to avoid vehicle and component damage	N O T E	Denotes important information to be reviewed during the step		
				Glasses	Gloves
				Mask	Hearing Protection

Basic Required Tools

#2 Phillips Screwdriver	Clip Removal Tool

Part Weight (Gross)

0.53	lbs
0.24	kg

FMVSS 110 Compliance Information

All dealers must determine if the Net weight they have added in the form of all options or accessories, when added to the weight of all Port/Dealer Installed options or accessories, exceeds the lesser of 1.5% of GVWR or 100 lbs. If the additional weight does exceed the lesser of the indicated thresholds, a "Load Carrying Capacity Reduced" label must be installed. A black, fine-point, indelible marker must be used to write by hand onto the label, the reduced carrying capacity in kilograms or pounds, which is the total weight of all added options and accessories.


Load Label Part Number: NP070 - 09003

Notes to the installer:

- 1) Read the entire Installation Instructions prior to beginning the installation of the part.
- 2) Make sure the vehicle is completely clean and dry in the area(s) the part is to be installed.
- 3) Ensure the vehicle is properly protected in the area(s) that the accessory is to be installed.
- 4) NEVER place tools on painted surfaces, seating surfaces, dash pad, console or floor carpet/mats.
- 5) Always wear appropriate personal protective equipment, including gloves, safety glasses, etc., when required.


Genuine Accessories


Kit Overview

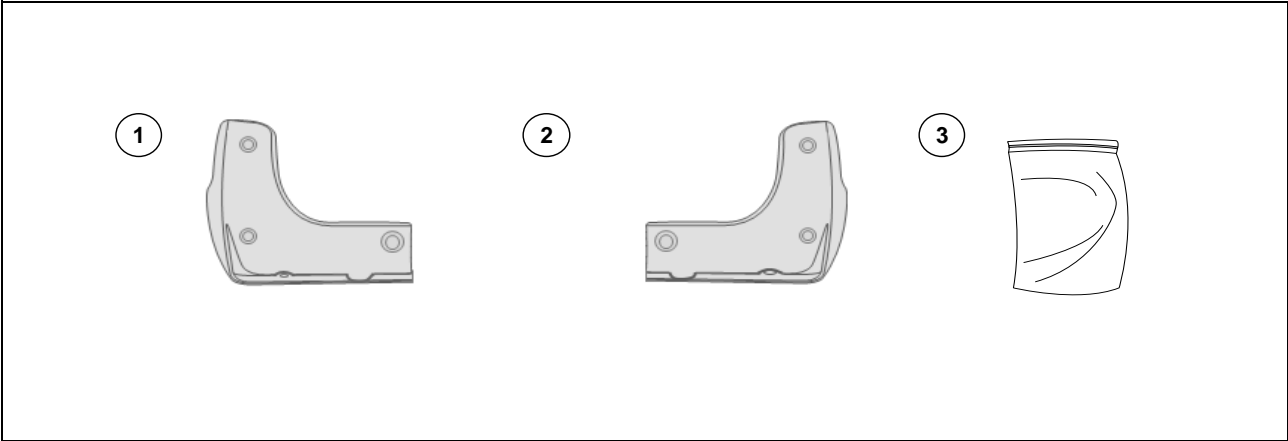



No.	Qty	Description
1	1	Front Mudguard (LH)
2	1	Front Mudguard (RH)
3	1	Hardware Bag

Hardware Kit Contents

A	
2	Self-Tapping Screw (M4)

B	
2	Nut-Spring

C	
4	Self-Tapping Screw (M6)

D	
2	Plastic Retainer

Hardware Total
10

Genuine Accessories



1		#2 Phillips Screwdriver and Clip Removal Tool
N O T E	<p>A. Turn the front wheels to make more room while removing and installing the screws/retainer.</p> <p>B. If applicable, unscrew the center screw of the plastic retainer and then remove the plastic retainer using a clip removal tool.</p> <p>C. Remove the two (2) screws as shown.</p> <p>D. Discard the hardware.</p> <p>E. Insert the one (1) provided nut-spring to the highlighted area as shown.</p>	

2		
N O T E	<p>A. Align the Front Mudguard as shown ensuring a proper fit.</p>	
<p>Make sure to push the mudguard upward and inward during the installation to eliminate any possible gaps.</p>		

3		#2 Phillips Screwdriver
N O T E	<p>A. While pushing the Front Mudguard toward the center of the vehicle as shown, insert and fasten one (1) provided M6 screw into the upper hole.</p> <p>B. Insert and fasten one (1) provided M6 screw into the lower hole.</p> <p>C. Insert one (1) plastic retainer into the inboard hole as shown. Make sure to push in the center portion of the plastic retainer to lock the retainer in place.</p> <p>D. Insert and fasten one (1) provided M4 screw into the underside hole.</p> <p>E. Repeat steps 1-3 for the opposite side Front Mudguard.</p>	
<p>Check for any visible gaps. If any gap exceeds 0.5mm, loosen the mounting screws and refit the Front Mudguard to the body to decrease or eliminate the gaps. Be careful not to over-tighten or strip the screw head.</p>		

Genuine Accessories

Visual Check

Item to be Checked		Result	
	Make sure to push the Front Mudguards upward and inward during the installation to eliminate any possible gaps.	Front Mudguards are properly aligned.	
	After the installation, check for any visible gaps. If any gap exceeds 0.5mm, loosen the mounting screws and refit the mudguard(s) to the body to decrease or eliminate the gaps.	Any visible gaps do not exceed 0.5mm.	