

Genuine Accessories



Vehicle Model: Palisade

Model Year 2020~
 Part No. S8F12 AU100
 Language English
 Rev. Date 4/1/2019

Accessory: Cargo Mat, Up Seatback

Difficulty: (A)

Note: Difficulty stated above reflects the minimum level of expertise required to install the accessory:
 (A) Customer
 (B) Dealer Technician
 (C) Master Technician or Specialist

Electronic Installation Instructions



If this is a printed copy of the installation instructions, ensure you have the latest revision by scanning the QR code or by entering the website address listed below before beginning installation. Use the latest revision date as noted by "Rev. Date" above.

www.hyundaiaccessories.com/admin_media_uploads/installationSheets/s8f12_au100.pdf

Instructional Symbols / Definitions

| | | | | | |
|--|--|----------------------------|--|---|--------------------|
| | Denotes warnings that may lead to serious physical injury or vehicle damage | | Denotes quality processes to be checked prior to moving to the next step | Denotes personal protective equipment (PPEs) that may be required for a step. Examples of safety equipment icons noted below: | |
| | Denotes cautions to be taken to avoid physical injury or electronic component damage | | Denotes specific tools that are necessary to complete a step | | |
| | Denotes cautions to be taken to avoid vehicle and component damage | N O T E | Denotes important information to be reviewed during the step | | |
| | | | | Glasses | Gloves |
| | | | | Mask | Hearing Protection |

Basic Required Tools

| |
|------|
| |
| None |

Part Weight (Gross)

| | |
|-------------|-----|
| 4.60 | lbs |
| 2.09 | kg |

FMVSS 110 Compliance Information


All dealers must determine if the Net weight they have added in the form of all options or accessories, when added to the weight of all Port/Dealer Installed options or accessories, exceeds the lesser of 1.5% of GVWR or 100 lbs. If the additional weight does exceed the lesser of the indicated thresholds, a "Load Carrying Capacity Reduced" label must be installed. A black, fine-point, indelible marker must be used to write by hand onto the label, the reduced carrying capacity in kilograms or pounds, which is the total weight of all added options and accessories.

Load Label Part Number: NP070 - 09003

Notes to the installer:

- 1) Read the entire Installation Instructions prior to beginning the installation of the part.
- 2) Make sure the vehicle is completely clean and dry in the area(s) the part is to be installed.
- 3) Ensure the vehicle is properly protected in the area(s) that the accessory is to be installed.
- 4) NEVER place tools on painted surfaces, seating surfaces, dash pad, console or floor carpet/mats.
- 5) Always wear appropriate personal protective equipment, including gloves, safety glasses, etc., when required.

Kit Overview

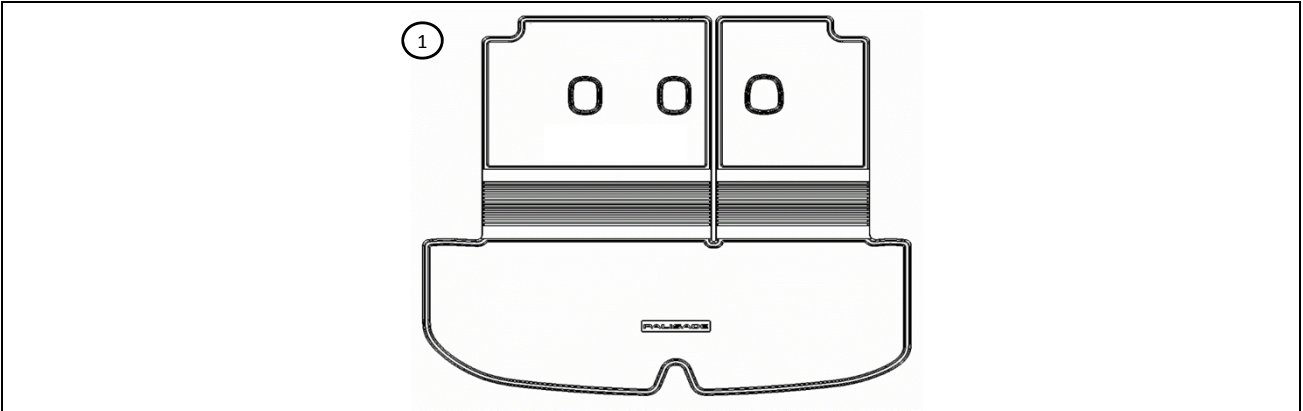

| No. | Qty | Description |
|-----|-----|------------------------|
| 1 | 1 | Cargo Mat, Up Seatback |

Genuine Accessories

| | | |
|------|---|--|
| 1 | | |
| NOTE | <p>A. Open tailgate. B. Place Cargo Mat in the folded position (Securing Pads facing upwards) into the cargo area. C. Align the bottom portion of the Cargo Mat to the contours of the cargo floor.</p> | |
| | <p>Note the location of the fourteen (14) Securing Pads on the Cargo Mat. Note the location of the child seat anchors and hook on the rear seatbacks.</p> | |




| | | |
|------|---|--|
| 2 | | |
| NOTE | <p>A. Unlatch and fold down the rear seatbacks. B. Unfold the Cargo Mat onto the rear seatbacks. C. Align the upper seatback portion of the Cargo Mat to the cutouts of the child seat anchors, hook and side latches as shown. D. Apply firm downward pressure on the securing pads to engage the Cargo Mat to the seatbacks.</p> | |
| | <p>Ensure the child seat anchors, hook and side latches line up with the appropriate cutouts on the seatback portion of the Cargo Mat.</p> | |

| | | |
|------|--|--|
| 3 | | |
| NOTE | <p>A. Return the rear seatbacks to the upright position and ensure the Cargo Mat hinge settles above the cargo floor as shown.</p> | |
| | <p>Make sure the Cargo Mat does not interfere with any vehicle components.</p> | |

| | | |
|------|---|--|
| 4 | | |
| NOTE | <p>A. For vehicles equipped with pull straps on the seatbacks, secure the two (2) pull straps to the Hook & Loop Pads on the Cargo Mat. B. Close tailgate. C. Installation is complete.</p> | |
| | <p>To ensure that the upper seatback portion of the Cargo Mat remain fully secured to the vehicle, apply firm pressure to the upper seatback portion of the Cargo Mat to engage the securing pads.</p> | |

Genuine Accessories

Visual Check

| Item to be Checked | | Result | |
|---|--|---|--|
|  | Cargo Mat is aligned with the cargo floor and rear seatback's child seat anchors, hook and side latches. | Cargo Mat is fitted properly. | |
|  | Rear seatbacks returned to the upright position. | The rear seatbacks are in the upright position. | |
|  | The Cargo Mat hinge is above the cargo floor as shown in step 3. | Cargo Mat is fitted properly. | |

Care & Cleaning

Cleaning Instructions for:

Palisade

Cargo Mat, Up Seatback

The Cargo Mat, Up Seatback, can be wiped, swept, lightly vacuumed, or cleaned with water or soap and water.

Ensure the Cargo Mat is completely dry before placing it back into the vehicle.

Do not use petroleum based solvents for cleaning the Cargo Mat, Up Seatback.