

Genuine Accessories



Vehicle Model: Palisade

Model Year 2020-
 Part No. S8F28 AU000 (DIO)
 S8F28 AU600 (PIO)
 Language English
 Rev. Date 1/18/2019

Accessory: Applique, Rear Bumper

Difficulty: (B)

Note: Difficulty stated above reflects the minimum level of expertise required to install the accessory:
 (A) Customer
 (B) Dealer Technician
 (C) Master Technician or Specialist

Electronic Installation Instructions



If this is a printed copy of the installation instructions, ensure you have the latest revision by scanning the QR code or by entering the website address listed below before beginning installation. Use the latest revision date as noted by "Rev. Date" above.

www.hyundaiaccessories.com/admin_media_uploads/installationSheets/s8f28_au000.pdf

Instructional Symbols / Definitions

	Denotes warnings that may lead to serious physical injury or vehicle damage		Denotes quality processes to be checked prior to moving to the next step	Denotes personal protective equipment (PPEs) that may be required for a step. Examples of safety equipment icons noted below:	
	Denotes cautions to be taken to avoid physical injury or electronic component damage		Denotes specific tools that are necessary to complete a step		
	Denotes cautions to be taken to avoid vehicle and component damage	N O T E	Denotes important information to be reviewed during the step		

Basic Required Tools

50/50 Isopropyl Alcohol (70%) & Water	Microfiber Cloth	Masking Tape

Part Weight (Gross)

0.04	lbs
0.02	kg

FMVSS 110 Compliance Information

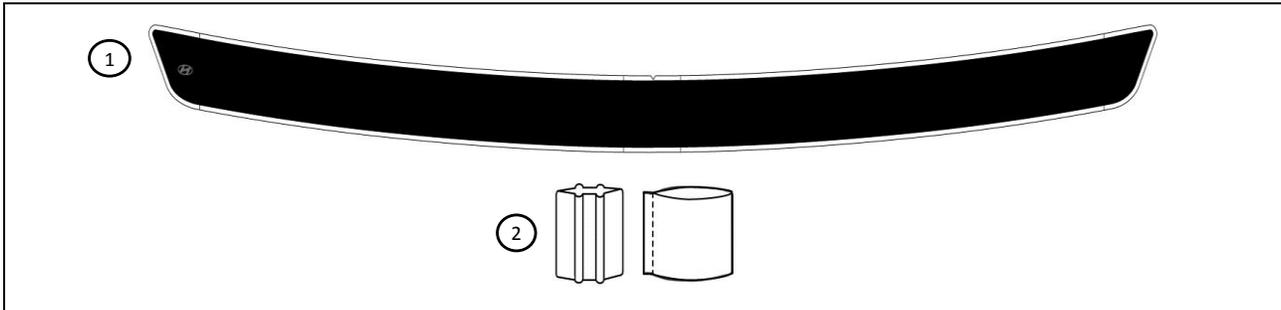
All dealers must determine if the weight they have added in the form of all options or accessories, when added to the weight of all Port/Dealer Installed options or accessories, exceeds the lesser of 1.5% of GVWR or 100 lbs. If the additional weight does exceed the lesser of the indicated thresholds, a "Load Carrying Capacity Reduced" label must be installed. A black, fine-point, indelible marker must be used to write by hand onto the label, the reduced carrying capacity in kilograms or pounds, which is the total weight of all added options and accessories.

Load Label Part Number: NP070 - 09003

Notes to the installer:

- 1) Read the entire installation instructions prior to beginning the installation of this accessory.
- 2) Make sure the vehicle is completely clean before the accessory is installed.
- 3) Ensure the vehicle is properly protected in the area(s) that the accessory is to be installed.
- 4) To prevent vehicle damage, never place tools on top of painted surfaces, seats, dash pad, console or floor carpet/mats.
- 5) Always wear appropriate safety gear to include gloves and safety glasses when required.
- 6) Install this product while observing all warnings and precautions stated in this instruction booklet.
- 7) VERY IMPORTANT: Thoroughly clean rear bumper area with soap and water. If contaminants are found, refer to Hyundai Technical Service Bulletin 99-99-001 to determine the correct repair procedure.
- 8) VERY IMPORTANT: Ambient temperature Bumper Applique and vehicle must be 65°F to 90°F at the time of installation and for two hours after.
- 9) Parts storage should be at room temperature and in a clean dry place. Care should be taken to avoid a dusty environment.

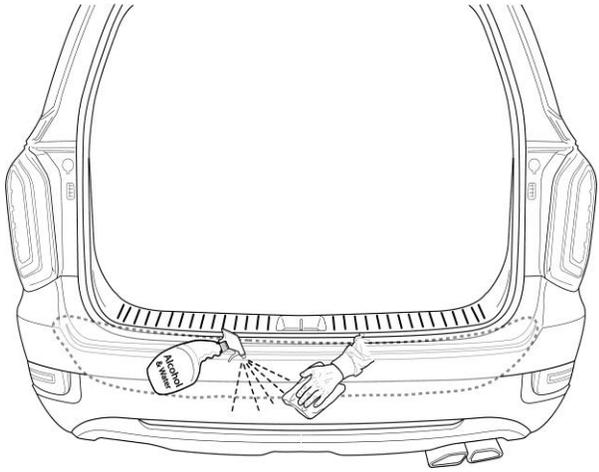
Kit Overview

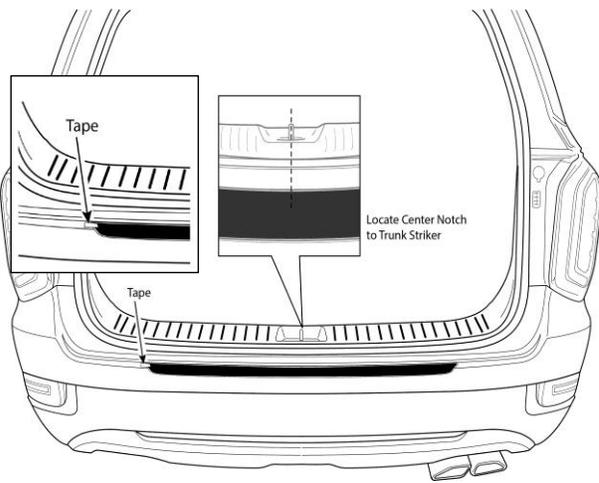


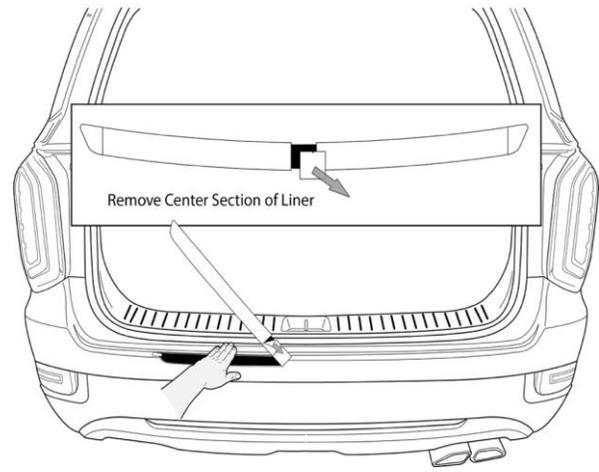
No.	Qty	Description
1	1	Rear Bumper Applique
2	1	Squeegee with Sleeve

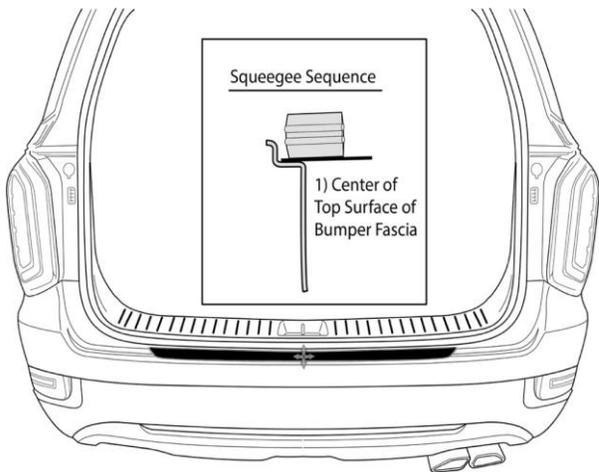
Note: Item 2 is not included in the PIO kit.

Genuine Accessories

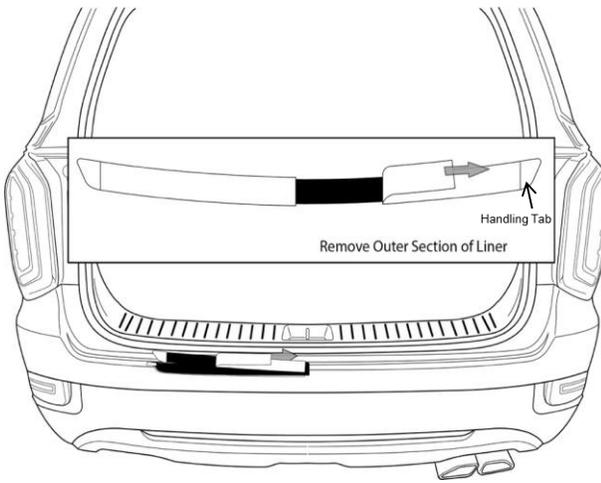
1		50/50 Isopropyl Alcohol (70%) & Water and Microfiber Cloth
		
N O T E	<p>A. Thoroughly clean the bumper area using the 50/50 Isopropyl Alcohol (70%) & Water and Microfiber Cloth.</p> <p>B. Inspect the paint for any paint conditions when viewed at arms length. Repair if necessary.</p>	
	<p>Make sure the bumper area is completely clean and dried.</p>	

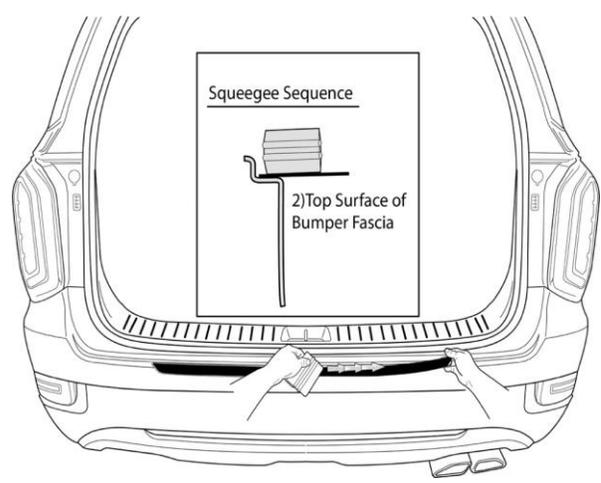
2		Masking Tape
		
N O T E	<p>A. Position Bumper Applique onto bumper aligning the center notch to the hatch striker and along the forward edge of liner paper to fascia edge.</p> <p>B. Using masking tape, tape the left edge of bumper applique to the bumper to maintain alignment.</p>	

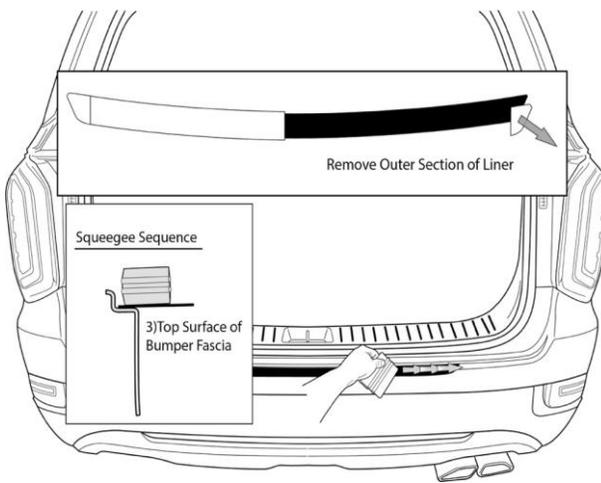
3		
		
N O T E	<p>A. While holding the left side of the bumper applique as shown, flip the right side of the bumper applique as shown and carefully remove the center section of the liner paper.</p> <p>NOTE: Do NOT remove any other section of the liner paper.</p>	

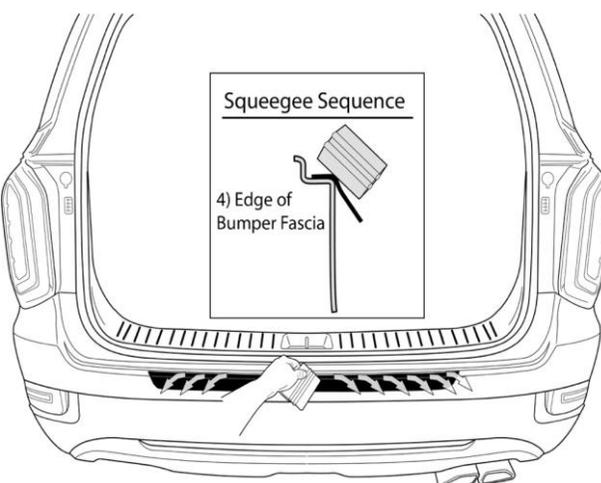
4		Squeegee with Sleeve
		
N O T E	<p>A. Carefully flip the right side of the bumper applique back onto the bumper while maintaining alignment. Squeegee the top center surface of bumper fascia.</p>	

Genuine Accessories

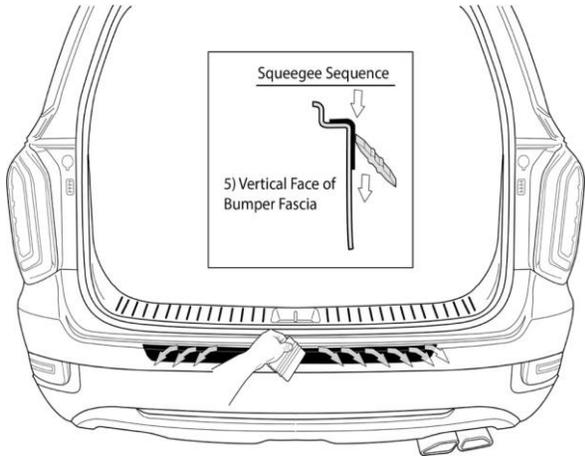
5		
		
N O T E	<p>A. Flip over the right side of the bumper applique, which still has liner paper attached, and remove only that section up to the outer most handling tab. NOTE: Do NOT remove the handling tab liner paper.</p>	
	<p>Make sure the bumper is completely clean and dried.</p>	

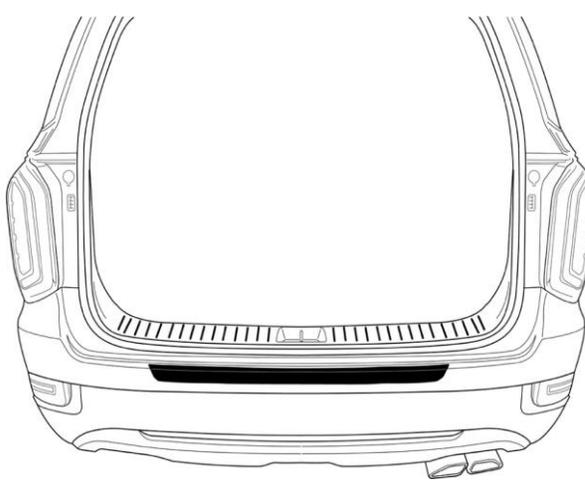
6		Squeegee with Sleeve
		
N O T E	<p>A. While holding the handling tab over the bumper as shown, begin to squeegee the top part of the bumper applique, using firm overlapping strokes, onto the bumper. B. Keep a constant visual alignment of the bumper applique to the fascia edge of the bumper, all the way to the handling tab.</p>	
	<p>Do not pull on the applique too tightly, but do not let it make contact with the bumper until it is squeegeed down. Do not shift the part while squeegeeing.</p>	

7		Squeegee with Sleeve
		
N O T E	<p>A. Remove the handling tab paper liner and squeegee the top edge out to the end of the bumper applique. B. Repeat steps 5-7 for the opposites side of the bumper applique.</p>	
	<p>Do not let the bumper applique fold over and make contact with the vertical edge of the bumper fascia during the squeegee procedure.</p>	

8		Squeegee with Sleeve
		
N O T E	<p>A. Starting at the center of the bumper applique, only squeegee the edges outwards using firm overlapping strokes, as shown.</p>	
	<p>Ensure the bumper applique does not fold over and make contact with the vertical edge of the bumper fascia. This is critical to avoid trapping air and creating bubbles.</p>	

Genuine Accessories

9		Squeegee with Sleeve
		
N O T E	<p>A. Starting at the center of the bumper applique, squeegee the vertical face using firm overlapping strokes, to the bumper.</p> <p>B. See the diagram above for the stroke and direction of the squeegee procedure. This is critical to avoid trapping air and creating bubbles.</p> <p>C. Repeat for the opposite side.</p>	

10		
		
N O T E	<p>A. Inspect the bumper applique for any damage or incorrect installation. Repair or replace as necessary.</p>	

A		
<h1 style="margin: 0;">Inspection Procedure</h1>		
N O T E	<p>Inspect for proper fit, bubbles and debris trapped underneath the Rear Bumper Applique from more than an arm's length.</p> <p>NOTE: Experienced installers may attempt to locally lift up the Rear Bumper Applique and reinstall.</p> <p>* Appropriate tools used for Applique removals are available to customers from specialty retailers.</p>	

Genuine Accessories

Visual Check

Item to be Checked		Result	
	Make sure Bumper Applique is fully adhered.	Bumper Applique is not lifting and is fully adhered. Take special care to make sure all edges are fully adhered.	
	Make sure no air bubbles are trapped under Bumper Applique.	No air bubbles.	
	If an installation error occurs, i.e., scratched / marred Bumper Applique, dirt / debris under Bumper Applique, crooked installation, etc., installer should remove, discard and replace the Bumper Applique.	Bumper Applique is installed correctly.	

Care & Cleaning

Cleaning Instructions for:

Palisade

Applique, Rear Bumper

Wash car with soapy water as needed. (Do not use other chemical based cleaners.)