

# Genuine Accessories



Vehicle Model **Elantra**

Model Year 2017~  
 Part No. F3F46 AC100  
 Language English  
 Rev. Date 9/1/2016

Accessory: **Rear Mudguard Kit**


Difficulty: B

**Note:** Difficulty stated above reflects the minimum level of expertise required to install the accessory:  
 (A) Customer  
 (B) Dealer Technician  
 (C) Master Technician or Specialist

### Instructional Symbols / Definitions

|  |  |                            |  |   |  |
|--|--|----------------------------|--|---|--|
|  | Denotes warnings that may lead to serious physical injury or vehicle damage          |                            | Denotes quality processes to be checked prior to moving to the next step | Denotes personal protective equipment (PPEs) that may be required for a step. Examples of safety equipment icons noted below: |  |
|  | Denotes cautions to be taken to avoid physical injury or electronic component damage |                            | Denotes specific tools that are necessary to complete a step             |   |  |
|  | Denotes cautions to be taken to avoid vehicle and component damage                   | <b>N<br/>O<br/>T<br/>E</b> | Denotes important information to be reviewed during the step             |   |  |

### Basic Required Tools

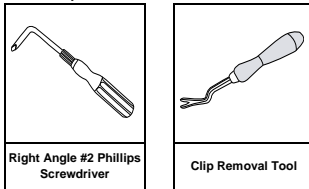


|                            |     |
|----------------------------|-----|
| <b>Part Weight (Gross)</b> |     |
| <b>0.40</b>                | lbs |
| <b>0.18</b>                | kg  |

All dealers must determine if the weight they have added in the form of all options or accessories, when added to the weight of all Port/Dealer Installed options or accessories, exceeds the lesser of 1.5% of GVWR or 100 lbs. If the additional weight does exceed the lesser of the indicated thresholds, a "Load Carrying Capacity Reduced" label must be installed. A black, fine-point, indelible marker must be used to write by hand onto the label, the reduced carrying capacity in kilograms or pounds, which is the total weight of all added options and accessories.

### Notes to the installer:

- 1 Read the entire Installation Instructions prior to beginning the installation of the part.
- 2 Make sure the vehicle is completely clean and dry in the area(s) the part is to be installed.
- 3 Ensure the vehicle is properly protected in the area(s) that the accessory is to be installed.
- 4 NEVER place tools on painted surfaces, seating surfaces, dash pad, console or floor carpet/mats.
- 5 Always wear appropriate personal protective equipment, including gloves, safety glasses, etc., when required.

### Kit Overview

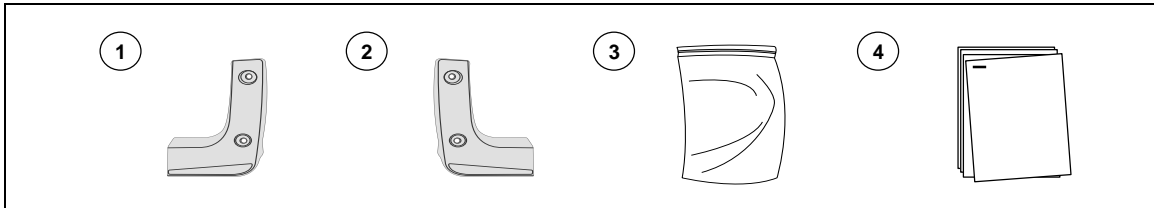


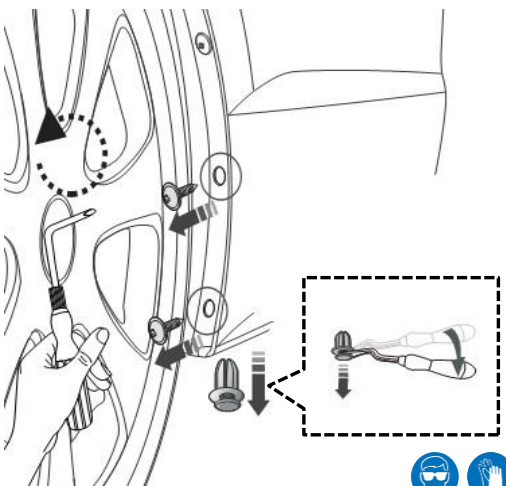

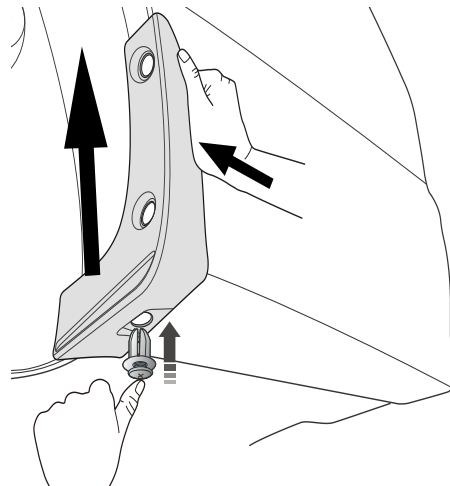

| No. | Qty | Description               |
|-----|-----|---------------------------|
| 1   | 1   | Rear Mudguard (LH)        |
| 2   | 1   | Rear Mudguard (RH)        |
| 3   | 1   | Hardware Bag              |
| 4   | 1   | Installation Instructions |


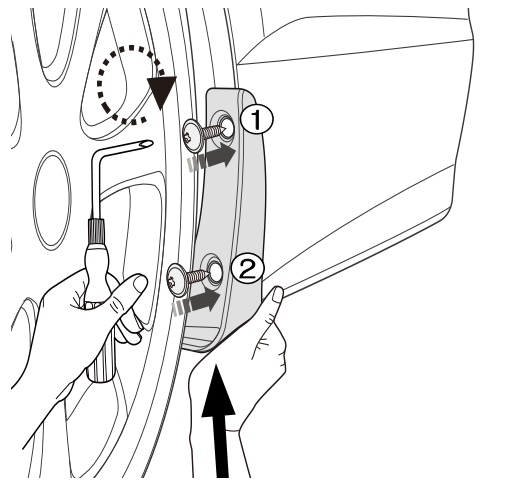

### Hardware Kit Contents



|   |                             |   |                  |
|---|-----------------------------|---|------------------|
| A |                             | B |                  |
| 4 | Self Tapping Screw<br>M6x25 | 2 | Plastic Retainer |

|                |
|----------------|
| Hardware Total |
| 6              |

## Genuine Accessories

|   |   |   |  |
|---|---|---|--|
| 1   |  | Right Angle #2 Phillips Screwdriver and Clip Removal Tool |  |
|    |   |   |  |
| <p><b>N O T E</b></p> <ol style="list-style-type: none"> <li>1. Release the center portion of the plastic retainer and remove the plastic retainer from underneath the rear of the vehicle as shown.</li> <li>2. Remove the two (2) screws from the highlighted area as shown.</li> <li>3. Discard the removed hardware.</li> </ol> |   |   |  |
|   |   |   |  |
| 2   |  |   |  |
|   |   |   |  |
| <p><b>N O T E</b></p> <ol style="list-style-type: none"> <li>1. Align the Rear Mudguard as shown ensuring a proper fit.</li> <li>2. Insert one (1) provided retainer into the hole as shown. Make sure to push in the center portion of the retainer to lock the retainer in place.</li> </ol>                                      |   |   |  |
| <p> Make sure to push the Rear Mudguard upward and in during the installation to eliminate any possible gaps.</p>  |   |   |  |

|  |   |                                     |  |
|--|---|-------------------------------------|--|
| 3  |  | Right Angle #2 Phillips Screwdriver |  |
|    |   |                                     |  |
| <p><b>N O T E</b></p> <ol style="list-style-type: none"> <li>1. While pushing the Rear Mudguard up as shown in the drawing, insert and fasten one (1) provided screw into the upper hole as shown.</li> <li>2. Insert and fasten one (1) provided screw into the lower hole as shown.</li> <li>3. Repeat steps 1-3 for the opposite side.</li> <li>4. Installation is complete.</li> </ol> |   |                                     |  |
| <p> After the installation, check for any visible gaps. If any gap exceeds 0.5mm, loosen the mounting screws and refit the Rear Mudguard to the body to achieve the correct specification. Be careful not to over-tighten or strip the screw head.</p>  |   |                                     |  |

| Visual Check  |  |
|---|--|
|   | Item to be Checked   |
|  | Make sure to push the Rear Mudguard upward and in during the installation to eliminate any possible gaps.  |
|  | After the installation, check for any visible gaps. If any gap exceeds 0.5mm, loosen the mounting screws and refit the Rear Mudguard to the body to achieve the correct specification. |

|   | Result |
|---|--------|
| Any visible gaps should not exceed 0.5mm. |        |
| Any visible gaps should not exceed 0.5mm. |        |